Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Amazon Basics 111608OG860-4

Amazon Basics Hard Anodized Non-Stick 12-Piece Cookware Set Instruction Manual

Model: 111608OG860-4

Introduction

Thank you for choosing the Amazon Basics Hard Anodized Non-Stick 12-Piece Cookware Set. This manual provides essential information for the proper use, care, and maintenance of your new cookware. Please read it thoroughly before first use to ensure optimal performance and longevity of your product.

What's Included

Your Amazon Basics 12-Piece Cookware Set includes the following components:

- 5.5 inch, 1.1 quart saucepan with lid
- 6.3 inch, 1.5 quart saucepan with lid
- 7 inch, 3 quart saucepan with lid
- 9.5 inch, 5 quart casserole with lid
- 8 inch skillet
- 10 inch skillet
- Slotted spatula
- Solid spoon

This comprehensive set provides all the essential pieces for a well-equipped kitchen.



Image: The complete 12-piece Amazon Basics Hard Anodized Non-Stick Cookware Set.

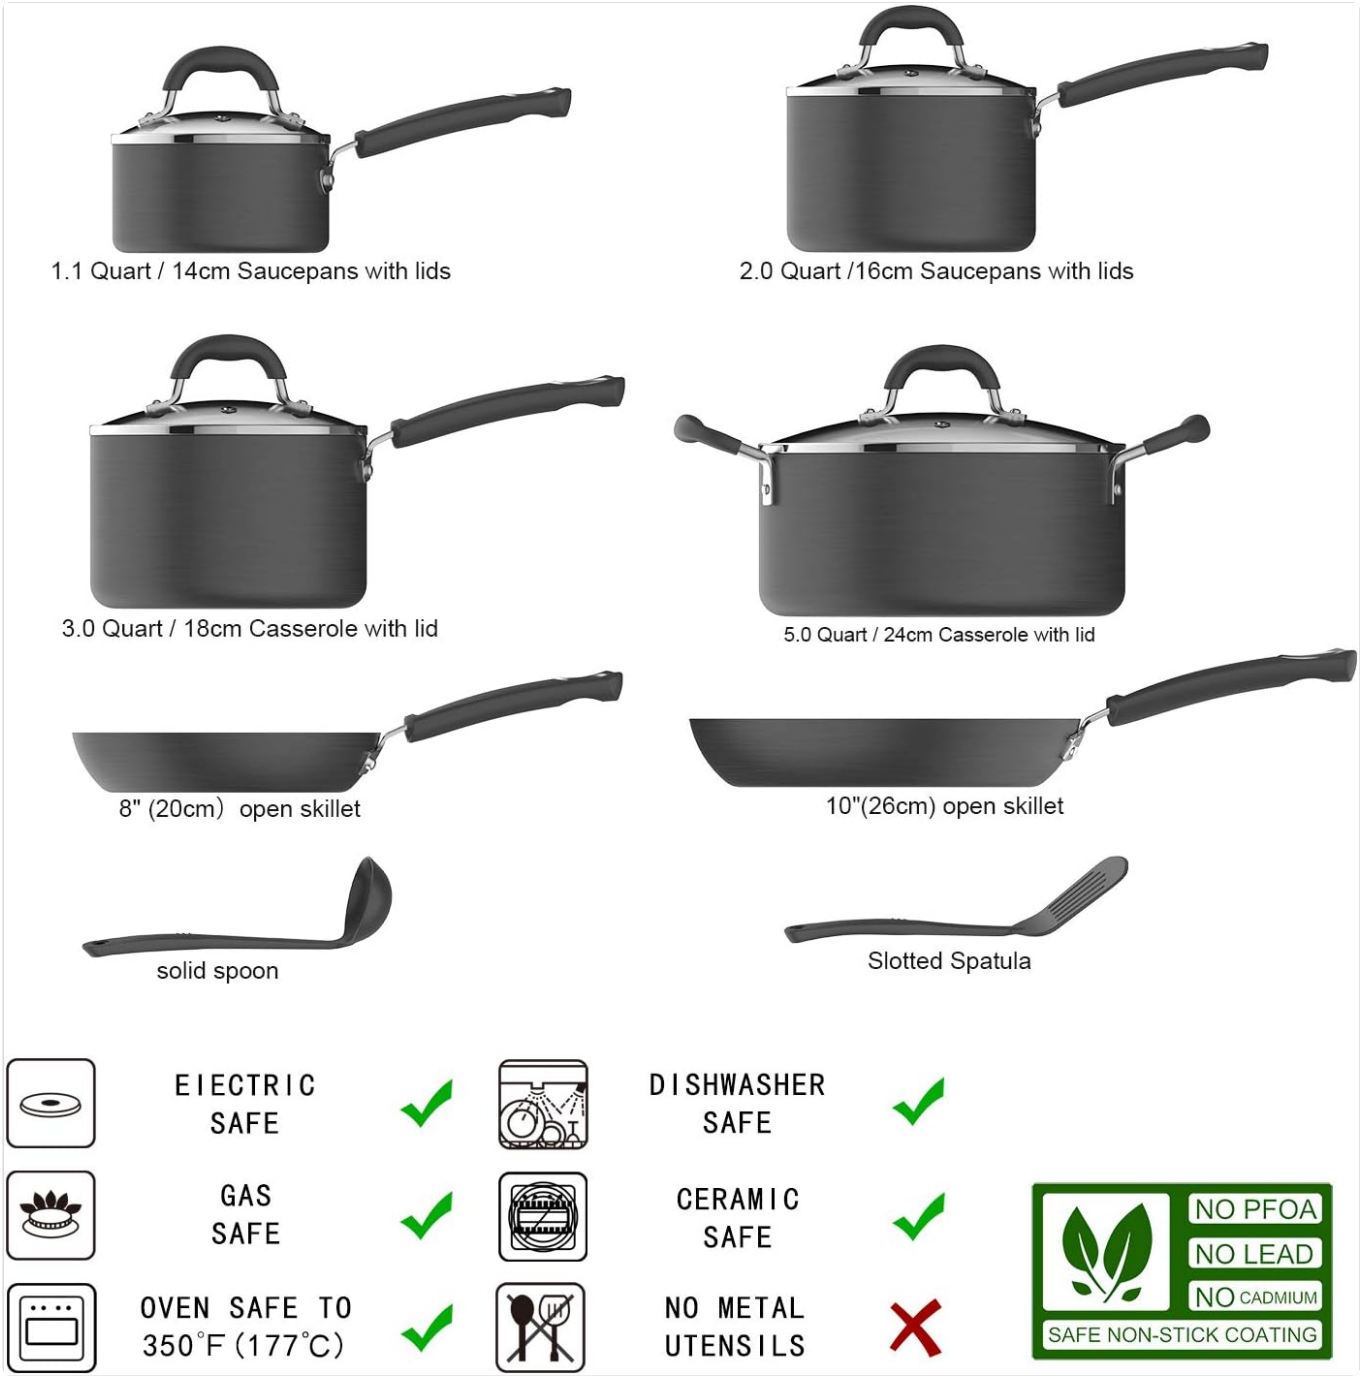

Image: Detailed view of each cookware piece, including saucepans, casserole, skillets, and utensils, with their respective dimensions and capacities.

Setup

Follow these steps before using your new cookware for the first time:

1. **Unpacking:** Carefully remove all cookware pieces and accessories from the packaging. Inspect each item for any signs of damage. Retain packaging for future storage or transport if needed.
2. **Initial Cleaning:** Before first use, wash all cookware pieces and lids thoroughly with warm, soapy water. Rinse well and dry completely with a soft cloth. This step is crucial to remove any manufacturing residues or dust.
3. **Seasoning (Optional for Non-Stick):** While not strictly necessary for non-stick cookware, a light seasoning can enhance durability and non-stick performance. Apply a thin layer of cooking oil (e.g., vegetable or canola oil) to the non-stick interior with a paper towel. Heat the pan over low heat for 30 seconds, then let it cool completely. Wipe off any excess oil.

Operating Instructions

General Cooking Guidelines:

- **Heat Settings:** Use low to medium heat for most cooking. The hard-anodized aluminum body provides excellent heat conduction, making high heat unnecessary. Excessive high heat can damage the non-stick coating and may cause food to stick over time.
- **Oil/Butter Use:** A small amount of cooking oil or butter is recommended to enhance flavor and promote even cooking, even with the non-stick surface.
- **Utensils:** Always use wooden, silicone, or heat-resistant plastic utensils to protect the non-stick coating. Avoid metal utensils, as they can scratch and damage the surface, compromising its non-stick properties.
- **Lids:** Use the tempered glass lids to retain heat and moisture, allowing for more efficient cooking and faster heating times.
- **Oven Safety:** This cookware is oven safe up to 177°C (350°F). Ensure handles are cool to touch before handling without protection.
- **Stovetop Compatibility:** Suitable for all stovetops except induction.

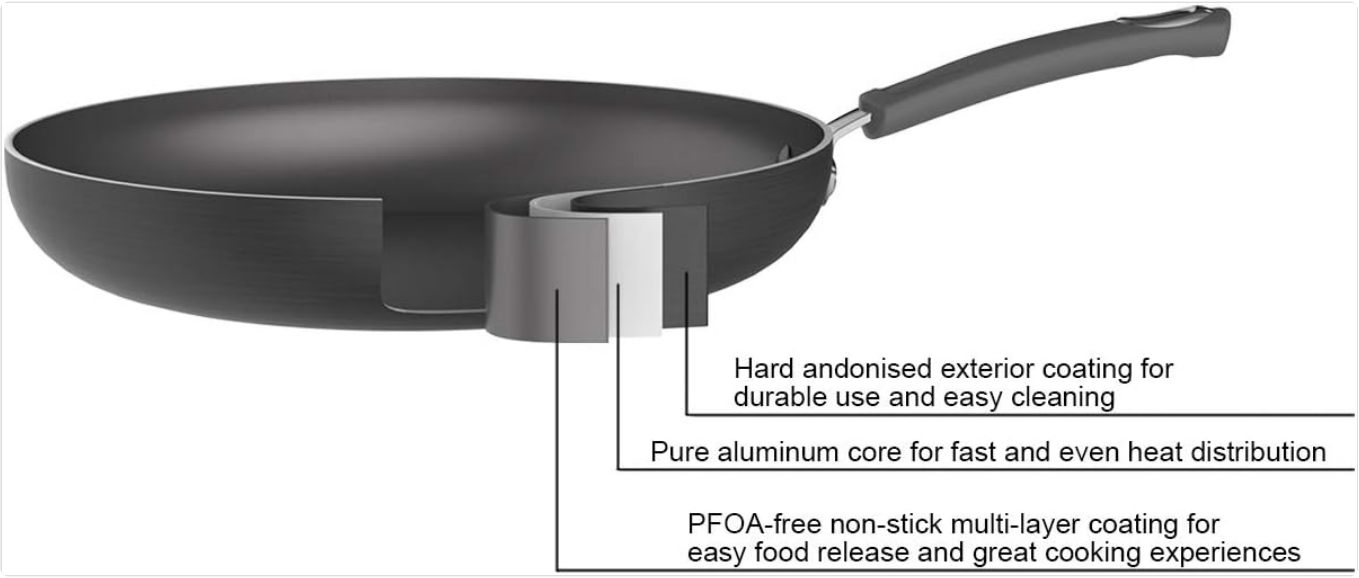

Image: Illustration of the cookware's construction, highlighting the durable hard-anodized exterior, pure aluminum core for even heat, and PFOA-free non-stick coating.



Image: Detail of the soft, stay-cool silicone handle, designed for comfortable and secure grip.

Maintenance & Care

Proper care will extend the life and performance of your cookware:

- **Cool Down:** Always allow cookware to cool completely before washing. Rapid temperature changes can cause

warping or damage to the non-stick coating.

- **Cleaning:** The cookware is dishwasher safe for convenience. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Avoid harsh detergents, steel wool, or abrasive cleaners that can scratch and damage the non-stick surface.
- **Stubborn Food:** For stuck-on food, fill the pan with warm water and a small amount of dish soap, then let it soak for 15-20 minutes. This will loosen food particles, making them easier to remove without scrubbing.
- **Storage:** Store cookware carefully to prevent scratching the non-stick surface. Placing paper towels or soft cloths between stacked pans can help protect them from abrasion.
- **Handle Care:** The soft silicone handles are designed to stay cool to the touch during stovetop use. However, always use oven mitts or pot holders when handling hot cookware, especially after oven use, as the metal parts of the handles can become hot.



Image: The included non-stick friendly utensils (slotted spatula and solid spoon) that should be used to preserve the cookware's surface.

Troubleshooting

- **Food Sticking:** If food begins to stick, ensure you are using appropriate heat settings (low to medium). Overheating is a common cause of non-stick degradation. Also, verify that a small amount of cooking oil or butter is used, as this aids in food release.
- **Scratches on Non-Stick:** Scratches are almost always caused by using metal utensils. To prevent this, consistently use only wooden, silicone, or plastic utensils.
- **Warping:** Pan warping typically results from sudden and extreme temperature changes. Always allow hot cookware to cool naturally on a heat-resistant surface before washing or placing it in cold water.
- **Discoloration:** Minor discoloration on the exterior or interior can occur over time with regular use, especially with exposure to high heat. This is normal and does not typically affect the cookware's performance or safety.

Specifications

Feature	Detail
Brand	Amazon Basics
Model Number	111608OG860-4
Material	Hard Anodized Aluminum (body), Tempered Glass (lids), Silicone, Stainless Steel (handles)
Color	Black
Number of Pieces	12
Oven Safe Temperature	Up to 177°C (350°F)
Dishwasher Safe	Yes
Stovetop Compatibility	All types except induction
Included Components	5.5"/1.1qt, 6.3"/1.5qt, 7"/3qt saucepans with lids; 9.5"/5qt casserole with lid; 8" & 10" frying pans; slotted spatula, solid spoon
Product Dimensions	22.45 x 14.77 x 10.63 inches
Item Weight	12.57 pounds (5.71 kg)

Warranty & Support

For detailed warranty information regarding your Amazon Basics Hard Anodized Non-Stick 12-Piece Cookware Set, please refer to the official Warranty Document (PDF).
For further assistance, product support, or to inquire about replacement parts, please visit theAmazon Basics Store or contact Amazon customer service directly through their website or support channels.

© 2025 Amazon Basics. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07Y5BDJV1

More documents and user manuals: **https://manuals.plus/**