Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Zokop Backpacking & Camping Stoves 004

Zokop Portable Camp Stove

User Manual

Introduction

Thank you for choosing the Zokop Portable Camp Stove. This high-pressure single burner stove is designed for efficient outdoor cooking, featuring a robust cast iron construction and a powerful 75,000 BTU output. Its ultra-portable design with removable legs makes it ideal for camping, fishing, parties, tailgates, hunting, and home brewing. This manual provides essential information for safe assembly, operation, and maintenance of your stove.

Safety Information

WARNING: For outdoor use only. Do not operate this appliance indoors. Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Read the installation, operating, and maintenance instructions thoroughly before installing or servicing this equipment.

General Safety Precautions:

- Always operate the stove on a level, stable, non-combustible surface.
- Keep children and pets away from the stove during operation.
- Maintain a safe distance from combustible materials (e.g., tents, dry leaves, clothing).
- Ensure adequate ventilation.
- Do not leave the operating stove unattended.
- Never use gasoline, kerosene, or other highly volatile fuels in this stove. Use only propane gas.
- Check all gas connections for leaks using a soapy water solution before each use. Never use a flame to check for leaks.
- Allow the stove to cool completely before handling or storing.

Package Contents

Please verify that all components are present before assembly:

- 1 x Single Burner Stove Unit
- 1 x 0-20 Psi Regulator
- 1 x 1.2m Leather Tube (Hose)
- 8 x Detachable Leg Sections



This image displays all the components included with the Zokop Portable Camp Stove: the main burner unit, eight leg sections, a propane regulator, and a hose.

Setup and Assembly

Follow these steps to assemble your Zokop Portable Camp Stove:


1. **Attach the Legs:** Insert the four upper leg sections into the corresponding sockets on the underside of the stove unit. Then, insert the four lower leg sections into the upper leg sections. Ensure all leg sections are securely seated. The legs are fully removable for compact storage and transport.
2. **Connect the Regulator and Hose:** Attach the 0-20 PSI regulator to the propane tank (not included). Connect the other end of the 1.2m hose to the gas inlet on the stove unit. Hand-tighten all connections securely.
3. **Check for Leaks:** Before first use and after every tank change, perform a leak test. Mix a solution of soapy water (50% soap, 50% water). With the propane tank valve open and the stove's control knob in the 'OFF' position, apply the soapy solution to all gas connections. If bubbles appear, there is a leak. Tighten the connection and retest. If the leak persists, do not use the stove and contact customer support.



This image shows the Zokop Portable Camp Stove fully assembled with its four detachable legs and the control knob visible on the front.



This image shows the assembled camp stove with the propane hose and regulator connected. Smaller inset images demonstrate its versatility with a griddle, frying pan, and grill plate.

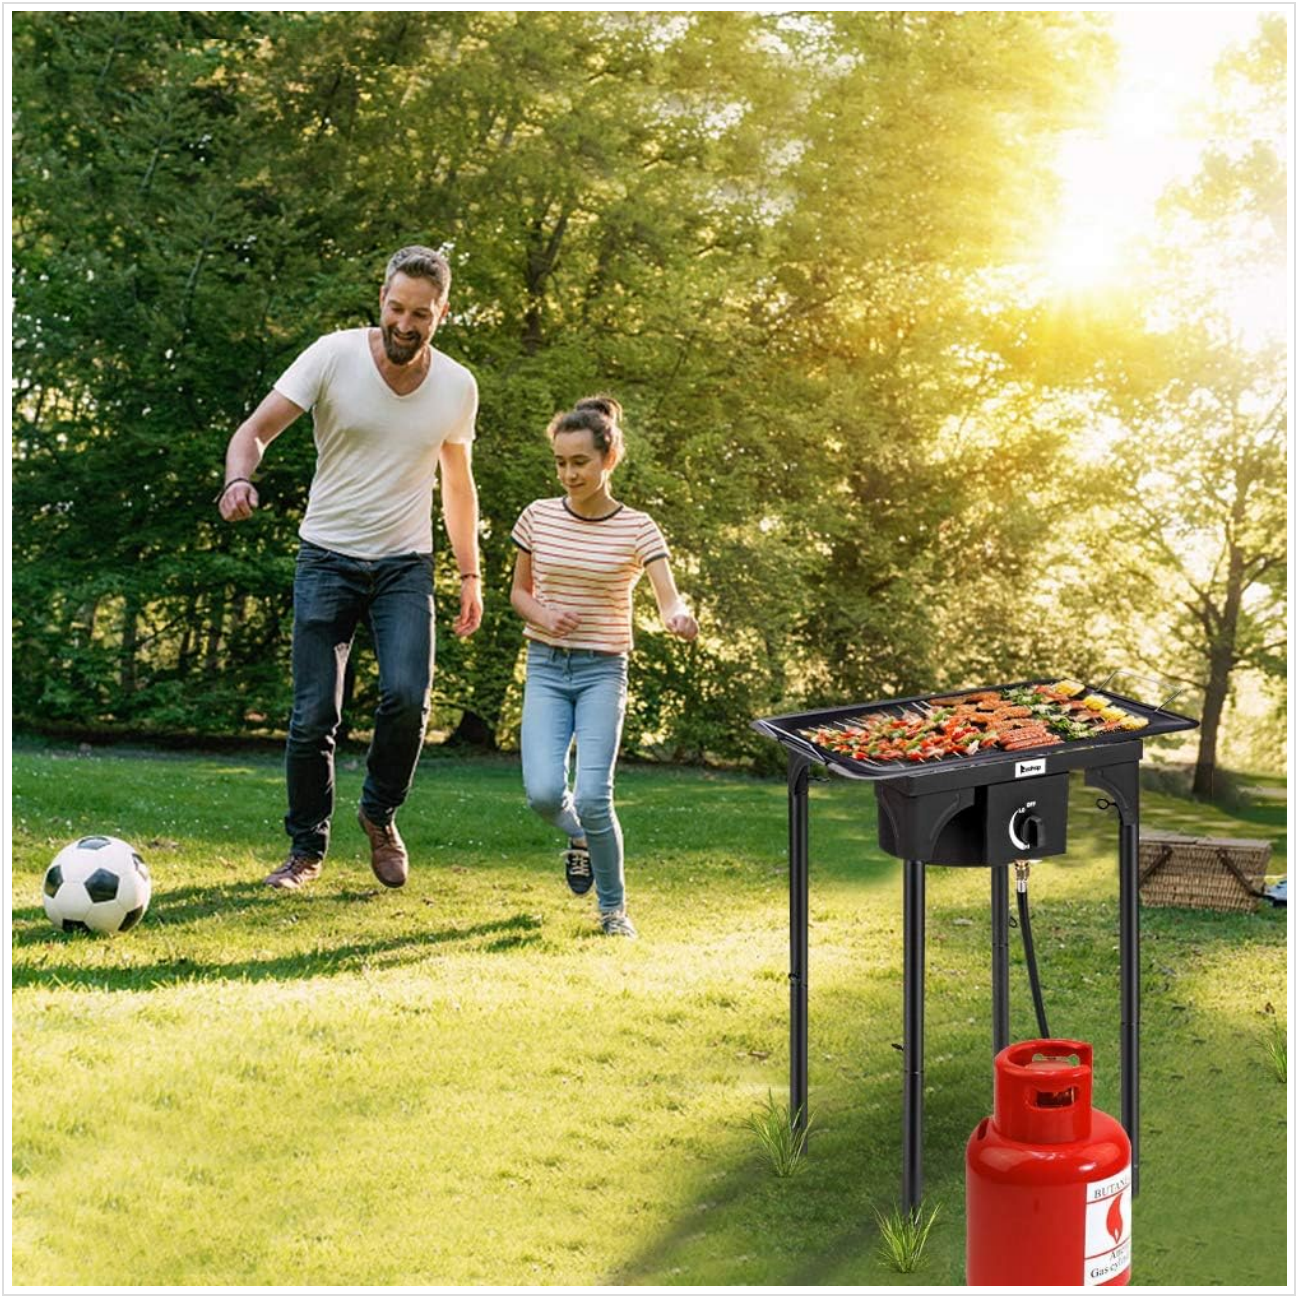

This image illustrates how the legs of the camp stove can be detached from the main unit, making it compact for convenient transport and storage.


Operating Instructions

Lighting the Burner:

1. Ensure the stove is on a stable, level surface and all connections are secure.
2. Open the valve on your propane tank slowly.
3. Turn the control knob on the stove to the 'HI' position.
4. Immediately apply a long lighter or match to the burner head to ignite the gas. If the burner does not light within 5 seconds, turn the control knob to 'OFF', wait 5 minutes for gas to dissipate, and repeat the process.

Adjusting Flame:

- Once lit, you can adjust the flame intensity by rotating the control knob between 'LO' and 'HI' settings. The 0-20 PSI adjustable regulator allows for precise heat control.
- The air control valve, located beneath the burner, can be adjusted to optimize the air-fuel mixture for a clean, blue flame.

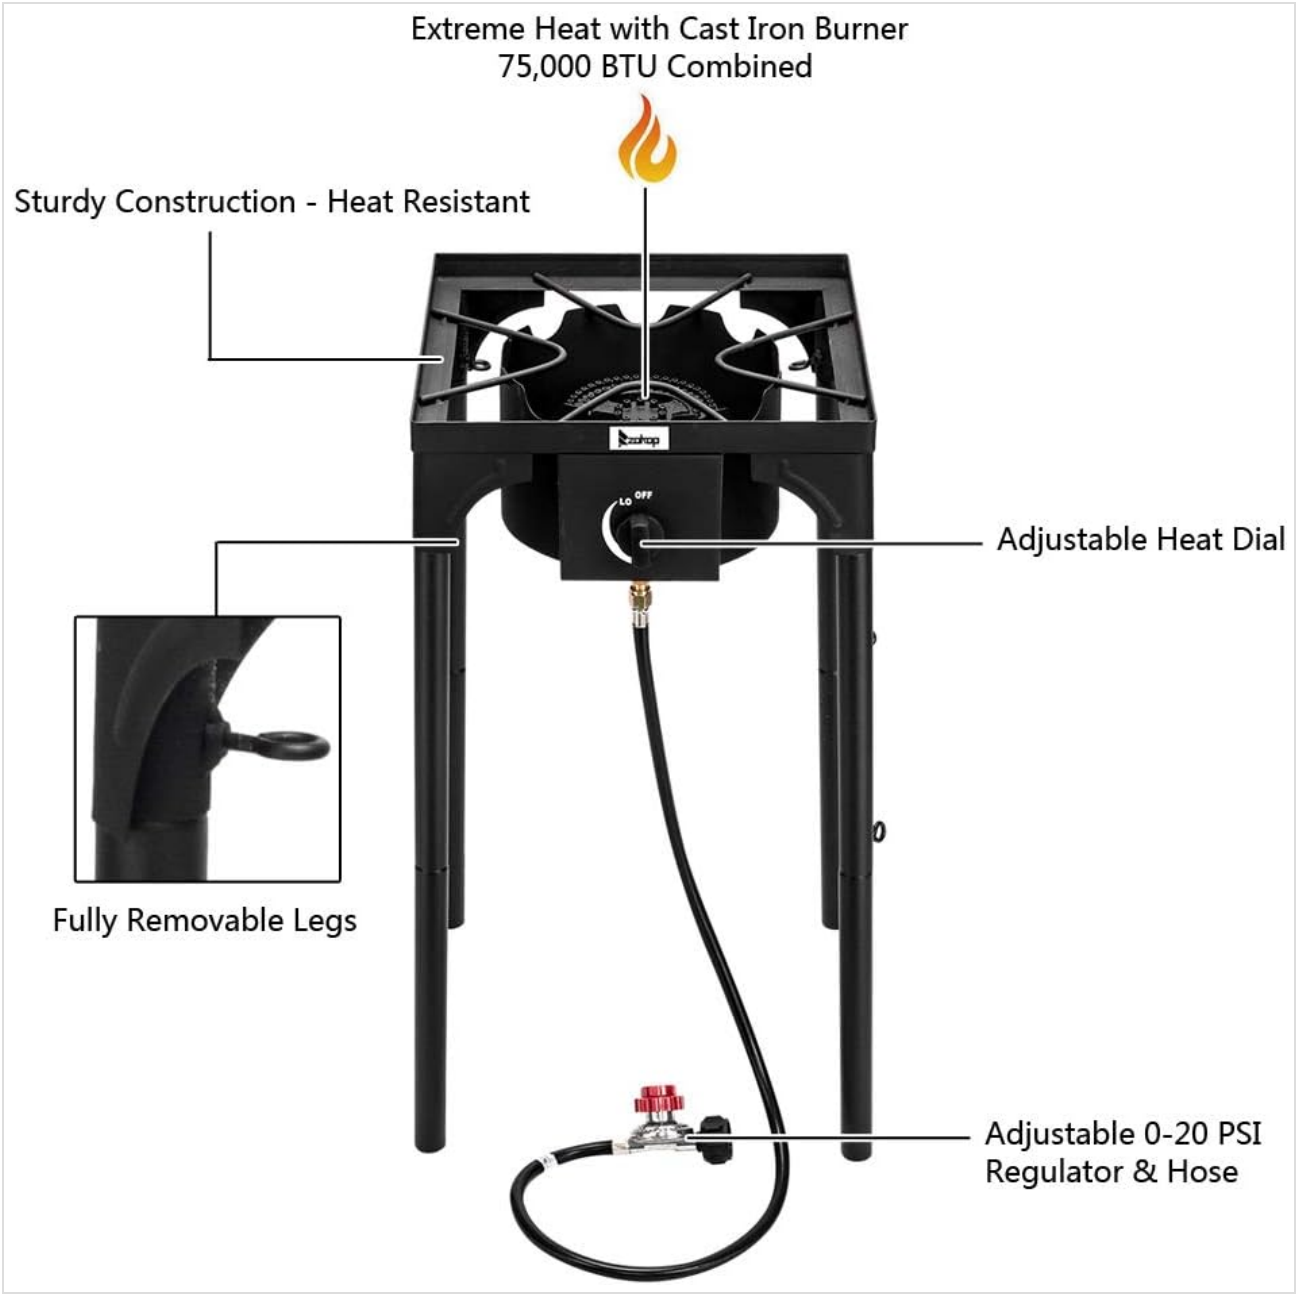

This diagram points out key features of the stove, including the 75,000 BTU cast iron burner, the adjustable heat dial, fully removable legs, and the 0-20 PSI adjustable regulator and hose.



A detailed view of the air control valve located beneath the burner, indicated by an arrow, which helps regulate the air-fuel mixture for optimal combustion.

Turning Off the Stove:

1. Turn the control knob on the stove to the 'OFF' position.
2. Close the valve on the propane tank.
3. Allow the stove to cool completely before moving or storing.

Maintenance

Proper maintenance ensures the longevity and safe operation of your stove.

- **Cleaning:** After each use, allow the stove to cool. Wipe down the burner and frame with a damp cloth to remove any food residue or grease. For stubborn stains, use a mild soap solution. Do not use abrasive cleaners or steel wool, as they can damage the finish.
- **Storage:** Ensure the stove is completely cool and clean before storing. Detach the legs for compact storage. Store the stove in a dry, protected area away from direct sunlight and extreme temperatures. Disconnect the propane tank and store it separately in a well-ventilated area.
- **Inspection:** Periodically inspect the hose and regulator for any signs of wear, cracks, or damage. If any damage is found, replace the component immediately with an approved part.

Troubleshooting

If you encounter issues with your stove, refer to the following common troubleshooting tips:

- **Burner Not Lighting:**
  - Ensure the propane tank valve is fully open.
  - Check for sufficient propane in the tank.
  - Verify all gas connections are tight and free of leaks.
  - Ensure the control knob is turned to 'HI' when attempting to light.
- **Low Flame or Inconsistent Flame:**
  - Check propane tank level.
  - Ensure the regulator is properly connected and not obstructed.
  - Adjust the air control valve for optimal air-fuel mixture.
  - Clean the burner ports if they appear clogged.
- **Gas Odor:**
  - Immediately turn off the stove and propane tank.
  - Perform a leak test with soapy water.
  - If the odor persists or a leak is detected, do not use the stove. Move to a well-ventilated area and contact emergency services if necessary.

Specifications

Feature	Specification
Product Type	Single Burner Camp Stove
Brand	Zokop
Model Number	Backpacking & Camping Stoves 004
Material	Cast Iron
Color	Black
Maximum Energy Output	75,000 BTU
Fuel Type	Liquefied Petroleum Gas (Propane)
Regulator	0-20 PSI Adjustable
Hose Length	1.2m (Included)
Burner Diameter	10.24" (26cm)
Furnace Head Diameter	5.51" (14cm)
Product Dimensions (L x W x H)	15.75" x 15.75" x 29.92" (40 x 40 x 76 cm)
UPC	791342595582



A diagram illustrating the dimensions of the assembled camp stove: 15.7 inches in length and width, and 29.9 inches in height.

Warranty and Support

For information regarding product warranty, please refer to the documentation provided at the time of purchase or contact the retailer where the product was acquired. For technical support or inquiries, please contact Zokop customer service through their official website or the contact information provided with your product packaging.

© 2023 Zokop. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07Y9PSX8K

More documents and user manuals: **https://manuals.plus/**