Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Frigidaire FFEH2422UW

Frigidaire FFEH2422UW 24-inch 1.9 Cu. Ft. Electric Range Instruction Manual

Model: FFEH2422UW

Important Safety Instructions

Read all instructions thoroughly before using this appliance to prevent potential hazards and ensure proper operation. Keep this manual for future reference.

- **Electrical Safety:** Ensure the range is properly grounded and connected to a 240 Volt electrical supply by a qualified technician. Do not use extension cords.
- **Fire Hazard:** Never leave the range unattended during operation. Keep flammable materials away from the appliance. Clean grease build-up regularly.
- **Child Safety:** Do not allow children to play with or near the range. Always supervise children when the appliance is in use.
- **Burn Prevention:** Use oven mitts when handling hot items. Do not touch hot surfaces during or immediately after use.
- **Proper Use:** Use the range only for its intended purpose of cooking food. Do not use it to heat a room or for storage of flammable items.

Product Overview

The Frigidaire FFEH2422UW is a compact 24-inch electric range, offering a 1.9 cubic foot oven and a four-element coil cooktop. It is designed for efficient cooking in smaller kitchen spaces while meeting ADA compliance standards.



Image: Front view of the Frigidaire FFEH2422UW 24-inch Electric Range in white, showcasing the cooktop, control panel, oven door,

and storage drawer.

Setup and Installation

This appliance is designed for freestanding installation. Proper placement and electrical connection are crucial for safe and optimal performance.

Dimensions and Placement

Ensure adequate clearance around the range as specified in the detailed installation guide. The compact design allows for integration into various kitchen layouts.



Image: Diagram illustrating the width (23 1/2 inches), depth (23 5/8 inches), and height (35 7/8 inches) of the Frigidaire FFEH2422UW Electric Range.

Electrical Requirements

The range requires a dedicated 240 Volt electrical circuit. Consult a certified electrician for proper wiring and connection to meet local codes and safety standards.

Operating Instructions

Cooktop Operation

The cooktop features four coil heating elements, each controlled by a dedicated knob on the control panel.

- **Right Front Element:** 8-inch diameter, 2,400 Watts
- **Right Rear Element:** 6-inch diameter, 1,500 Watts
- **Left Front Element:** 6-inch diameter, 1,500 Watts
- **Left Rear Element:** 8-inch diameter, 2,400 Watts

Turn the corresponding control knob to the desired heat setting. A hot-surface indicator light will illuminate when any cooktop element is hot, even after it has been turned off.

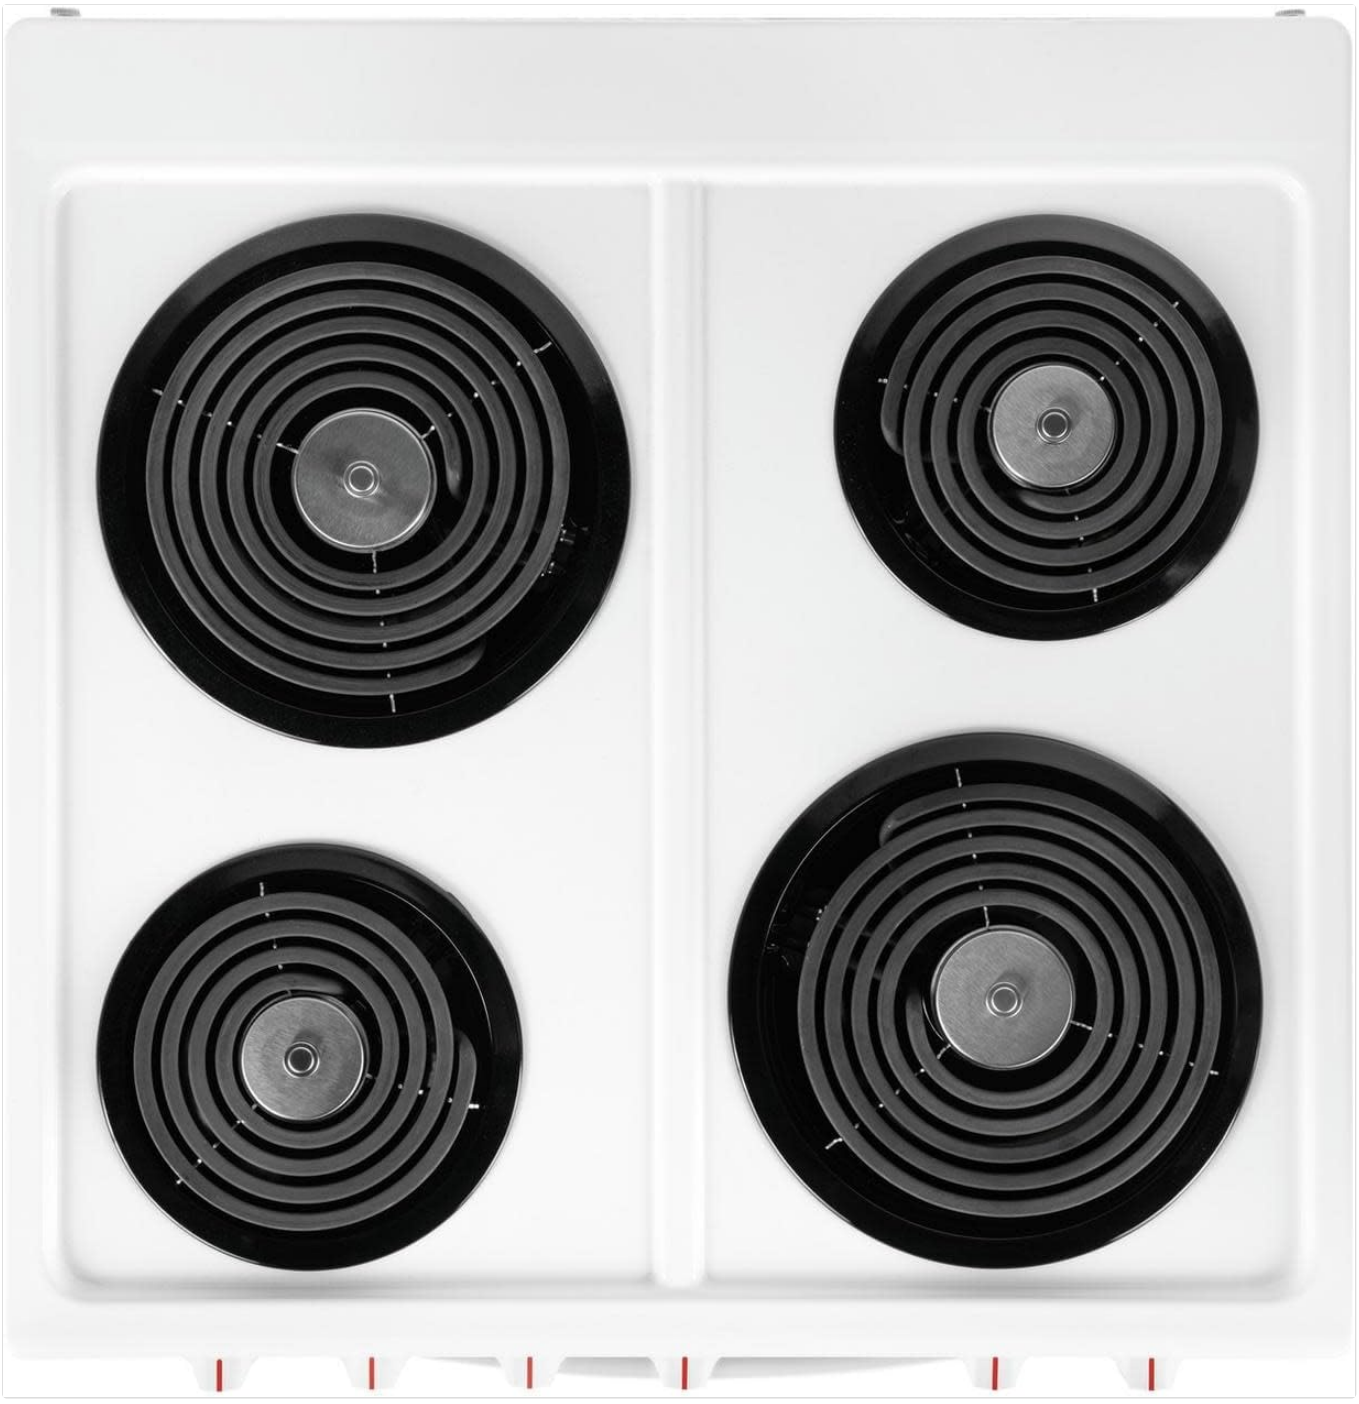

Image: Top view of the Frigidaire FFEH2422UW cooktop, displaying the four electric coil heating elements.

Oven Operation

The oven provides 1.9 cubic feet of cooking space and includes two oven racks that can be placed in three different positions.

- **Setting Temperature:** Use the 'Oven Temp' knob to select the desired baking temperature.
- **Selecting Mode:** Use the 'Oven Mode' knob to choose between various cooking functions (e.g., Bake, Broil).
- **Hidden Bake Element:** The hidden bake element at the bottom of the oven cavity facilitates easier cleaning.



Image: Close-up of the Frigidaire FFEH2422UW control panel, featuring color-coordinated knobs for cooktop and oven controls, along with a digital timer display.

Storage Drawer

A convenient storage drawer is located beneath the oven, providing additional space for storing cookware, baking sheets, or other kitchen essentials.

Maintenance and Cleaning

Regular maintenance and cleaning will ensure the longevity and optimal performance of your Frigidaire electric range.

- **Cooktop Cleaning:** Allow all coil elements and drip pans to cool completely before cleaning. Remove drip pans and clean with warm, soapy water. Wipe elements with a damp cloth.
- **Oven Interior:** The hidden bake element design simplifies cleaning the oven bottom. For general cleaning, wipe the interior with a damp cloth and mild detergent after the oven has cooled. Avoid abrasive cleaners.
- **Exterior Surfaces:** Clean the exterior of the range with a soft cloth and mild, non-abrasive cleaner. For white finishes, ensure cleaners are suitable for painted surfaces.
- **Control Knobs:** Pull off the control knobs for easier cleaning. Wash with warm, soapy water and dry thoroughly before replacing.

Troubleshooting

If you experience issues with your range, consult the following common troubleshooting steps. For problems not listed or if issues persist, contact customer support.

- **Range Does Not Operate:** Check if the range is properly plugged into the electrical outlet. Verify that the circuit breaker has not tripped.

- **Cooktop Element Not Heating:** Ensure the control knob is set correctly for the desired heat level. Check if the element is properly seated in its receptacle.
- **Oven Not Heating:** Confirm the oven temperature and mode knobs are set correctly. Allow sufficient preheating time.
- **Uneven Cooking:** Ensure oven racks are positioned correctly and that cookware does not block air circulation. Avoid opening the oven door frequently during cooking.

Specifications

Key technical specifications for the Frigidaire FFEH2422UW Electric Range.

Feature	Detail
Model	FFEH2422UW
Brand	Frigidaire
Type	Electric Range
Installation Type	Freestanding
Oven Capacity	1.9 Cubic Feet
Dimensions (W x D x H)	23.5 x 23.63 x 35 inches
Item Weight	123.5 pounds
Voltage	240 Volts
Heating Elements	4 Coil
Control Console	Knob
Special Features	ADA Compliant, Hidden Bake, Storage Drawer, UL Listed
Color	White

Warranty and Support

For detailed warranty information, technical assistance, or to schedule service, please contact Frigidaire customer support. Ensure you have your model number (FFEH2422UW) and proof of purchase readily available when contacting support. You can find additional resources and contact information on the official Frigidaire website: www.frigidaire.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B081VW3ZL9

More documents and user manuals: **https://manuals.plus/**