Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun 310BT

Braun Series 3 310BT 3-in-1 Electric Shaver User Manual

Model: 310BT

Introduction

This manual provides comprehensive instructions for the safe and effective use of your Braun Series 3 310BT 3-in-1 Electric Shaver. This versatile device is designed for shaving, trimming, and edging, offering both wet and dry operation. Please read these instructions carefully before first use and retain them for future reference.

Product Overview and Components

Your Braun Series 3 310BT comes with several components to facilitate various grooming needs.

- Series 3 Shaver (main unit)
- Trimmer head
- Combs: 1, 2 mm
- Combs: 3, 5, 7 mm
- Protection cap
- SmartPlug (charger)
- Cleaning brush



Image 1: The Braun Series 3 310BT electric shaver, accompanied by its trimmer head, various comb attachments (1mm, 2mm, 3mm, 5mm, 7mm), a protective cap, the SmartPlug charger, and a cleaning brush. This image displays all included components.

Setup

1. Initial Charging

Before first use, fully charge the shaver for approximately 1 hour. A full charge provides up to 30 minutes of shaving and trimming time. A 5-minute quick charge is available for a single shave when time is limited.

1. Connect the SmartPlug to the shaver and then to a power outlet.
2. The charging indicator light will illuminate.
3. Once fully charged, disconnect the shaver from the power supply.

2. Attaching Accessories

The shaver features an exchangeable head system.

1. To attach the trimmer head, ensure the shaver is turned off.
2. Gently pull off the shaving foil head.
3. Align the trimmer head with the shaver body and press it firmly into place until it clicks.
4. To attach a comb, slide it onto the trimmer head until it locks securely.

Operating Instructions

The Braun Series 3 310BT can be used wirelessly for both wet and dry applications.

1. Shaving

For a clean shave, use the standard shaving foil head.

- **Dry Shave:** Ensure your skin is dry before shaving. Hold the shaver at a right angle (90°) to your skin and shave against the direction of hair growth.
- **Wet Shave:** Apply shaving foam or gel to your face. The shaver is fully waterproof and can be used in the shower. Rinse the shaver head under running water during and after use.





Image 2: A detailed view of the Braun Series 3 shaver head, highlighting its three pressure-sensitive shaving elements designed for efficiency and skin comfort. This image illustrates the primary shaving component.

2. Trimming and Edging

Attach the trimmer head for beard styling and precise edging.

- **Even Trim:** Select one of the five comb attachments (1mm, 2mm, 3mm, 5mm, 7mm) to achieve your desired beard length. Move the trimmer against the direction of hair growth for an even trim.
- **Accurate Edging:** Remove the comb attachment for precise lines and shaping around your beard, mustache, or sideburns. Use the trimmer without a comb for sharp edges.



Image 3: The Braun Series 3 shaver equipped with its trimmer head and a comb attachment. This image demonstrates the device configured for beard trimming, showcasing its versatility beyond just shaving.

Maintenance

Regular cleaning ensures optimal performance and hygiene.

1. Cleaning

- **After Each Use:** Turn off the shaver. Remove the shaving foil head or trimmer head. Rinse the head and the shaver body under warm running water.
- For a more thorough clean, use the included cleaning brush to remove any trapped hairs. Do not use the brush on the shaving foil itself, as this can damage it.
- Allow all parts to air dry completely before reassembling or storing.

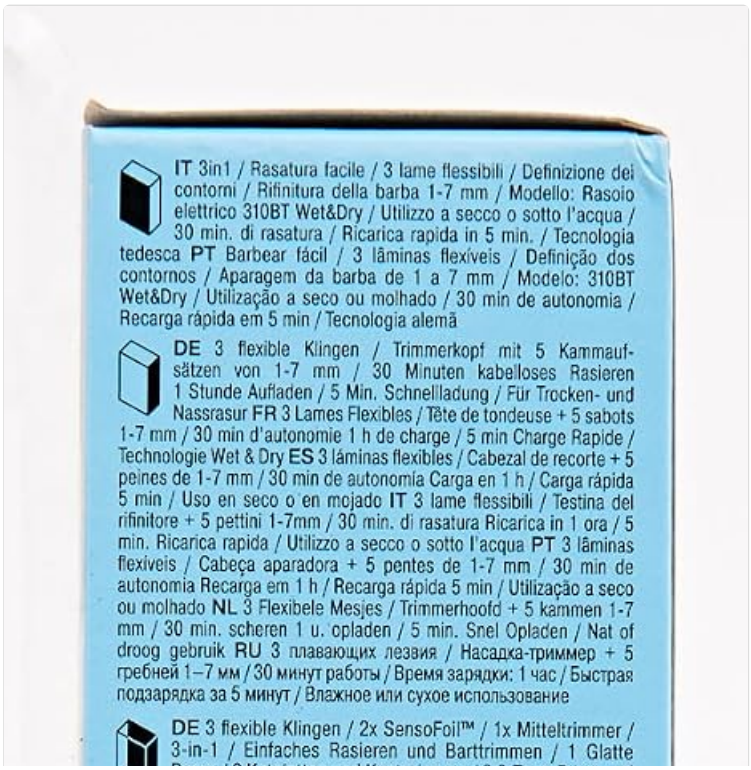




Image 4: The Braun Series 3 shaver being rinsed under running water, demonstrating its waterproof design and ease of cleaning. This image highlights the wet cleaning capability of the device.

2. Blade and Foil Replacement

For continued optimal shaving performance, it is recommended to replace the shaving foil and cutter block every 18 months, or when they show signs of wear. Replacement parts can be purchased from authorized Braun retailers.

Troubleshooting

If you encounter issues with your shaver, refer to the following common problems and solutions:

- **Shaver not turning on:** Ensure the shaver is fully charged. If the battery is completely depleted, it may take a few minutes of charging before the shaver can be turned on.
- **Poor shaving performance:** Clean the shaver head thoroughly. Ensure the shaving foil and cutter block are not damaged or worn out; replace if necessary. Shave against the direction of hair growth.
- **Charging indicator not working:** Check if the SmartPlug is correctly connected to both the shaver and the power outlet. Ensure the power outlet is functional.

If problems persist, contact Braun customer service for assistance.

Specifications

Model Name	Braun Series 3 310BT
Item Model Number	81702943
Power Source	Battery Powered (Rechargeable NiMH)
Battery Life	Up to 30 minutes (shaving/trimming)
Charging Time	1 hour for full charge, 5 minutes for quick charge
Special Features	Cordless, Wet & Dry Use, 3-Flex Head, Precision Trimmer Head, 5 Comb Attachments (1-7mm)
Product Dimensions	11.1 x 5.6 x 20.3 cm
Item Weight	364 g (12.84 Ounces)
Blade Material	Stainless Steel



Image 5: Side view of the Braun Series 3 310BT packaging, highlighting key features such as 3 flexible blades, trimmer head with 5 combs (1-7mm), 30 minutes shaving time, 1 hour charge time, 5 minutes quick charge, and wet or dry use capability.

Warranty and Support

Braun products are manufactured to high quality standards. This product is covered by a manufacturer's warranty. For detailed warranty information, service, or support, please refer to the warranty card included in your product packaging or visit the official Braun website. Please have your model number (310BT) and item model number (81702943) ready when contacting support.



Image 6: Side view of the Braun Series 3 310BT packaging, displaying legal information, manufacturer details (Procter & Gamble), and contact information for various regions. This section also includes the UPC: 4210201276425.

© 2024 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0822YX7VY

More documents and user manuals: **https://manuals.plus/**