Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

EZ-FIT FIREPLACE DOORS BC36, BC36I, BR36, BR36I, BBV36, HC36, RD36

EZ-FIT FIREPLACE DOORS Superior Fireplace Replacement Doors

User Manual for Models BC36, BC36I, BR36, BR36I, BBV36, HC36, RD36

Introduction

This manual provides essential information for the proper installation, operation, and maintenance of your EZ-FIT FIREPLACE DOORS Superior Fireplace Replacement Doors. These doors are designed for specific Superior fireplace models and are proudly made in the USA. Please read all instructions carefully before proceeding.

Important Safety Notice: Fireplace doors must always be kept fully open while a fire is burning to ensure proper ventilation and prevent heat buildup.



Image: EZ-FIT FIREPLACE DOORS Superior Fireplace Replacement Doors, showcasing the product and its 'Made in USA' quality.

Compatibility and Verification

It is critical to verify your fireplace's make and model number before installation. These replacement doors are ONLY compatible with the following Superior fireplace models: **BC36, BC36I, BR36, BR36I, BBV36, HC36, RD36**. Do NOT order if your fireplace is made by the "Majestic" brand.
To ensure proper fit, your fireplace must have the following existing components:

1. An existing top track.
2. Two clips in the top left and right corners of your firebox.
3. Two holes in the bottom left and right corners of your firebox.

How to Verify Your Model Number:

Locate the metal tag on the inside wall of your fireplace firebox. This tag contains the manufacturer's name and the specific model number. Ensure the model number on this tag matches one of the models listed above exactly.



Image: A person verifying the fireplace model number on the metal tag inside the firebox.



Image: Illustration of the required top track with clips and bottom holes for replacement door installation.

Video: How to Order Fireplace Doors

▶ **Watch video online**

How to Order Fireplace doors

Video: This video provides guidance on how to correctly order fireplace doors, emphasizing the importance of model verification.

Installation

Your EZ-FIT FIREPLACE DOORS arrive fully assembled and are designed to snap directly into your compatible Superior fireplace. No complex assembly is required for the doors themselves.

General Installation Steps:

1. Carefully unpack the doors.
2. Align the top pins of the doors with the existing top track in your fireplace.
3. Gently push the doors upwards to compress the spring-loaded pins, then guide the bottom pins into the corresponding holes in the bottom corners of your firebox.
4. Release the doors, ensuring both top and bottom pins are securely seated in their respective tracks/holes.
5. Test the doors for smooth opening and closing. If adjustment is needed, refer to the Troubleshooting section.

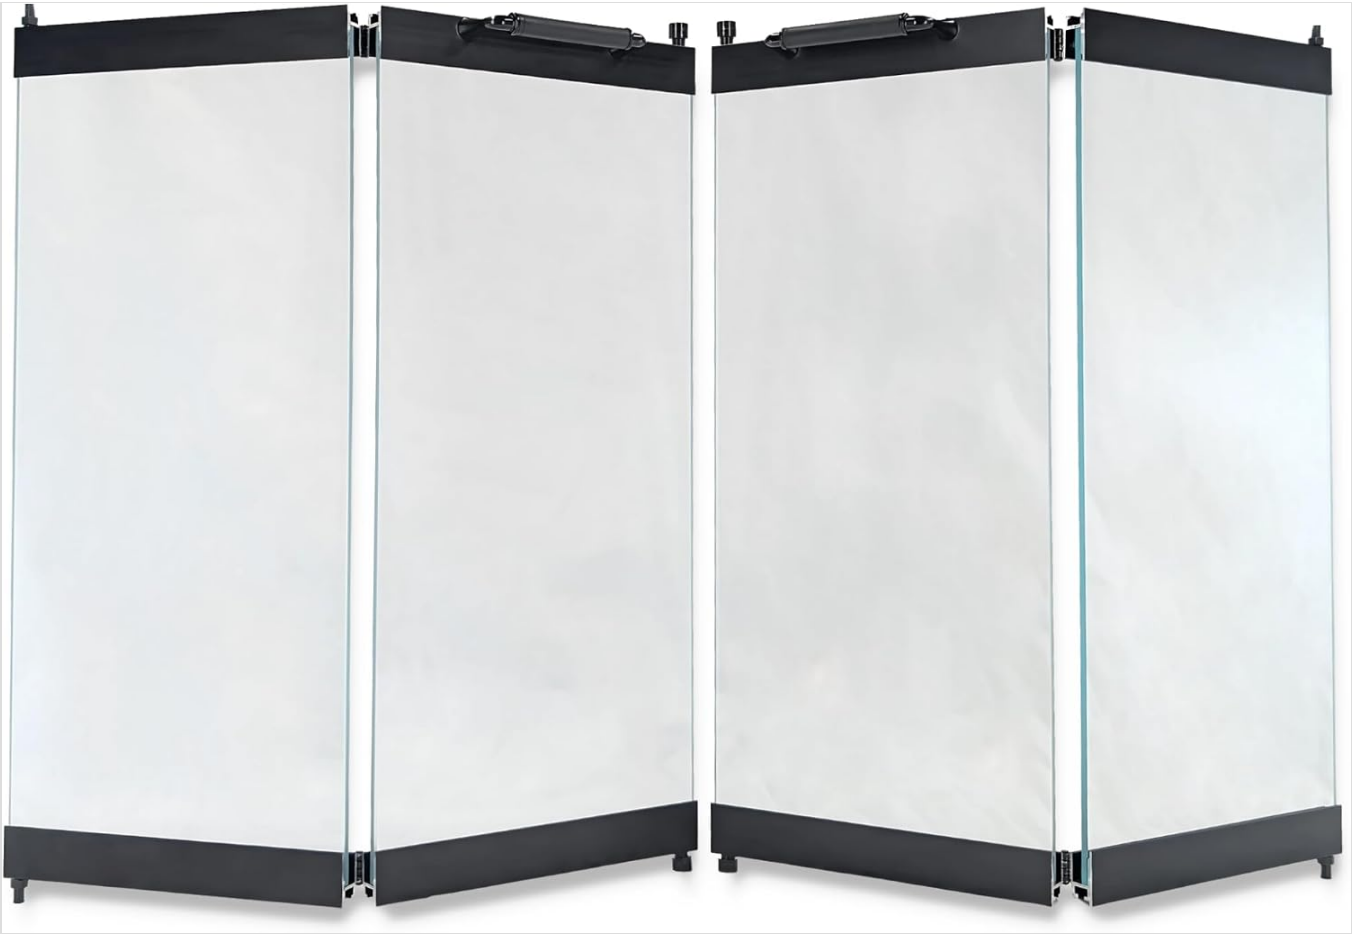


Image: A pair of EZ-FIT Fireplace Replacement Doors, ready for installation.



Image: EZ-FIT Fireplace Replacement Doors installed in a fireplace, showcasing the finished look.

Operation

To operate your fireplace doors, simply open them fully when a fire is burning. When the fireplace is not in use, the doors can be closed to help prevent drafts and maintain room temperature.

Safety Reminder: Always ensure the doors are fully open when a fire is active to prevent excessive heat buildup and potential damage to the doors or fireplace.



Image: Fireplace doors shown fully open while a fire is burning, illustrating safe operation.

Maintenance

Regular cleaning will help maintain the appearance and functionality of your fireplace doors.

- **Glass Cleaning:** Use a non-abrasive glass cleaner specifically designed for fireplace glass. Apply to a soft cloth and wipe the glass panels. Avoid spraying cleaner directly onto the frame.
- **Frame Cleaning:** Wipe the matte black anodized aluminum frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Inspection:** Periodically check the door hinges and pins for any signs of wear or damage. Ensure all components are secure.

Troubleshooting

If your replacement fireplace doors do not close properly, appear too big, or seem misaligned, these issues are common and can often be fixed by adjusting the clips. Here's what to do:

1. **Check Door Fit:** Ensure that you ordered the correct doors for your fireplace model.
2. **Inspect the Top Clips:** Look at the clips holding the doors in place, especially those in the top track. If the doors are not closing properly or seem misaligned, the clips might need adjusting.
3. **Loosen the Screws:** Locate the screws securing the clips in the top track. Loosen these screws slightly – just enough to move the clips without removing the screws completely.
4. **Adjust the Clips:** Once the screws are loose, slide the clips along the track to better fit the doors. This will help

align the doors and ensure they open and close smoothly.

5. **Tighten the Screws:** After adjusting the clips to the proper position, retighten the screws. Be careful not to over tighten them.
6. **Test the Doors:** Open and close the doors to make sure everything works properly. If they still do not close correctly, repeat the adjustment process until they do.

**Note: The fireplace doors will have gaps on the left and right sides of approximately ¼".*

Troubleshoot Replacement Door Install

If your replacement fireplace doors won't close properly, appear too big, or seem misaligned, don't worry—these issues are common and can often be fixed by adjusting the clips. Here's what to do:

- **Check Door Fit**: Ensure that you ordered the correct doors for your fireplace model.
- **Inspect the Top Clips**: Look at the clips holding the doors in place, especially those in the top track. If the doors aren't closing properly or seem misaligned, the clips might need adjusting.
- **Loosen the Screws**: Locate the screws securing the clips in the top track. Loosen these screws slightly — just enough to move the clips without removing the screws completely.
- **Adjust the Clips**: Once the screws are loose, slide the clips along the track to better fit the doors. This will help align the doors and ensure they open and close smoothly.
- **Tighten the Screws**: After adjusting the clips to the proper position, retighten the screws. Be careful not to over tighten them.
- **Test the Doors**: Open and close the doors to make sure everything works properly. If they still don't close correctly, repeat the adjustment process until they do.

*Note: The fireplace doors will have gaps on the left and right sides of approximately ¼"

Image: Visual guide detailing troubleshooting steps for fireplace door installation and adjustment.

Video: How to Adjust Fireplace Replacement Doors

▶ **Watch video online**
How to adjust fireplace replacement doors

Video: This video demonstrates the process of adjusting fireplace replacement doors for a proper fit.

Specifications

Feature	Detail
Brand	EZ-FIT FIREPLACE DOORS
Compatible Models	BC36, BC36I, BR36, BR36I, BBV36, HC36, RD36
Color	Matte Black
Material	Alloy Steel, 3/16” Tempered Glass
Style	Modern
Assembly Required	No (Arrives pre-assembled)
Manufacturer	EZ-FIT FIREPLACE DOORS

Warranty

For detailed warranty information regarding your EZ-FIT FIREPLACE DOORS, please refer to the manufacturer's official website or contact customer support directly. Warranty terms and conditions may vary.

Support

If you are still experiencing issues after following the troubleshooting steps, or have any questions, please contact our support team:

- **Email:** sales@brick-anew.com
- **Phone:** 1-800-897-7175

When contacting support via email regarding adjustment issues, please include:

- Pictures of the problem areas with the doors on your fireplace.
- A photo of your fireplace's metal tag with the model number clearly visible.
- In the subject line, please write: "ATTN: Door Adjustment needed" and your order number.

© 2026 EZ-FIT FIREPLACE DOORS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B082FMGXRR

More documents and user manuals: **https://manuals.plus/**