Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun MGK3221

Braun MGK3221 6-in-1 All-in-1 Shaver, Hair Trimmer and Beard Trimmer User Manual

Model: MGK3221

Introduction

Thank you for choosing the Braun MGK3221 6-in-1 All-in-1 Trimmer. This device is designed for versatile grooming, offering solutions for beard, face, and hair trimming, as well as ear and nose hair removal. Please read these instructions carefully before using the appliance to ensure safe and optimal performance. Keep this manual for future reference.

Product Overview

The Braun MGK3221 is a multi-grooming kit designed for precision styling. It includes the main trimmer unit and various attachments for different grooming needs.



Image 1: The Braun MGK3221 6-in-1 Trimmer kit, showing the main trimmer unit, various comb attachments, and the ear/nose trimmer head, alongside its retail packaging.

Components:

- **Main Trimmer Unit:** The core device with lifetime sharp blades.
- **Precision Trimmer Head:** For detailed styling.
- **Ear & Nose Trimmer Head:** For safe removal of unwanted hair.
- **Fixed Combs:**
    - 1 mm and 2 mm fixed combs for stubble and short beards.
- **Sliding Beard Combs:**
    - Short beard comb (3-11 mm) for short to medium beards.
    - Long beard comb (13-21 mm) for longer beards and hair.
- **Cleaning Brush:** For maintaining the blades.
- **Charger:** For recharging the NiMH battery.



Image 2: A detailed view of the Braun MGK3221 trimmer unit and all its included attachments, including various comb sizes and the ear/nose trimmer head.

Safety Information

To reduce the risk of electric shock, injury, or fire, always observe the following safety precautions:

- This appliance is suitable for cleaning under running water. Do not immerse in water.
- Do not use the appliance with a damaged foil or comb, as this may result in injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the power supply provided with the appliance.
- Do not open the appliance. The built-in rechargeable battery is not replaceable.
- For hygiene reasons, do not share this appliance with other persons.

Setup

Charging the Trimmer:

1. Ensure the trimmer is switched off.
2. Connect the charging cord to the trimmer and plug it into an electrical outlet.
3. The charging indicator light will illuminate. A full charge takes approximately 10 hours and provides up to 50 minutes of cordless trimming.
4. For first use, charge the trimmer for a full 10 hours.

Attaching and Removing Trimmer Heads/Combs:

- **To attach a comb:** Align the comb with the trimmer blade and push it down until it clicks into place.
- **To remove a comb:** Gently pull the comb upwards from the trimmer blade.
- **To attach the ear/nose trimmer head:** Remove the standard trimmer head by pushing it off. Align the ear/nose trimmer head with the main unit and push until it clicks.
- **To remove the ear/nose trimmer head:** Pull it off the main unit.

Operating Instructions

Always ensure your skin and hair are clean and dry before trimming for best results.

Beard Trimming:

1. Attach the desired beard comb (3-11mm or 13-21mm) or a fixed comb (1mm or 2mm) for stubble.
2. Adjust the comb to your desired length setting using the precision dial (if applicable to the comb).
3. Switch on the trimmer.
4. Trim against the direction of hair growth, ensuring the flat part of the comb rests against your skin.
5. For defining edges, remove the comb and use the precision trimmer head directly against the skin.



Image 3: A man demonstrating the use of the Braun MGK3221 trimmer with a comb attachment to trim his beard, moving against the direction of hair growth.

Hair Trimming:

1. Attach the long beard comb (13-21mm) for hair trimming.
2. Adjust the comb to your desired hair length.
3. Switch on the trimmer.
4. Move the trimmer slowly against the direction of hair growth, ensuring even coverage.
5. For shorter styles or detailing, use the shorter combs or the precision trimmer head without a comb.



Image 4: A man using the Braun MGK3221 trimmer with a comb attachment to trim the hair on the back of his head, demonstrating its use for haircuts.

Ear and Nose Trimming:

1. Ensure the ear & nose trimmer head is securely attached.
2. Switch on the trimmer.
3. Gently insert the trimmer tip into your nostril or ear canal. Do not insert too deeply.
4. Move the trimmer in a circular motion to cut unwanted hair.
5. Clean the trimmer head after each use.



Image 5: A man using the Braun MGK3221 with the specialized ear and nose trimmer attachment to carefully trim nose hair.



Image 6: A composite image showing a man using the Braun MGK3221 for both ear hair trimming and precise facial hair detailing, highlighting its versatility.

Maintenance

Cleaning the Trimmer:

1. Switch off the trimmer and disconnect it from the power outlet.
2. Remove any attached comb or trimmer head.
3. Brush away loose hairs from the trimmer head and combs using the provided cleaning brush.
4. Rinse the trimmer head and combs under warm running water. The main trimmer unit is also washable under running water.
5. Allow all parts to air dry completely before reassembling or storing.

Blade Care:

The blades are designed for lifetime sharpness. For optimal performance, it is recommended to regularly oil the blades

with a drop of light machine oil (not included) after cleaning, especially if rinsing with water frequently.

Troubleshooting

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is discharged.	Charge the trimmer for 10 hours.
Poor trimming performance.	Blades are clogged with hair or not oiled.	Clean the trimmer head and blades thoroughly. Apply a drop of oil to the blades.
Trimmer makes unusual noise.	Hair or debris caught in the motor/blade mechanism.	Clean the trimmer thoroughly. If the problem persists, contact customer support.
Charging indicator not lighting up.	Charger not properly connected or faulty.	Ensure charger is securely connected to both the trimmer and the power outlet. Try a different outlet.

Specifications

- **Model:** MGK3221
- **Power Source:** Rechargeable NiMH Battery
- **Charging Time:** Approximately 10 hours
- **Operating Time (Cordless):** Up to 50 minutes
- **Blade Material:** Metal
- **Length Settings:** 13 (0.5 - 21 mm)
- **Country of Origin:** China
- **Manufacturer:** Procter & Gamble
- **Item Weight:** 360 Grams
- **Dimensions:** Approximately 17 cm (7.1 inches) in length.

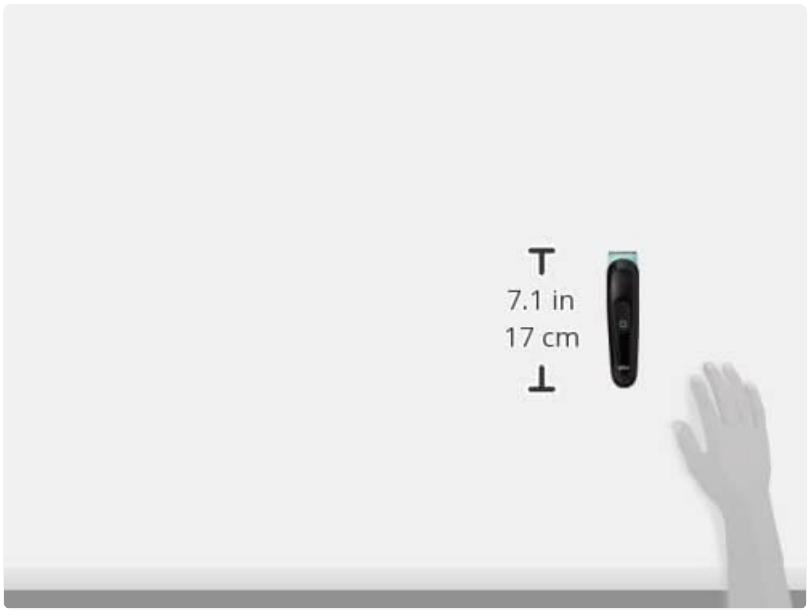


Image 7: An image illustrating the approximate dimensions of the Braun MGK3221 trimmer, indicating a length of 7.1 inches (17 cm).

Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Braun website. Keep your purchase receipt as proof of purchase.

Manufacturer: Procter & Gamble

Brand Website: www.braun.com

© 2023 Braun. All rights reserved. Information subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0842P7BRK

More documents and user manuals: **https://manuals.plus/**