Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Coleshome XSHL009

Coleshome XSHL009 Reversible L-Shaped Desk User Manual

Model: XSHL009

1. Introduction

Thank you for choosing the Coleshome XSHL009 Reversible L-Shaped Desk. This manual provides comprehensive instructions for the safe assembly, proper use, and maintenance of your new desk. Please read this manual thoroughly before beginning assembly and retain it for future reference.

The Coleshome L-Shaped Desk is designed to provide a spacious and versatile workspace for both gaming and home office environments. Its reversible design allows for flexible configuration to suit various room layouts.



Image 1.1: Coleshome L-Shaped Desk configured for an office workspace.

2. Safety Information

Please observe the following safety precautions during assembly and use:

- **Keep babies/children away from the assembly parts.** Small parts can be a choking hazard.
- Assemble the desk on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are tightened securely before use. Periodically check and re-tighten as necessary.
- Do not overload the desk. The maximum weight recommendation is 220 pounds (100 kg).
- Avoid placing hot items directly on the desktop surface without protection.
- Do not stand or sit on the desk.

3. Package Contents

Before beginning assembly, verify that all components are present and undamaged. The package includes all

necessary accessories and tools for assembly.

3.1. Parts List (Example - refer to your specific packaging for exact list)

- Desktop Panels (Long, Short, Corner)
- Metal Frame Legs and Support Bars
- Monitor Stand (Dismountable Wide Shelf)
- Adjustable Leveling Studs
- Assembly Hardware (Screws, Allen Wrench)

3.2. Tools Required

- Included Allen Wrench
- Phillips Head Screwdriver (not always included, may be needed for some parts)

4. Assembly Instructions

Assembly is designed to be straightforward and can typically be completed by one person. Follow the detailed instructions provided in your package step-by-step.

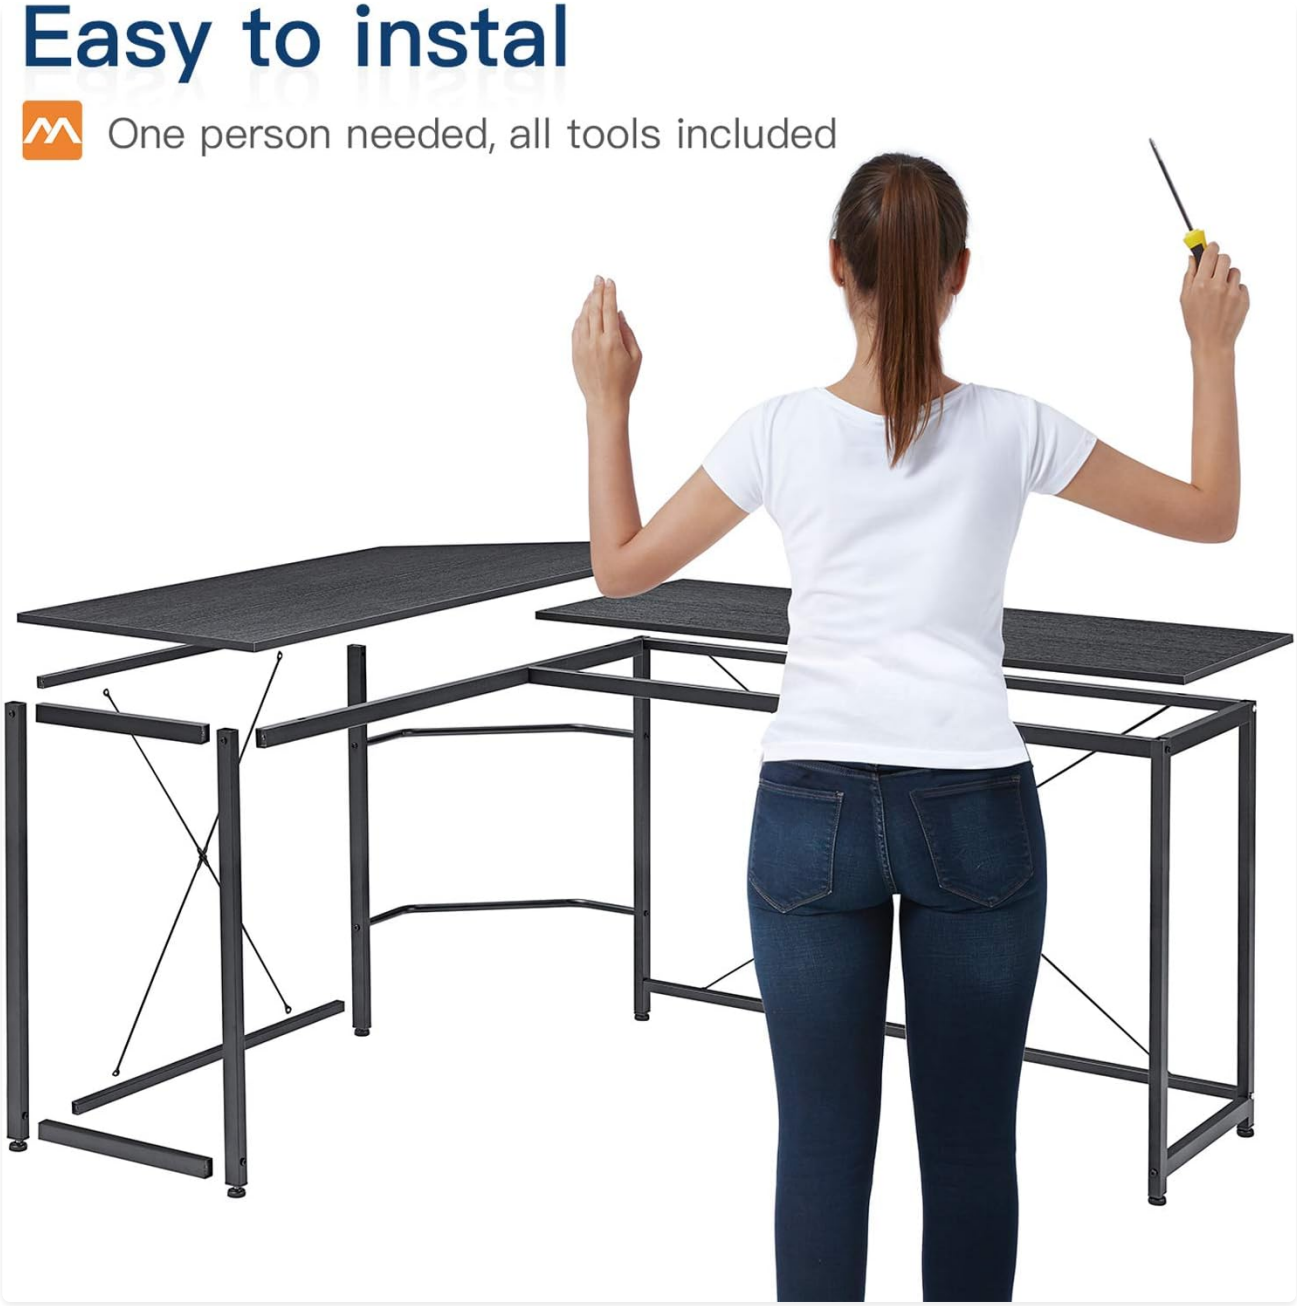

Image 4.1: Visual representation of desk assembly.

4.1. Reversible Configuration

The desk features a reversible design, allowing the longer or shorter side to be positioned on either the left or right. Decide your preferred orientation before attaching the desktop panels.

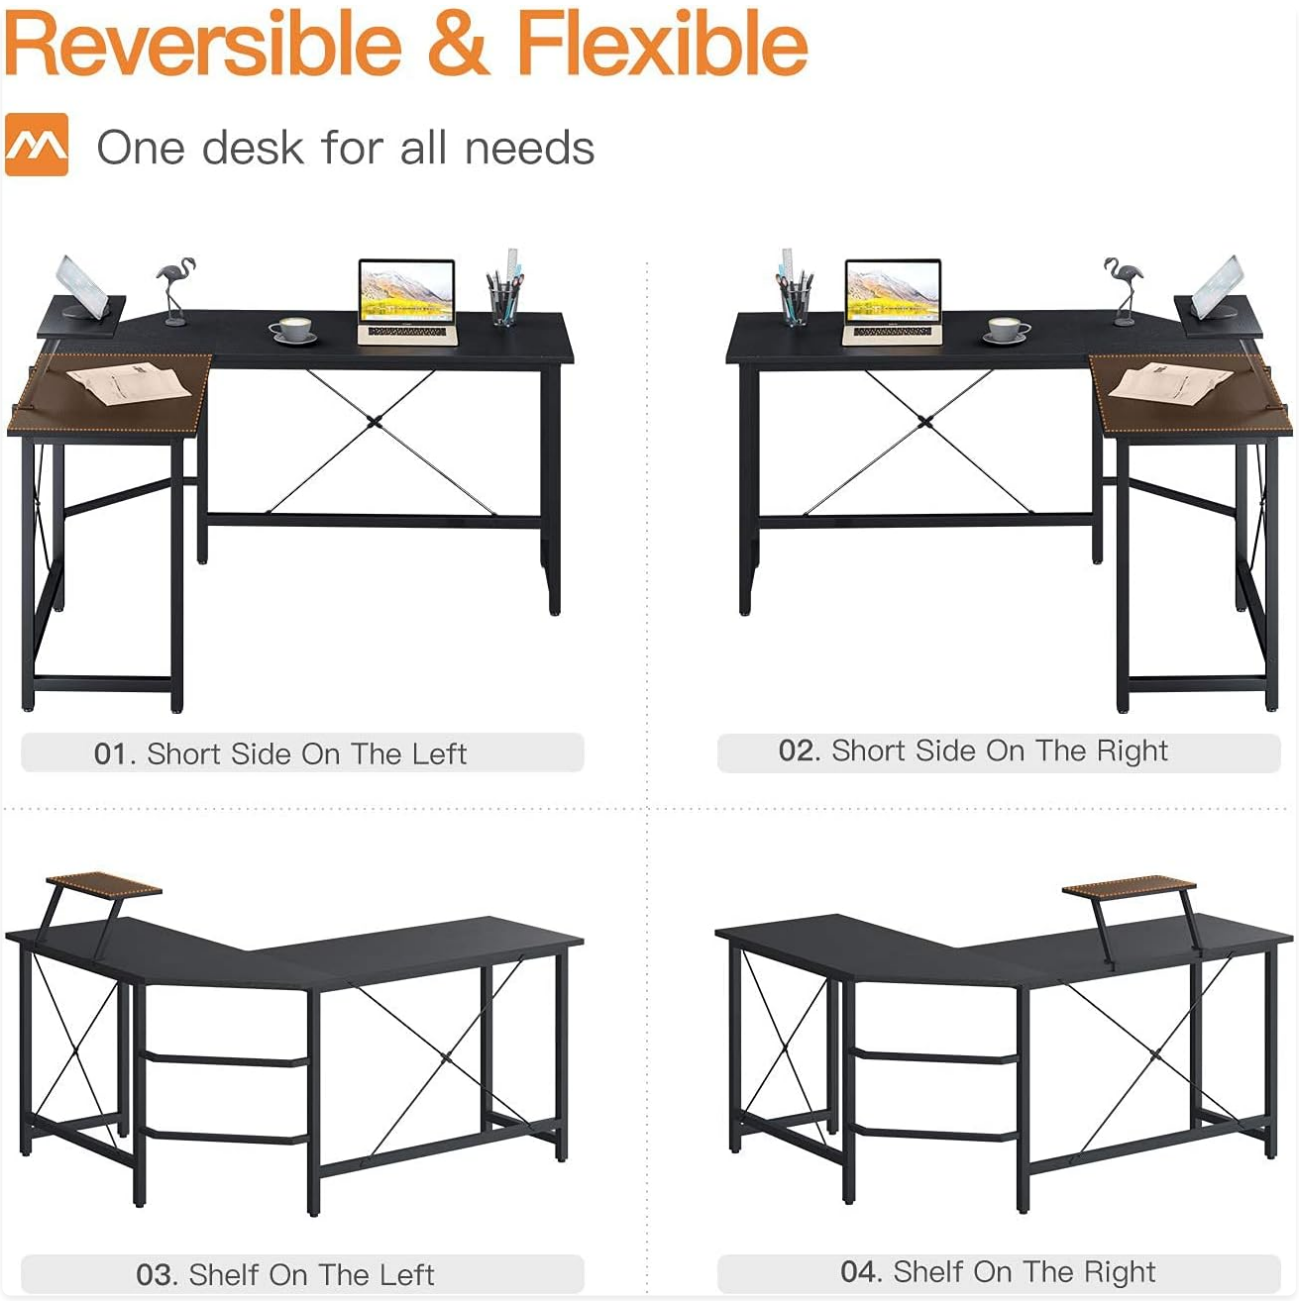

Image 4.2: Reversible and flexible desk configurations.

4.2. General Assembly Steps (Summary)

1. Unpack all components and verify against the parts list.
2. Assemble the metal frame sections according to the provided diagrams, ensuring correct orientation for your desired L-shape.
3. Attach the desktop panels to the assembled frame using the specified hardware.
4. Install the monitor stand (wide shelf) on the desired side (left or right).
5. Attach the adjustable leveling studs to the bottom of the desk legs.
6. Once fully assembled, gently lift and place the desk in its intended location.
7. Adjust the leveling studs to ensure the desk is stable and level on uneven floors.

5. Operating Instructions (Usage)

The Coleshome L-Shaped Desk is designed for versatile use in various settings.

5.1. Workspace Utilization

- The L-shaped design provides ample surface area for multiple monitors, laptops, and other office or gaming equipment.
- The dismountable wide shelf can be used to elevate a monitor, creating a more ergonomic viewing height, or for storing small items.
- Utilize the corner section for easy access to frequently used items or for decorative elements.



Image 5.1: Desk configured for an immersive gaming experience.

6. Maintenance

Proper care will extend the life and appearance of your desk.

6.1. Cleaning

- The desktop surface is waterproof and anti-scratch. Wipe clean with a damp cloth and mild detergent.
- Avoid using abrasive cleaners or harsh chemicals, as these can damage the finish.
- Dry the surface immediately after cleaning to prevent water spots.

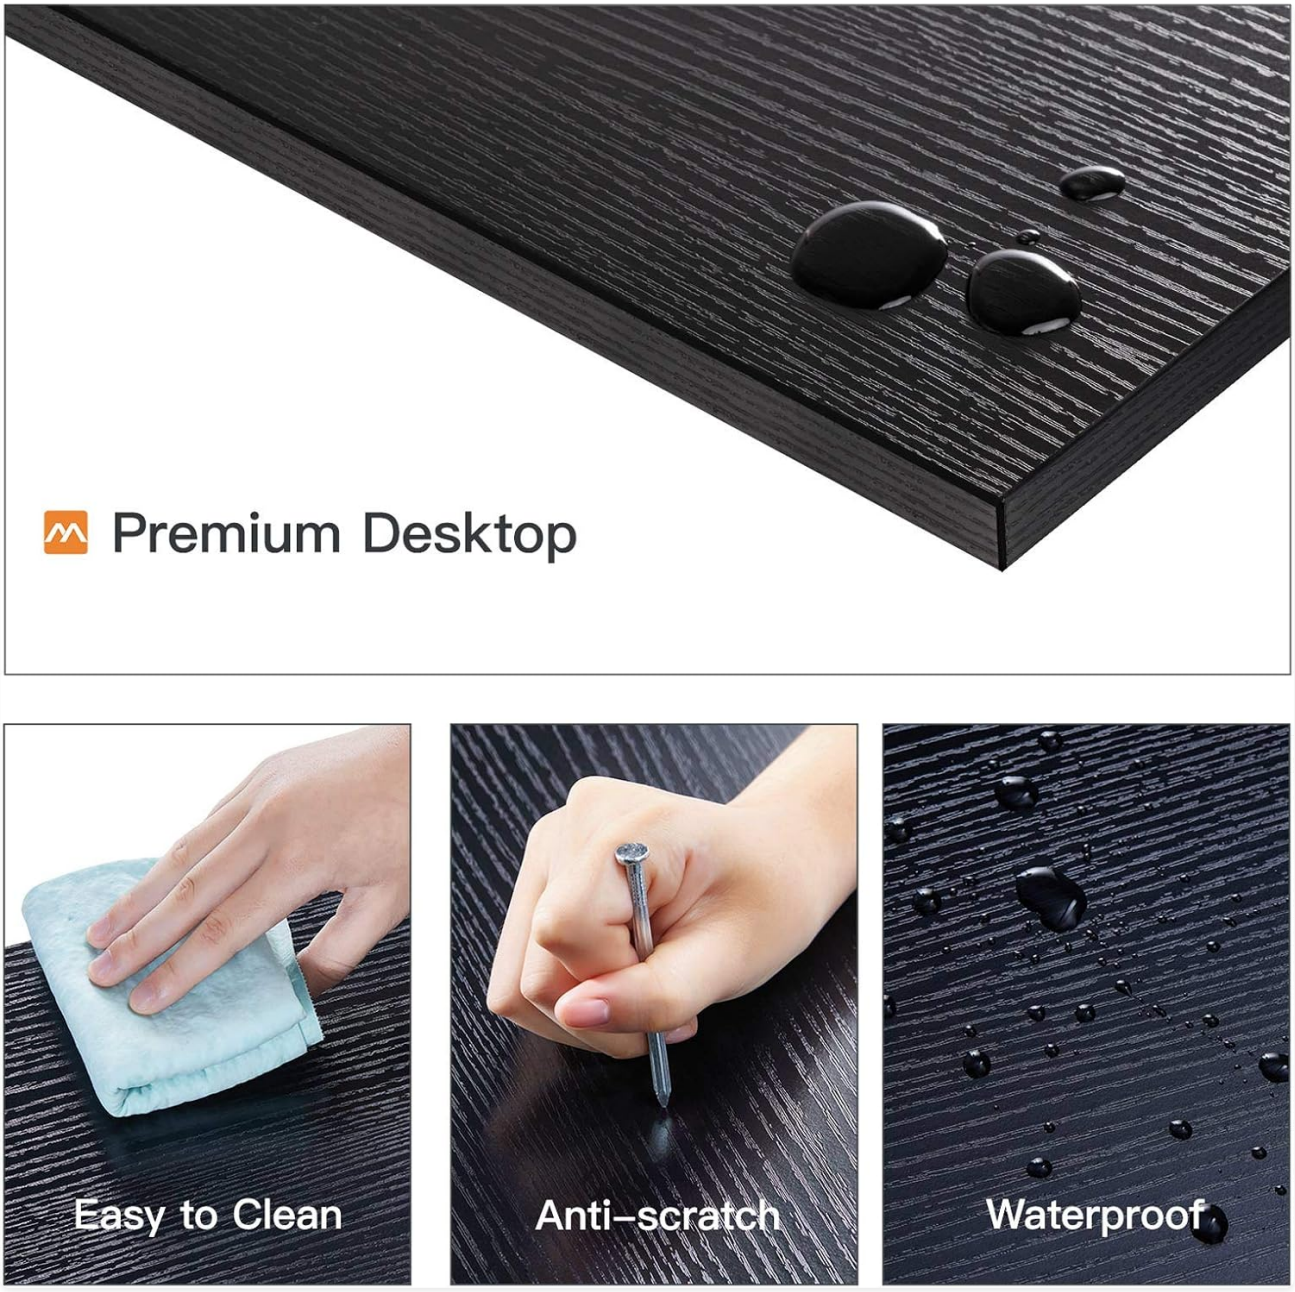

Image 6.1: Desktop features: Easy to Clean, Anti-scratch, Waterproof.

6.2. Structural Integrity

- Periodically check all screws and connections to ensure they remain tight. Re-tighten as needed to maintain stability.
- Ensure the adjustable leveling studs are properly set to prevent wobbling.

7. Troubleshooting

If you encounter issues with your desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk is wobbly.	Uneven floor; loose connections.	Adjust the leveling studs on the bottom of the legs. Ensure all screws are tightened.

Problem	Possible Cause	Solution
Parts do not fit together.	Incorrect orientation of parts; manufacturing defect.	Review the assembly instructions carefully to ensure parts are oriented correctly. If parts are defective, contact customer service.
Missing hardware.	Packaging error.	Contact customer service for replacement parts.

8. Specifications

- **Brand:** Coleshome
- **Model:** XSHL009
- **Shape:** L-Shape
- **Product Dimensions:** (59+47)L x 18.9W x 27.8H inches (Overall)
- **Color:** Black
- **Style:** Gaming / Home Office
- **Base Material:** Alloy Steel
- **Top Material Type:** Engineered Wood
- **Special Feature:** Reversible, Dismountable Wide Shelf (Monitor Stand), Adjustable Leveling Studs
- **Maximum Weight Recommendation:** 220 pounds (100 kg)
- **Recommended Number of People for Assembly:** 1



Image 8.1: High stability and durability of the desk.

9. Warranty and Support

Coleshome is committed to providing quality products and customer satisfaction. For any questions, missing parts, or issues not covered in this manual, please contact our customer service team.

- **Customer Service:** A professional after-sales team will reply to your message within 24 hours.
- **Contact Information:** Please refer to the contact details provided with your purchase or visit the official Coleshome website for support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B087BX518L

More documents and user manuals: **https://manuals.plus/**