Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MINISO Digital Alarm Clock

MINISO Digital Alarm Clock Instruction Manual

Model: Digital Alarm Clock

1. Introduction

Thank you for purchasing the MINISO Digital Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read this manual thoroughly before use to ensure proper function and longevity of the product.

2. Product Overview

The MINISO Digital Alarm Clock is a versatile device designed to display time, date, day of the week, ambient temperature, and humidity. It features a digital display with a temporary backlight function and an alarm feature.

Key Features:

- Digital time display
- Alarm function
- Temporary backlight when button is pressed
- Displays ambient temperature (Celsius or Fahrenheit)
- Displays day and month
- Displays day of the week (in English)
- Displays ambient humidity percentage



Image 1: Angled view of the MINISO Digital Alarm Clock, showing its compact design and digital display.

3. Setup

3.1. Battery Installation

The MINISO Digital Alarm Clock requires **two AAA batteries** for operation (batteries are not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the alarm clock.
2. Slide or gently pry open the battery compartment cover.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

Note: Always use fresh batteries. Remove batteries if the device will not be used for an extended period to prevent leakage.

4. Operating Instructions

This section details how to operate your MINISO Digital Alarm Clock.

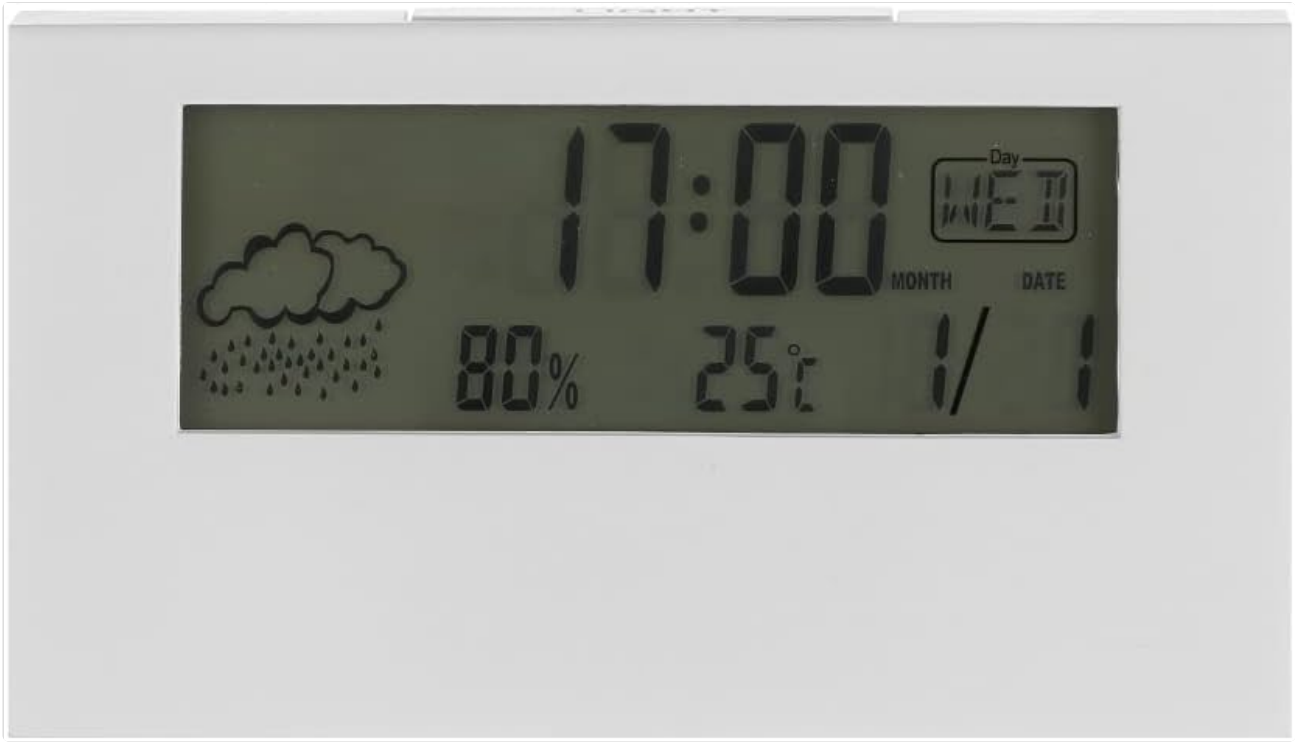

Image 2: Close-up view of the MINISO Digital Alarm Clock's digital display, showing time, day, date, humidity, and temperature.

4.1. Setting Time and Date

Specific buttons for setting time and date are typically located on the back or side of the device. Look for buttons labeled "SET", "MODE", "UP", "DOWN", or similar. The general procedure is:

1. Press the **MODE** or **SET** button to enter time setting mode. The hour digits will likely flash.
2. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press **MODE** or **SET** again to move to minute setting, then adjust with **UP**/**DOWN**.
4. Continue this process for year, month, and day settings.
5. Press **MODE** or **SET** one last time to exit setting mode.

4.2. Setting the Alarm

To set the alarm time:

1. Press the **ALARM SET** button (or press **MODE** until "ALARM" is displayed). The alarm hour digits will flash.
2. Use the **UP** or **DOWN** buttons to set the desired alarm hour.
3. Press **ALARM SET** again to move to alarm minute setting, then adjust with **UP**/**DOWN**.
4. Press **ALARM SET** to confirm and exit.
5. To activate/deactivate the alarm, look for an **ALARM ON**/**OFF** switch or button. An alarm icon will typically appear on the display when activated.

4.3. Using the Backlight

The alarm clock features a temporary backlight for viewing the display in low-light conditions. Simply press the **LIGHT** button (usually located on the top of the clock). The light will illuminate for a few seconds and then automatically turn off.

4.4. Temperature Display (Celsius/Fahrenheit)

The clock displays the ambient temperature. To switch between Celsius (°C) and Fahrenheit (°F), locate the **°C**/**°F** button, often on the back or side of the unit, and press it to toggle between the two units.

5. Maintenance

Proper maintenance ensures the longevity and optimal performance of your alarm clock.

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the surface.
- **Battery Replacement:** Replace batteries when the display becomes dim or the clock functions erratically. Always replace both batteries at the same time.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent corrosion.
- **Environment:** Avoid exposing the clock to extreme temperatures, direct sunlight, high humidity, or dusty environments.

6. Troubleshooting

If you encounter issues with your MINISO Digital Alarm Clock, refer to the following common problems and solutions:

- **Display is blank or dim:**
  - Check if batteries are installed correctly.
  - Replace old batteries with new AAA batteries.
- **Alarm does not sound:**
  - Ensure the alarm function is activated (check for the alarm icon on the display).
  - Verify that the alarm time is set correctly.
  - Check battery level.
- **Incorrect time/date:**
  - Re-set the time and date following the instructions in Section 4.1.
- **Temperature/Humidity readings seem inaccurate:**
  - Ensure the clock is placed in a stable environment, away from direct heat sources or drafts.
  - Allow some time for the sensors to stabilize after initial setup or relocation.

7. Specifications

Feature	Detail
Brand	MINISO
Model	Digital Alarm Clock
Color	White
Display Type	Digital
Power Source	2 x AAA Batteries (not included)
Product Dimensions (Approx.)	Height: 7cm, Width: 13cm, Depth: 3cm

Feature	Detail
Special Features	Alarm, Temperature Display, Humidity Display, Date Display, Day of Week Display, Backlight

8. Warranty and Support

For warranty information or technical support, please refer to the retailer where the product was purchased or visit the official MINISO website. Keep your purchase receipt as proof of purchase.
For further assistance, you may contact MINISO customer service through their official channels. Contact details are typically available on the product packaging or their official website.



Image 3: Packaging of the MINISO Digital Alarm Clock, showing the brand logo and product image.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B087JP1P2C

More documents and user manuals: **https://manuals.plus/**