Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MINISO 6941501525262

MINISO Silicone Facial Cleaner Instruction Manual

Model: 6941501525262

1. Product Overview

The MINISO Silicone Facial Cleaner is designed for effective facial cleansing, removing dirt, impurities, and makeup. Crafted from high-grade food-grade silicone, this device offers a gentle yet thorough cleaning experience suitable for various skin types.



Image 1.1: Front view of the MINISO Silicone Facial Cleaner.

Key Features:

- **High-Grade Silicone Material:** Made from food-grade silicone, ensuring durability, ease of cleaning, quick drying, and resistance to deformation.
- **Dual Bristle Design:** Features both thick and thin silicone bristles for varied cleansing needs.
- **Ergonomic Design:** Shaped like a leaf for a comfortable grip and easy handling.
- **Waterproof (IPX6):** Designed for safe use in the shower or bath.
- **Battery Powered:** Operates with a single AAA battery (not included), offering long-lasting use without the need for frequent recharging or brush head changes.



Image 1.2: Illustration of the dual silicone bristle design, featuring both thick and thin bristles for comprehensive cleansing.



Image 1.3: Diagram illustrating the three distinct cleansing areas: Area 1 for gentle cleansing of dry/sensitive skin (U-area of cheek), Area 2 for neutral/mixed skin (T-zone, nose, mouth corners, chin), and Area 3 for oily skin.

2. Safety Information

- Read all instructions before use.
- This device is IPX6 waterproof, meaning it is protected against powerful water jets. However, ensure the battery compartment is securely sealed before exposing to water.
- Do not immerse the device in water for extended periods.
- Keep out of reach of children.
- If you experience any skin irritation, discontinue use immediately.
- Use only AAA batteries. Do not mix old and new batteries or different types of batteries.

3. Setup

Battery Installation:

1. Locate the battery compartment cover on the back of the device.
2. Twist the cover counter-clockwise to unlock and remove it.
3. Insert one AAA battery, ensuring the positive (+) and negative (-) terminals are correctly aligned as indicated inside the compartment.
4. Replace the cover and twist clockwise to securely lock it. Ensure it is tightly sealed to maintain waterproofing.



Image 3.1: The battery compartment of the facial cleaner, showing where to insert the AAA battery.



Image 3.2: Information regarding the power-saving feature, indicating that one AAA battery can support up to 180 days of use. Batteries are not included with the product.

4. Operating Instructions

1. **Prepare Your Face:** Wet your face and apply your preferred facial cleanser.
2. **Wet the Device:** Dampen the silicone bristles of the facial cleaner.
3. **Activate:** Press the power button to turn on the device.
4. **Cleanse:** Gently move the device in circular motions across your face. Refer to Image 1.3 for guidance on using different bristle areas for specific skin types and facial zones.
5. **Rinse:** After cleansing, rinse your face thoroughly with water.
6. **Turn Off:** Press the power button again to turn off the device.

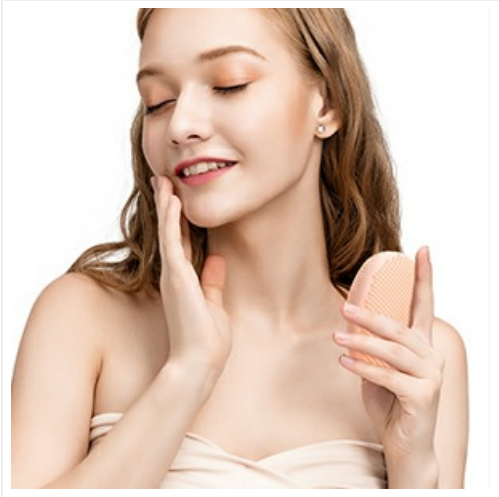

Image 4.1: A user demonstrating the gentle application of the facial cleaner on the cheek area.

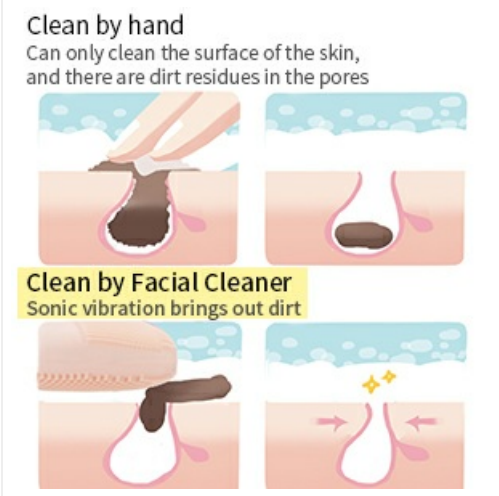

Image 4.2: A visual comparison illustrating how the facial cleaner's sonic vibrations effectively remove dirt and impurities from pores, compared to manual cleansing.

5. Maintenance

Cleaning the Device:

- After each use, rinse the silicone bristles thoroughly with water.
- Wash the device with mild soap to remove any cleanser residue.
- Pat dry with a clean, soft towel or allow it to air dry.
- Do not use abrasive cleaners or brushes, as this may damage the silicone.



Image 5.1: The facial cleaner being rinsed under running water, demonstrating its IPX6 waterproof capability.

Storage:

- Store the device in a clean, dry place away from direct sunlight and extreme temperatures.

6. Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Battery is dead or incorrectly installed.	Check battery orientation. Replace with a new AAA battery. Ensure battery compartment is securely closed.
Vibrations are weak or inconsistent.	Low battery power.	Replace the AAA battery with a fresh one.
Water enters the battery compartment.	Battery cover not securely sealed.	Immediately remove the battery, dry the compartment thoroughly, and ensure the cover is tightly sealed before next use.

7. Specifications

Feature	Detail
Brand	MINISO
Model Number	6941501525262
Material	Silicone
Color	Red
Power Source	1 x AAA Battery (not included)
Waterproof Rating	IPX6

Feature	Detail
Product Dimensions (L x W x H)	50 x 50 x 50 mm (approx. 5 x 5 x 5 cm)
Item Weight	65 g
Product Benefits	Cleansing, Gentle, Dirt Removal, Makeup Removal
Skin Type Compatibility	Dry, All Skin Types
Care Instructions	Wash with Mild Soap
Operation Mode	Automatic



Image 7.1: Approximate dimensions of the facial cleaner, showing a length of 11 cm and a width of 6.7 cm.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B087QFXTKQ

More documents and user manuals: **https://manuals.plus/**