Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lexibook DMW050FZ

Lexibook Frozen Projection Watch DMW050FZ Instruction Manual

Model: DMW050FZ

1. Introduction

Thank you for purchasing the Lexibook Frozen Projection Watch. This digital wristwatch features popular Disney characters and includes a fun image projection function. This manual provides essential information for the safe and proper use of your watch.

2. Safety Information

WARNING: CHOKING HAZARD - Small Parts.
This product contains small parts which may pose a choking hazard. Keep out of reach of children under 3 years of age. Adult supervision is recommended during use, especially for younger children.

3. Package Contents

- Lexibook Frozen Projection Watch (1 unit, with button batteries installed)
- Instruction Manual (Japanese / Foreign Language)

4. Product Overview

The Lexibook Frozen Projection Watch is a digital wristwatch designed for children, featuring characters from Disney's Frozen. It displays time digitally and can project 20 different images.



Image 1: The Lexibook Frozen Projection Watch, illustrating its digital display and the variety of images it can project.

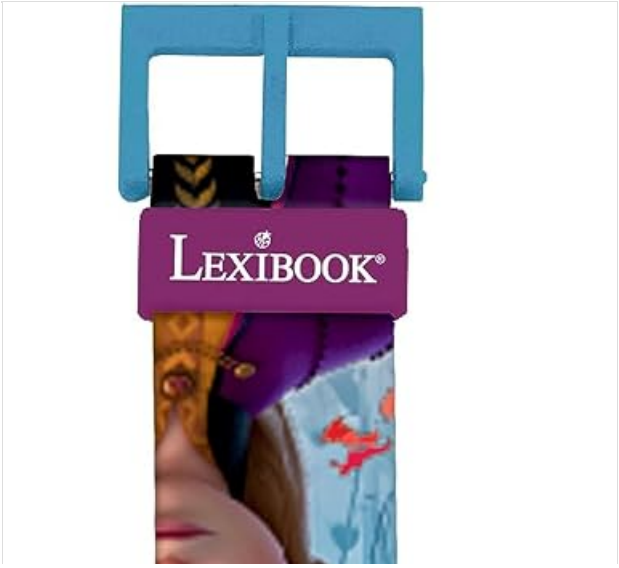




Image 2: A top-down view of the watch face, showing the digital time display and character design.




LEXIBOOK
ESSAIE
-MOI!
TRY ME!
Projette/
projects
20
images
FROZEN
12:10
3+
Disney
FROZEN



Image 3: The product packaging for the Lexibook Frozen Projection Watch, highlighting its features.

5. Setup

5.1. Battery Installation/Replacement

The watch comes with 4 LR41 button batteries pre-installed. If battery replacement is needed:

1. Locate the battery compartment on the back of the watch.
2. Using a Phillips screwdriver (not included), carefully unscrew the battery compartment cover.
3. Remove the old batteries and insert four new LR41 button batteries, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw. Do not overtighten.

Note: A Phillips screwdriver is required for battery replacement. Please prepare it separately.

5.2. Adjusting the Strap

The watch strap features 8 holes, allowing for adjustment to fit various wrist sizes as the child grows. Simply select the appropriate hole for a comfortable and secure fit.

5.3. Setting the Time

To set the time on your digital watch:

1. Locate the time setting button, usually on the side of the watch (often recessed or a smaller button).
2. Press and hold the time setting button until the hour display starts flashing.
3. Press the same button repeatedly to advance the hour.
4. Once the correct hour is set, press and hold the button again until the minute display starts flashing.
5. Press the button repeatedly to advance the minutes.
6. After setting the minutes, press and hold the button one last time to confirm the time and exit setting mode. The display will stop flashing.

6. Operating Instructions

6.1. Checking the Time

The current time is displayed digitally on the watch face. It is designed to be easily readable for children.

6.2. Using the Projection Function

The watch can project 20 different images featuring Frozen characters.

1. Locate the projection button, typically on the side of the watch near the projection lens.
2. Point the watch's projection lens towards a flat, dark surface (e.g., a wall or ceiling).
3. Press the projection button to display an image.
4. Press the button again to cycle through the 20 available images.

For best results, use the projection function in a dimly lit or dark room.

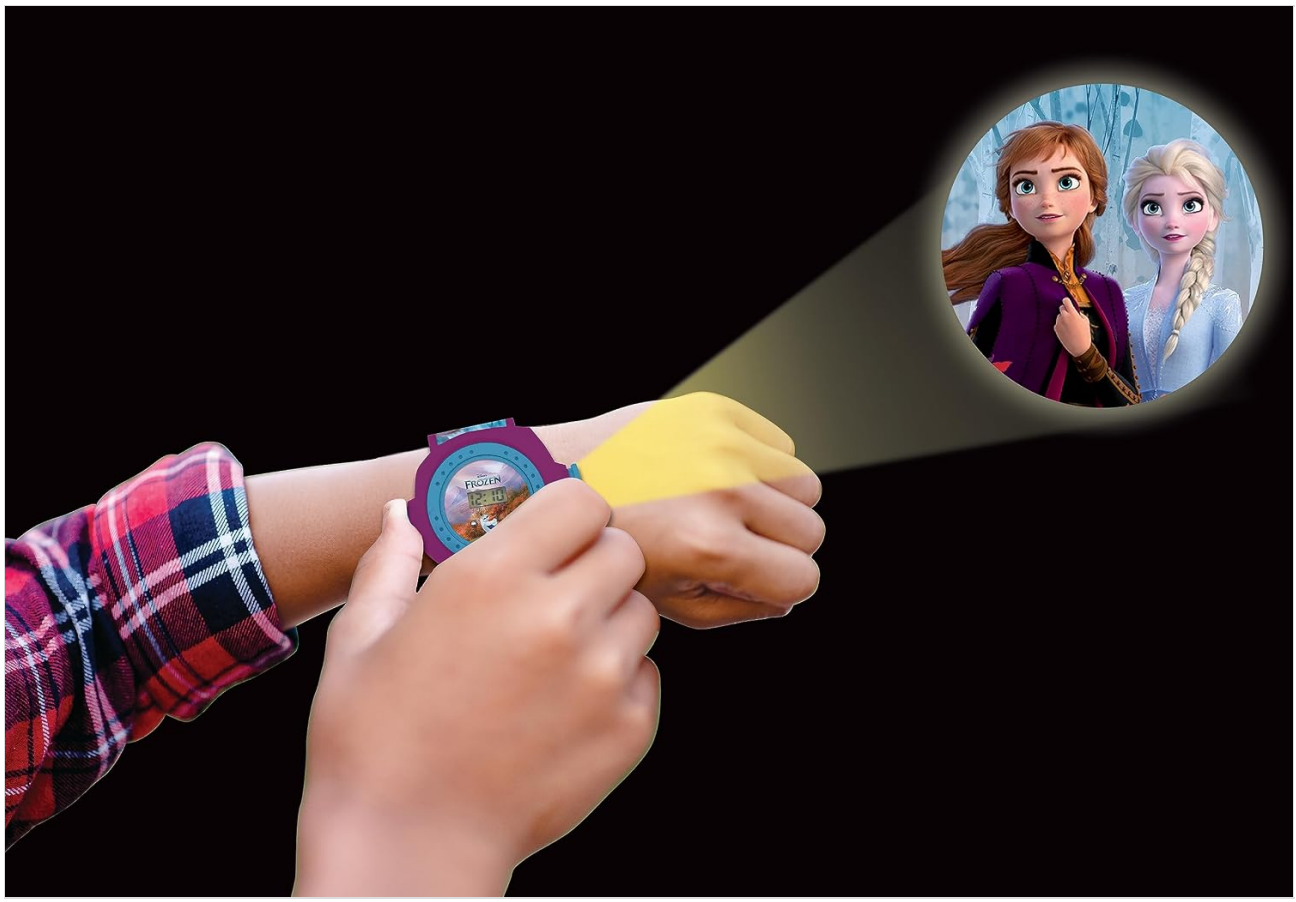


Image 4: A child demonstrating the projection feature of the watch, casting an image onto their hand.



Image 5: A close-up view of the projected image, clearly showing the Frozen characters.

7. Maintenance

- **Cleaning:** Wipe the watch with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Water Resistance:** This watch is not waterproof. Avoid exposing it to water, moisture, or extreme temperatures.
- **Storage:** When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight.
- **Battery Care:** If the watch will not be used for a long time, it is recommended to remove the batteries to prevent leakage.

8. Troubleshooting

8.1. Watch Not Displaying Time / Projection Not Working

- Check if the batteries are correctly installed.
- Replace the batteries with new LR41 button batteries.

8.2. Difficulty Setting Time

- Ensure you are pressing and holding the time setting button for the correct duration to enter and exit setting modes.
- Refer to section 5.3 for detailed time setting instructions.

8.3. Projected Image is Faint or Unclear

- Ensure the room is sufficiently dark. The projection is most visible in low-light conditions.
- Check the battery level; low batteries can affect projection brightness.
- Ensure the projection lens is clean and free from dust or smudges.

9. Specifications

Brand	Lexibook
Model Number	DMW050FZ
Product Dimensions	24 x 5.8 x 2.3 cm
Item Weight	34 g
Material	Plastic
Batteries Required	4 x LR41 Button Batteries (included)
Target Age	6 years and above

10. Warranty and Support

For warranty information or product support, please refer to the specific warranty card included with your purchase or contact Lexibook customer service directly. Contact details can typically be found on the product packaging or the official Lexibook website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B087VBDN1B

More documents and user manuals: **https://manuals.plus/**