Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY RM-ADU007

ALLIMITY RM-ADU007/RM-ADU007A Remote Control Instruction Manual

This manual provides detailed instructions for the setup, operation, and maintenance of your ALLIMITY RM-ADU007/RM-ADU007A replacement remote control for Sony DVD Home Theatre Systems.

1. Product Overview

The ALLIMITY RM-ADU007/RM-ADU007A is a replacement infrared (IR) remote control designed for seamless compatibility with a wide range of Sony DVD Home Theatre Systems. It offers full functionality without the need for complex programming.

Compatible Models:

- **Sony DVD Home Theatre Systems:** DAV-HDX275, DAV-HDX276, DAV-HDX475, DAV-HDX285, DAV-HDX585, DAV-HDZ273, DAV-HDZ278, DAV-HDZ284, DAV-HDZ485, DAV-HDX589W, DAV-HDX279W, DAV-HDX277WC, DAV-HDX287WC, DAV-HDX576WF, DAV-HDX587WC
- **Sony Components:** SS-CT80, SS-CT91, SS-TS80, SS-TS81, SS-TS82, SS-TS92, SS-TS94, SS-TS95, SS-WS80, SS-WS82, SS-WS91, SS-WS95, RM-ADU007, HCD-HDX275, HCD-HDX285, HCD-HDX475, HCD-HDX585, HCD-HDZ273, HCD-HDZ278, HCD-HDZ284, HCD-HDZ485, RM-ADU007A, RM-ADU008A, HCD-HDX279W, HCD-HDX589W, HCD-HDX277WC, HCD-HDX287WC, HCD-HDX576WF, HCD-HDX587WC

2. Setup

Battery Installation

The remote control requires two (2) AAA batteries for operation. Batteries are not included.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote control is ready for immediate use with compatible Sony DVD Home Theatre Systems. No additional programming or pairing is required.


3SIZEAAR6
3SIZEAAR6

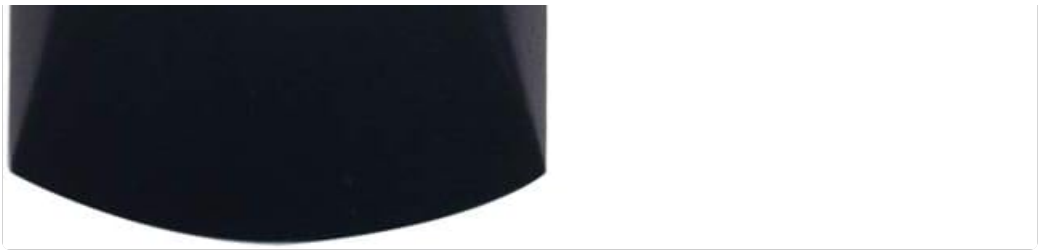


Figure 2.1: Battery compartment with batteries inserted.

3. Operating Instructions

This remote control utilizes infrared (IR) technology. For optimal performance, ensure a clear line of sight between the remote control and the IR sensor on your Sony DVD Home Theatre System.

Basic Functions:

- **Power (I/O):** Turns the system on or off.
- **Theater/One-Touch Play:** Initiates theater mode or one-touch playback.
- **TV I/O:** Controls the power of the connected television.
- **BRAVIA Sync:** Activates BRAVIA Sync functions for integrated control.
- **SLEEP:** Sets a sleep timer for the system.
- **TV VOL (+/-):** Adjusts the television volume.
- **TV INPUT:** Changes the television input source.
- **FUNCTION:** Cycles through various system functions.
- **DISC SKIP:** Skips to the next disc in a multi-disc changer.
- **DISPLAY:** Shows on-screen information.
- **PICTURE NAVI:** Navigates picture settings.
- **AUDIO:** Selects audio tracks or modes.
- **SUBTITLE:** Toggles or selects subtitle options.
- **ANGLE:** Changes the viewing angle on compatible DVDs.
- **Numeric Keypad (0-9):** Used for direct track selection, channel input, or menu navigation.
- **D.TUNING:** Digital tuning functions.
- **S-AIR MODE:** Controls S-AIR wireless functions.
- **NIGHT:** Activates night mode for audio.
- **SOUND MODE:** Selects various sound modes.
- **CLEAR:** Clears current input or selection.
- **SYSTEM MENU:** Accesses the system's main menu.
- **DYNAMIC BASS:** Enhances bass output.
- **ENTER:** Confirms selections in menus.
- **DVD TOP MENU:** Returns to the DVD's top menu.
- **DVD MENU:** Accesses the current DVD's menu.
- **MUTING:** Mutes or unmutes the audio.
- **Navigation Pad (Up, Down, Left, Right, Center):** Navigates through menus and options.
- **VOLUME (+/-):** Adjusts the system's main volume.
- **TOOLS:** Accesses additional tools or settings.
- **RETURN:** Goes back to the previous screen or menu.

- **PRESET (+/-):** Navigates through radio presets or similar functions.
- **REPLAY:** Replays a short segment.
- **ADVANCE:** Advances a short segment.
- **STEP:** Steps through content frame by frame.
- **TUNING (+/-):** Adjusts radio tuning.
- **Playback Controls (PREV, PLAY, PAUSE, NEXT, STOP, WIDE, FOOTBALL):**Standard media playback functions.



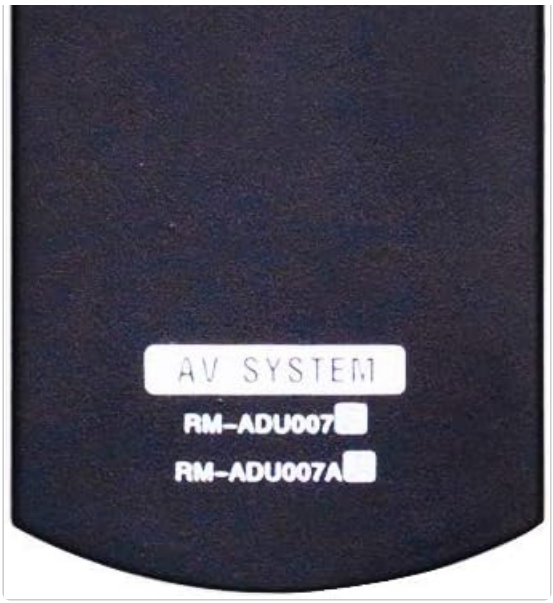


Figure 3.1: Front view of the remote control with all buttons.

4. Maintenance

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's responsiveness decreases. Old batteries left in the remote can leak and cause damage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as this can damage internal components.

5. Troubleshooting

- **Remote not responding:**
  - Ensure fresh AAA batteries are correctly installed.
  - Verify there are no obstacles between the remote control and the IR sensor on your Sony DVD Home Theatre System.
  - Confirm you are pointing the remote directly at the system's IR sensor.
- **Specific functions not working:**
  - Ensure your Sony system is powered on and correctly configured for the desired function (e.g., DVD mode for DVD controls).
  - Some advanced functions may require specific system settings or may not be supported by all compatible models.

6. Specifications

Feature	Detail
Product Dimensions	7 x 2 x 0.7 inches
Item Weight	2 ounces
Batteries Required	2 AAA batteries

Connectivity Technology	Infrared (IR)
Max Number of Supported Devices	1 (Specific Sony Home Theatre Systems)
Manufacturer	ALLIMITY INC

7. Support

If your specific Sony DVD Home Theatre System model is not listed in the compatibility section, or if you encounter any issues not covered in the troubleshooting guide, please contact ALLIMITY customer support via email for assistance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B089B4VNVJ

More documents and user manuals: **https://manuals.plus/**