Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lite Brite 02237

Lite-Brite Ultimate Value Instruction Manual

Model: 02237

1. Product Overview

The Lite-Brite Ultimate Value set is an Amazon Exclusive creative activity toy designed to inspire art and imagination. It features a classic screen, a generous supply of colorful pegs, and a reusable storage pouch. This set is suitable for ages 4 and up, offering a fun and engaging way to create illuminated designs.



Image 1.1: The Lite-Brite Ultimate Value set, including the main unit, box, bag of pegs, and design templates.

2. What's Included

Your Lite-Brite Ultimate Value package contains the following components:

- Lite-Brite Screen Unit
- 240 Colorful Pegs (in 6 different colors)
- 12 Seasonal Design Templates
- Reusable Storage Pouch for pegs



Image 2.1: A clear bag containing the 240 colorful Lite-Brite pegs.

3. Setup Instructions

1. **Unpack Components:** Carefully remove all items from the packaging. Ensure all listed components are present.
2. **Battery Installation:** The Lite-Brite unit requires 3 AA batteries (not included). Locate the battery compartment on the back of the unit. Using a Phillips head screwdriver, open the compartment, insert the batteries according to the polarity indicators (+/-), and securely close the cover.
3. **Prepare for Use:** Choose one of the 12 seasonal design templates or prepare to create your own freehand design. The unit is ready for peg insertion once batteries are installed.

4. Operating Instructions

4.1 Creating Designs

1. **Select a Template:** Choose one of the 12 seasonal templates provided. These templates are designed to fit perfectly onto the Lite-Brite screen.

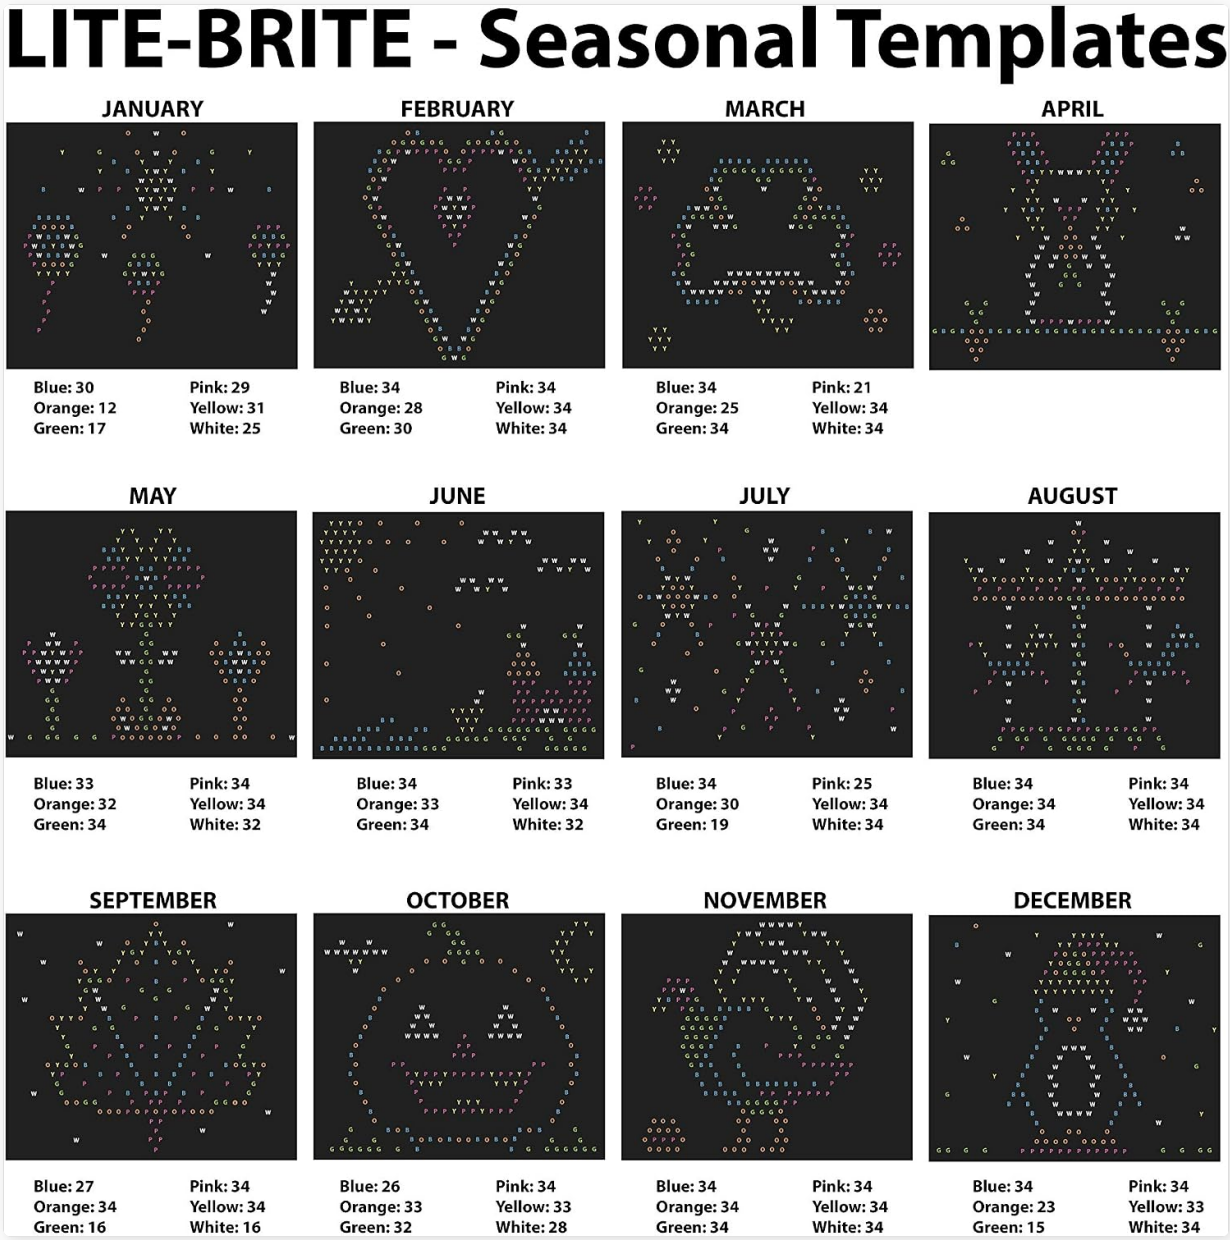


Image 4.1: The 12 seasonal design templates, each corresponding to a month of the year.

2. **Insert Template:** Place the chosen template onto the Lite-Brite screen, aligning the holes in the template with the peg holes on the screen.
3. **Insert Pegs:** Select colorful pegs from the storage pouch. Insert the pegs into the holes on the template, following the color guide or creating your own color scheme. For freehand designs, simply insert pegs directly into the screen holes to form your desired image.



Image 4.2: A completed penguin design on the Lite-Brite screen, showcasing the illuminated pegs.

4.2 Light Modes

The Lite-Brite unit features 4 different light modes to enhance your creations. Press the power button to cycle through the modes:

- **White Light:** A steady, constant white illumination.
- **Alternating Flash:** Lights flash in an alternating pattern.
- **All-Flash:** All lights flash simultaneously.
- **Rotating Flash:** Lights illuminate in a rotating sequence.

The LED lights are designed to remain cool, allowing for extended periods of creative play.

5. Maintenance

- **Cleaning:** To clean the Lite-Brite screen and unit, wipe with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Peg Storage:** Always store pegs in the provided reusable storage pouch to prevent loss and keep them organized.
- **Battery Replacement:** If the lights dim or stop working, replace the AA batteries. Ensure proper disposal of old batteries according to local regulations.

6. Troubleshooting

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity and replace with fresh AA batteries.
Lights are dim.	Batteries are low.	Replace with fresh AA batteries.
Pegs do not fit or fall out easily.	Pegs are not inserted correctly or screen/pegs are damaged.	Ensure pegs are pushed firmly into the holes. Inspect for damage.

If you encounter issues not listed here, please refer to the manufacturer's website or contact customer support.

7. Specifications

Feature	Detail
Product Dimensions	1.5 x 10 x 8 inches
Item Weight	1.4 pounds
Model Number	02237
Recommended Age	4 years and up
Batteries Required	3 AA batteries (not included)
Manufacturer	Basic Fun
Peg Quantity	240 pegs
Light Modes	4 (White Light, Alternating Flash, All-Flash, Rotating Flash)

8. Safety Information

WARNING: This product contains small parts which may pose a choking hazard. Not suitable for children under 3 years of age. Adult supervision is recommended during use.

© 2024 Lite Brite. All rights reserved.
For further assistance, visit the Lite Brite Store.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B089KTG12K

More documents and user manuals: **https://manuals.plus/**