Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HUYOSEN 7.2V 2-in-1 Cordless Hedge Trimmer

HUYOSEN 7.2V 2-in-1 Cordless Hedge Trimmer & Electric Grass Shear Instruction Manual

Model: 7.2V 2-in-1 Cordless Hedge Trimmer

Introduction Safety Instructions Main Parts Setup Operating Maintenance Troubleshooting Specifications

1. Introduction

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your HUYOSEN 7.2V 2-in-1 Cordless Hedge Trimmer and Electric Grass Shear. Please read this manual thoroughly before first use and retain it for future reference.
The HUYOSEN 7.2V 2-in-1 tool is designed for light-duty trimming and pruning tasks in small gardens, including hedge grooming and grass cutting in areas inaccessible to larger mowers. Its compact and lightweight design ensures ease of use and reduced fatigue.

2. Safety Instructions

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury. Failure to follow these instructions may result in serious injury.

General Safety

- Keep the work area clean and well-lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical Safety

- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges, and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling, or unplugging the power tool. Keep cord away from heat, oil, sharp edges, or moving parts. Damaged or entangled cords increase the risk of electric shock.

Personal Safety

- Stay alert, watch what you are doing, and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol, or medication.
- Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the tool.

Tool Use and Care

- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.
- Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.

3. Main Parts

Familiarize yourself with the components of your HUYOSEN 2-in-1 Cordless Hedge Trimmer and Electric Grass Shear.



This image displays the main components of the HUYOSEN 2-in-1 Cordless Hedge Trimmer. It includes the main unit, grass shear blade, hedge trimmer blade, blade covers, charger, and safety key. Each part is numbered for easy identification, corresponding to the list below.

1. Grass Shear Blade

2. Hedge Trimmer Blade
3. Push Rod (Safety Lock)
4. Button (Quick Release Button for blades)
5. Pouch/Guards (Blade Covers)
6. Charger
7. Children Lock (Safety Key)
8. Children Lock Hole
9. Indicator (Battery Indicator Light)
10. Charger Hole
11. Quick Release Button (for blades)

4. Setup

Charging the Battery

The tool is equipped with a built-in 7.2V lithium-ion battery. Ensure the battery is fully charged before first use.

- Locate the Charger Hole (10) on the tool.
- Connect the charger (6) to the Charger Hole.
- Plug the charger into a standard electrical outlet.
- The Indicator light (9) will show red during charging.
- When the battery is fully charged, the Indicator light will turn green.
- Charging time is approximately 3-5 hours for a full charge.



This image illustrates the charging port location on the HUYOSEN 2-in-1 Cordless Hedge Trimmer, labeled as "Charging Port".

Attaching/Changing Blades

The tool comes with two interchangeable blades: a hedge trimmer blade and a grass shear blade.



This image demonstrates the process of attaching or changing blades on the HUYOSEN 2-in-1 Cordless Hedge Trimmer. It shows the main unit and the two different blade types (hedge trimmer and grass shear) ready for installation.

1. Ensure the tool is turned off and the safety key (7) is removed before changing blades.
2. To remove a blade: Press the Quick Release Button (11) and slide the blade assembly off.
3. To attach a blade: Align the desired blade (Grass Shear Blade (1) or Hedge Trimmer Blade (2)) with the tool's housing.
4. Push the blade assembly firmly until it clicks into place. Ensure it is securely fastened.



This image displays the HUYOSEN 2-in-1 Cordless Hedge Trimmer with both the hedge cutter head and the grass cutter blade, illustrating their interchangeable design and rapid installation.

5. Operating Instructions

Starting the Tool (Three Safety Protection)

The HUYOSEN 2-in-1 tool features a unique double lock design for safety, requiring specific steps to start operation.



This image illustrates the three-step safety boot process for the HUYOSEN 2-in-1 Cordless Hedge Trimmer, showing the insertion of the safety plug, pressing the side safety lock, and then pressing the start switch.

1. **Insert the Safety Key:** Insert the Children Lock (Safety Key) (7) into the Children Lock Hole (8). The tool will not operate without the safety key inserted.
2. **Press the Safety Lock:** Press and hold the Push Rod (Safety Lock) (3) located on the side of the handle.
3. **Press the On/Off Switch:** While holding the Push Rod (3), press the main On/Off Switch (trigger) to start the tool. Release the On/Off Switch to stop the tool.

Note: The Push Rod (Safety Lock) must be held down continuously while operating the tool. Releasing it will stop the tool.

Checking Battery Indicator Light

To check the battery level, press and hold the main On/Off Switch (trigger). If the Indicator light (9) near the children lock turns green, the battery has sufficient power. If it does not turn green, the battery is low and requires charging.

Using the Hedge Trimmer Blade

Attach the Hedge Trimmer Blade (2) for pruning and shaping shrubs, bushes, and small branches.

▶ **Watch video online**

HUYOSEN 7.2V 2-in-1 Cordless Hedge Trimmers

This video demonstrates the HUYOSEN 7.2V 2-in-1 Cordless Hedge Trimmer in action, showing how to attach the hedge trimmer blade, insert the safety key, and effectively trim hedges. It highlights the tool's ease of use and cutting capability for shrubbery.

- Hold the tool firmly with both hands if necessary, ensuring a stable grip.
- Move the blade smoothly and evenly across the hedge or shrub.
- Avoid cutting branches thicker than the recommended capacity to prevent damage to the blade or motor.
- Work in a controlled manner, taking breaks as needed.




This image shows a person using the HUYOSEN 2-in-1 Cordless Hedge Trimmer to prune a hedge, demonstrating its application for shaping and maintaining shrubs.

Using the Grass Shear Blade

Attach the Grass Shear Blade (1) for trimming grass in tight spaces or along edges.

- Hold the tool at a comfortable angle, keeping the blade parallel to the ground for even cutting.
- Move the tool slowly and steadily through the grass.
- Be careful around obstacles such as rocks, fences, or delicate plants.

MAIN PARTS

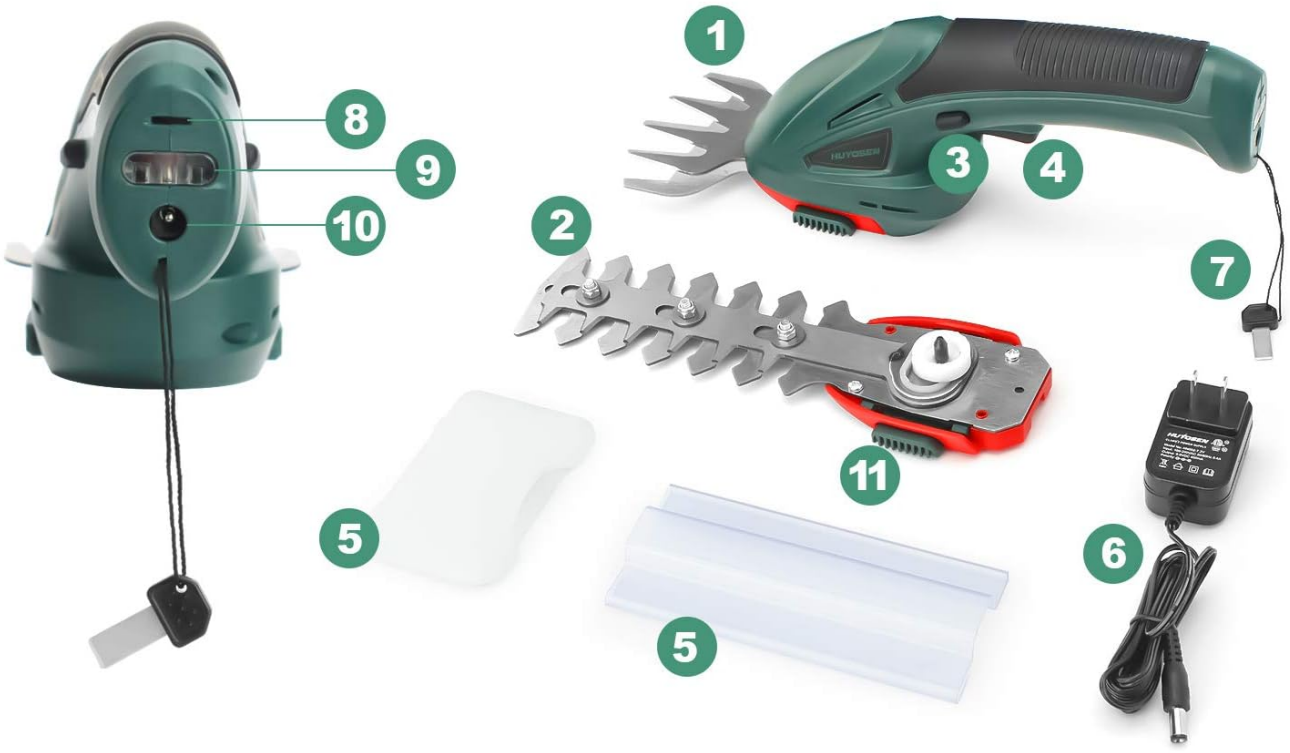

1. Grass Shear Blade
2. Hedge Trimmer Blade
3. Push Rod
4. Button
5. Pouch/Guards
6. Charger
7. Children Lock
8. Children Lock Hole
9. Indicator
10. Charger Hole
11. Quick Release Button

This image depicts a person using the HUYOSEN 2-in-1 Cordless Hedge Trimmer with the grass shear blade to trim grass, showcasing its utility for lawn maintenance in hard-to-reach areas.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your tool.

Cleaning

- Always disconnect the safety key and ensure the tool is off before cleaning.
- Clean the blades after each use to remove sap, leaves, and debris. Use a stiff brush and a damp cloth.
- Apply a light coat of machine oil to the blades to prevent rust and ensure smooth operation.
- Wipe down the tool's housing with a clean, damp cloth. Do not use harsh chemicals or abrasive cleaners.

Storage

- Store the tool in a dry, secure place, out of reach of children.
- Use the provided blade covers (5) to protect the blades during storage.
- Ensure the battery is partially charged (not fully depleted or fully charged for extended periods) before storing for long durations.

7. Troubleshooting

This section addresses common issues you might encounter with your HUYOSEN 2-in-1 Cordless Hedge Trimmer and Electric Grass Shear.

Problem	Possible Cause	Solution
Tool does not start.	Battery is depleted.	Charge the battery for 3-5 hours until the indicator light turns green.
	Safety key (7) is not inserted.	Insert the safety key firmly into the Children Lock Hole (8).
	Push Rod (Safety Lock) (3) is not pressed.	Ensure the Push Rod (3) is pressed and held while pressing the On/Off Switch.
Blades are not cutting effectively.	Blades are dull or dirty.	Clean blades and apply lubricant. If dull, consider professional sharpening or blade replacement.
	Material being cut is too thick.	Do not attempt to cut branches exceeding the tool's capacity. Use appropriate pruning tools for thicker material.
Tool stops during operation.	Battery is depleted.	Recharge the battery.
	Overload protection activated.	Reduce the load on the tool. Allow it to cool down if it feels hot.

8. Specifications

Feature	Detail
Brand	HUYOSEN
Model	7.2V 2-in-1 Cordless Hedge Trimmer
Power Source	Battery Powered (7.2V Lithium-Ion built-in)
No-Load Speed	1100 rpm
Hedge Shear Blade Length	120 mm (approx. 4.7 inches)
Grass Shear Blade Width	90 mm (approx. 3.5 inches)
Blade Material	SK5 High Carbon Steel
Battery Life (Continuous)	Approx. 40 minutes
Charging Time	3-5 hours

Feature	Detail
Item Weight	0.92 Kilograms (approx. 2.03 lbs)
Material Type (Body & Handle)	Plastic

9. Warranty and Support

Information regarding product warranty and customer support is typically provided with your purchase documentation or on the manufacturer's official website. Please refer to those resources for details on warranty coverage, service, and technical assistance.

© 2023 HUYOSEN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08B892G7J

More documents and user manuals: **https://manuals.plus/**