Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Acrolay B08C2HMLTR

Acrolay Acrylic Display Risers Instruction Manual

Model: B08C2HMLTR

1. Introduction

Thank you for choosing Acrolay Acrylic Display Risers. These clear acrylic stands are designed to elevate and showcase your items, creating an organized and visually appealing display. This manual provides essential information for the proper setup, use, and care of your display risers.



Image 1.1: Acrolay Acrylic Display Risers (Two Sets)

2. Safety Information

Please read and understand the following safety guidelines before using the product:

- Handle with care to avoid dropping or striking the risers, which could cause damage or breakage.
- Keep out of reach of small children to prevent accidental injury.
- Do not place excessively heavy items on the risers, as this may compromise their stability and cause them to tip over.
- Avoid exposing the risers to extreme temperatures or direct heat sources, which can cause warping or damage to the acrylic material.

3. Package Contents

Your Acrolay Acrylic Display Risers package includes:

- Two (2) sets of acrylic display risers. Each set contains three risers of varying sizes:
  - One (1) 3x3x3 inch riser
  - One (1) 4x4x4 inch riser
  - One (1) 5x5x5 inch riser
- Protective film applied to all surfaces of each riser.

4. Setup

Before using your Acrolay Acrylic Display Risers, you must remove the protective film from all surfaces. This film is applied to prevent scratches during shipping.

1. Locate the small green tabs or edges of the protective film on each riser.
2. Gently peel the film away from the acrylic surface. Ensure all film is removed from both the inside and outside surfaces of each riser.



Image 4.1: Removing the Protective Film

The following video demonstrates the process of removing the protective film and arranging the risers:

▶ **Watch video online**
Acrylic Display Riser

Video 4.1: Acrolay Acrylic Display Riser Setup Guide. This video demonstrates how to remove the protective film from the risers and arrange them for display.

5. Operating Instructions

Acrolay Acrylic Display Risers are versatile and can be used in various configurations to enhance your displays. Their clear design creates a 'floating' effect, drawing attention to the items placed on them.

5.1 Arranging Your Risers

You can arrange the risers in multiple ways to create different levels and visual interest. Use them individually or stack them to achieve desired heights. The two sets provide flexibility for larger displays or multiple smaller arrangements.

5.2 Displaying Items

These risers are suitable for a wide range of items, including:

- **Collectibles:** Funko Pop figures, Nendoroids, Amiibos, small statues, and other memorabilia.
- **Desserts:** Cupcakes, pastries, and small cakes for candy tables or party displays.
- **Jewelry:** Necklaces, bracelets, rings, and earrings.
- **Cosmetics & Perfumes:** Organize and elevate beauty products.
- **Small Arts & Crafts:** Showcase handmade items or small decorative pieces.



Image 5.1: Displaying Collectibles



Image 5.2: Displaying Cupcakes



Image 5.3: Displaying Jewelry

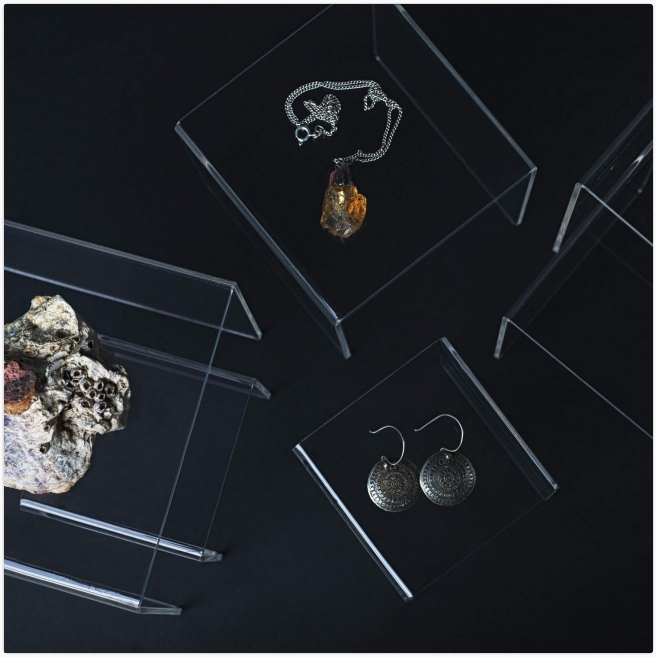


Image 5.4: Overhead View of Jewelry Display

6. Maintenance

To keep your Acrolay Acrylic Display Risers looking their best, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth and mild soap and water to clean the risers. Avoid abrasive cleaners, ammonia-based products (like window cleaner), or rough sponges, as these can scratch the acrylic surface.
- **Drying:** Gently wipe dry with a clean, soft cloth to prevent water spots.
- **Scratch Prevention:** Although the risers are designed to be durable, avoid dragging sharp or rough objects across their surface.

7. Troubleshooting

If you encounter any issues with your display risers, consider the following:

- **Unstable Display:** Ensure the risers are placed on a flat, stable surface. Distribute the weight of displayed items

evenly.

- **Scratches:** Minor scratches can sometimes be buffed out with specialized acrylic polish. For deeper scratches, replacement may be necessary.
- **Cloudiness/Dullness:** This is often caused by improper cleaning agents. Refer to the 'Maintenance' section for correct cleaning procedures.

For further assistance, please contact Acrolay customer support.

8. Specifications

Feature	Detail
Brand	Acrolay
Model Number	B08C2HMLTR
Material	Acrylic
Color	Clear
Finish Type	Polished
Package Dimensions	6.26 x 6.18 x 6.1 inches
Item Weight	1.48 pounds
Assembly Required	No
UPC	757817718061

9. Warranty and Support

For information regarding warranty coverage or to obtain customer support, please refer to the product packaging or contact Acrolay directly through their official website or customer service channels. Please have your model number (B08C2HMLTR) available when contacting support.

© 2023 Acrolay. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08C2HMLTR

More documents and user manuals: **https://manuals.plus/**