Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEXiBOOK ROB90EN

LEXiBOOK Powerman Kid Robot Instruction Manual

Model: ROB90EN

Introduction

The LEXiBOOK Powerman Kid is an educational and interactive robot designed to engage children through various activities. This bilingual robot speaks both English and Spanish, offering a rich learning experience. It features programming capabilities, interactive quizzes, storytelling, music, dancing, and even the ability to shoot soft foam discs. This manual provides essential information for setting up, operating, and maintaining your Powerman Kid robot.

Important Safety Information

- **Age Restriction:** Not suitable for children under 3 years.
- **Choking Hazard:** Contains small parts. Keep away from young children who may put objects in their mouths.
- **Disc Safety:** Do not aim discs at eyes or face. Use only the provided soft foam discs.
- **Battery Safety:** Always follow battery installation and usage guidelines. Do not mix old and new batteries, or different types of batteries. Remove batteries if the toy is not used for a long period.

Package Contents

Please ensure all items are present in the package:

- 1 x LEXiBOOK Powerman Kid Robot
- 1 x Remote Control
- 1 x Instruction Manual (this document)

- 9 x Foam Discs

Note: 3 LR6/AA batteries for the robot are included for "Try-me" mode. 2 LR6/AA batteries for the remote are not included.

Setup

Battery Installation

The Powerman Kid robot and its remote control require batteries for operation. Please follow these steps carefully:

1. **Robot Battery Installation:**
   - Locate the battery compartment on the back of the robot.
   - Using a screwdriver (not included), open the battery compartment cover.
   - Insert 5 x LR6/AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
   - Replace the cover and secure it with the screw.
2. **Remote Control Battery Installation:**
   - Locate the battery compartment on the back of the remote control.
   - Using a screwdriver (not included), open the battery compartment cover.
   - Insert 2 x LR6/AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
   - Replace the cover and secure it with the screw.

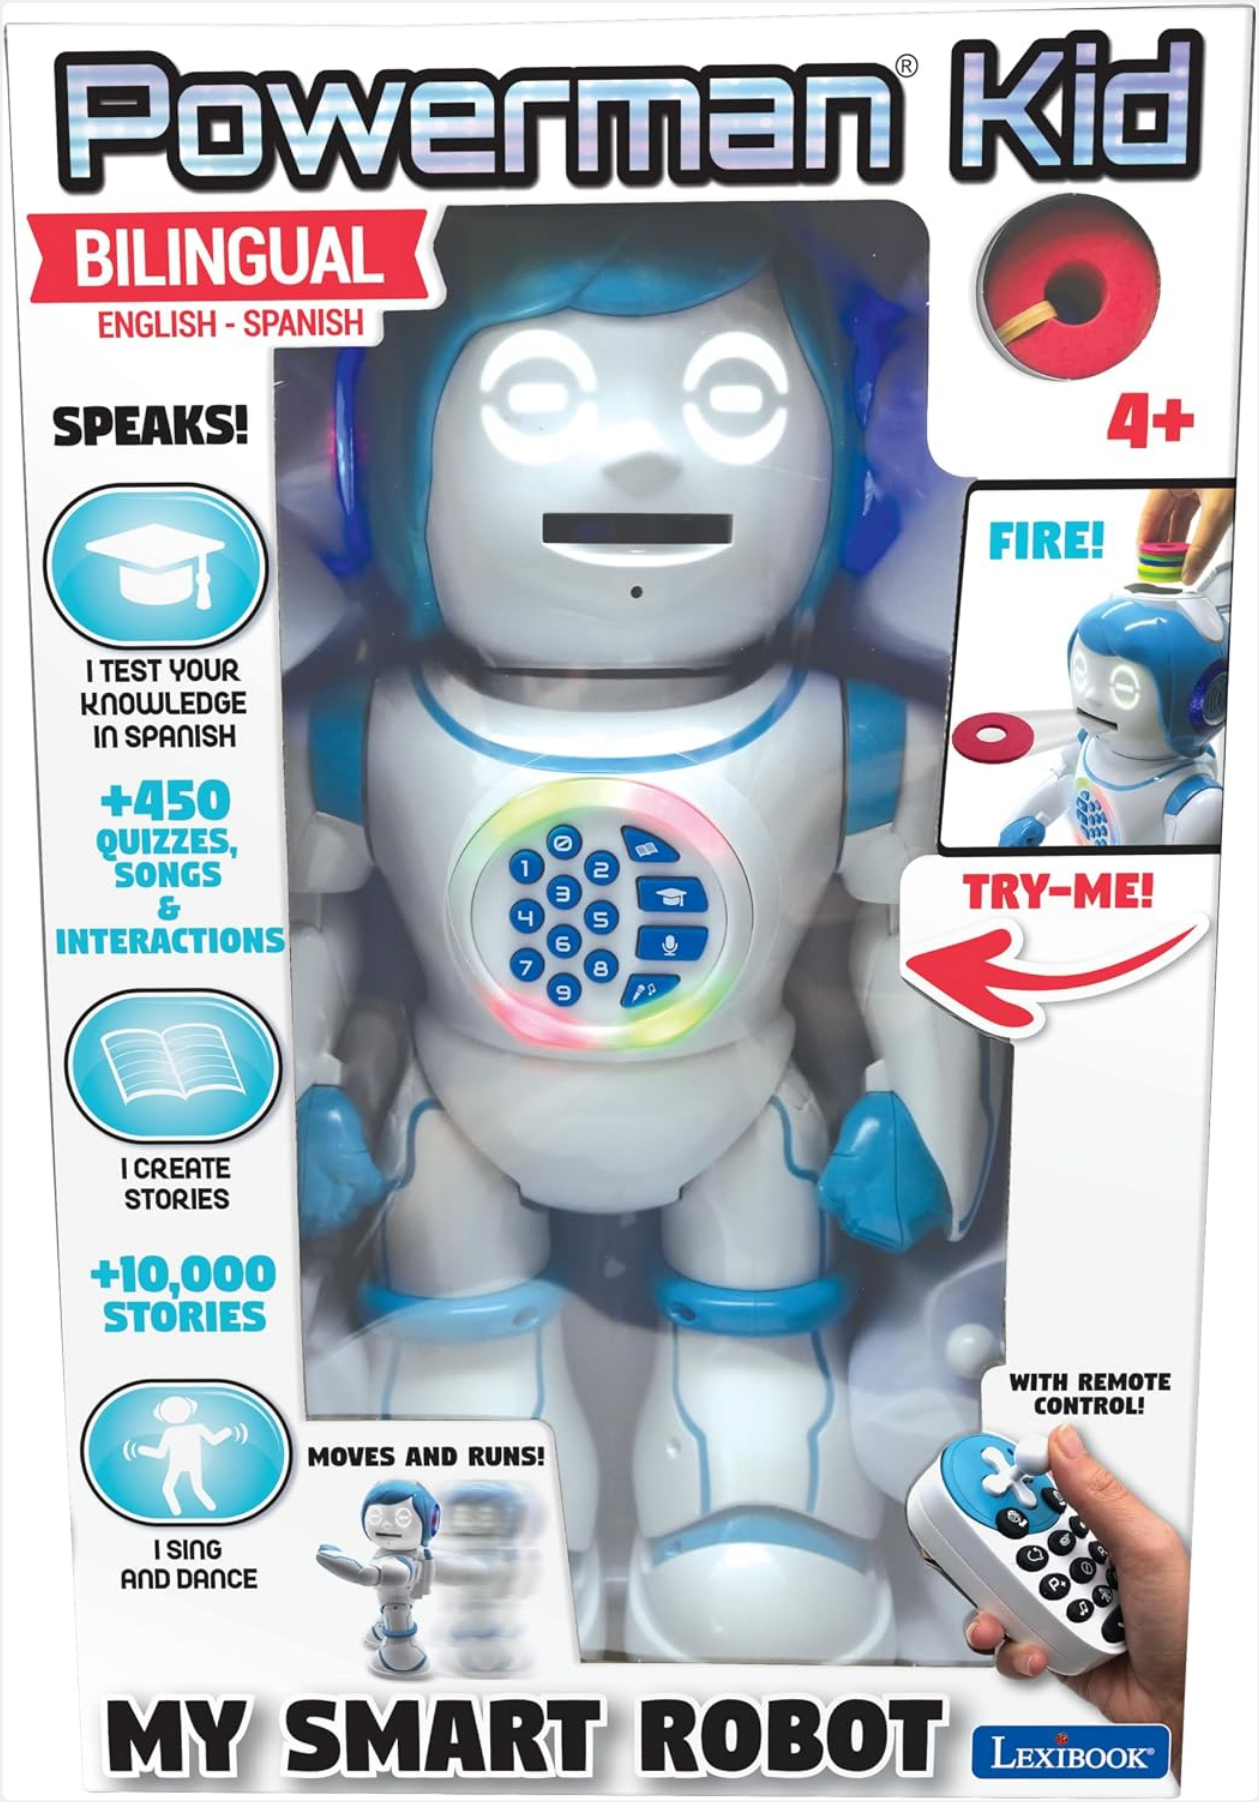


Image: The Powerman Kid robot standing next to its remote control, illustrating the two main components.

Operating Instructions

Turning On/Off

To turn on the Powerman Kid robot, locate the power switch on its back and slide it to the "ON" position. To turn it off, slide the switch to the "OFF" position.

Remote Control Functions

The remote control allows you to command the robot's movements and activate its various features. The remote features a joystick for directional control and multiple buttons for specific functions.



Image: A close-up view of the Powerman Kid remote control, highlighting its joystick and various function buttons.

- **Movement:** Use the joystick to control the robot's forward, backward, left, and right movements.
- **Programming:** The robot supports programming sequences of actions. Refer to the remote control's specific programming buttons (e.g., P+, P) to create and save choreographies.

Key Features and Activities

- **Bilingual Interaction:** The robot is fully English/Spanish speaking. It can talk, tell jokes, and play music in both languages.
- **Interactive Quizzes:** Engage with over 450 quizzes covering grammar, numbers, animals, locations, and more.
- **Story Maker:** Utilize the Story Maker function to create up to 10,000 unique and entertaining stories. The robot also includes 8 Aesop's fables for bedtime.
- **STEM Programming:** Discover the logic of programming by creating and saving custom choreographies with music.
- **Music & Dance:** Enjoy the robot's various music tracks and watch it perform dance routines.
- **Karaoke & Recording:** Use the playback and recording function for the robot to repeat what you say in its fun robot voice. It can memorize and reuse phrases, and even repeat them in karaoke mode.
- **Foam Disc Shooting:** The robot can shoot soft, colored foam discs. To load, insert the discs into the

designated slot on the robot's head.



Image: A hand is shown inserting colorful foam discs into the top of the Powerman Kid robot's head, preparing it for disc shooting.

Maintenance

- **Cleaning:** Wipe the robot and remote control with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the robot and its accessories in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the robot will not be used for an extended period to prevent leakage and damage.

Troubleshooting

Problem	Possible Cause	Solution
Robot does not turn on.	Batteries are low or incorrectly installed.	Check battery polarity. Replace all batteries with new ones. Ensure power switch is ON.
Remote control not responding.	Remote batteries are low or incorrectly installed. Robot is out of range.	Check remote battery polarity. Replace remote batteries. Ensure robot is within operating range.

Problem	Possible Cause	Solution
Foam discs are not shooting.	Discs are jammed or not loaded correctly.	Ensure discs are properly inserted into the slot. Check for any obstructions.
Robot's voice is distorted or unclear.	Low batteries.	Replace robot batteries.

Specifications

- **Product Dimensions:** 8.7 x 5.51 x 15.75 inches
- **Item Weight:** 2.42 pounds
- **Model Number:** ROB90EN
- **Manufacturer Recommended Age:** 3 years and up
- **Power Supply (Robot):** 5 x LR6/AA batteries (3 included for Try-me mode)
- **Power Supply (Remote):** 2 x LR6/AA batteries (not included)

Warranty and Support

For warranty information, technical support, or replacement parts, please contact LEXiBOOK customer service. Details can typically be found on the product packaging or the official LEXiBOOK website.

You may visit the LEXiBOOK Store on Amazon for more information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08CB96CQ4

More documents and user manuals: **https://manuals.plus/**