Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Metz 32MTB2000

Metz LED HD TV MTB2000 User Manual

Model: 32MTB2000

Introduction

This user manual provides essential information for the proper setup, operation, and maintenance of your Metz LED HD TV, model MTB2000. Please read this manual thoroughly before using the television to ensure safe and efficient operation. Keep this manual for future reference.

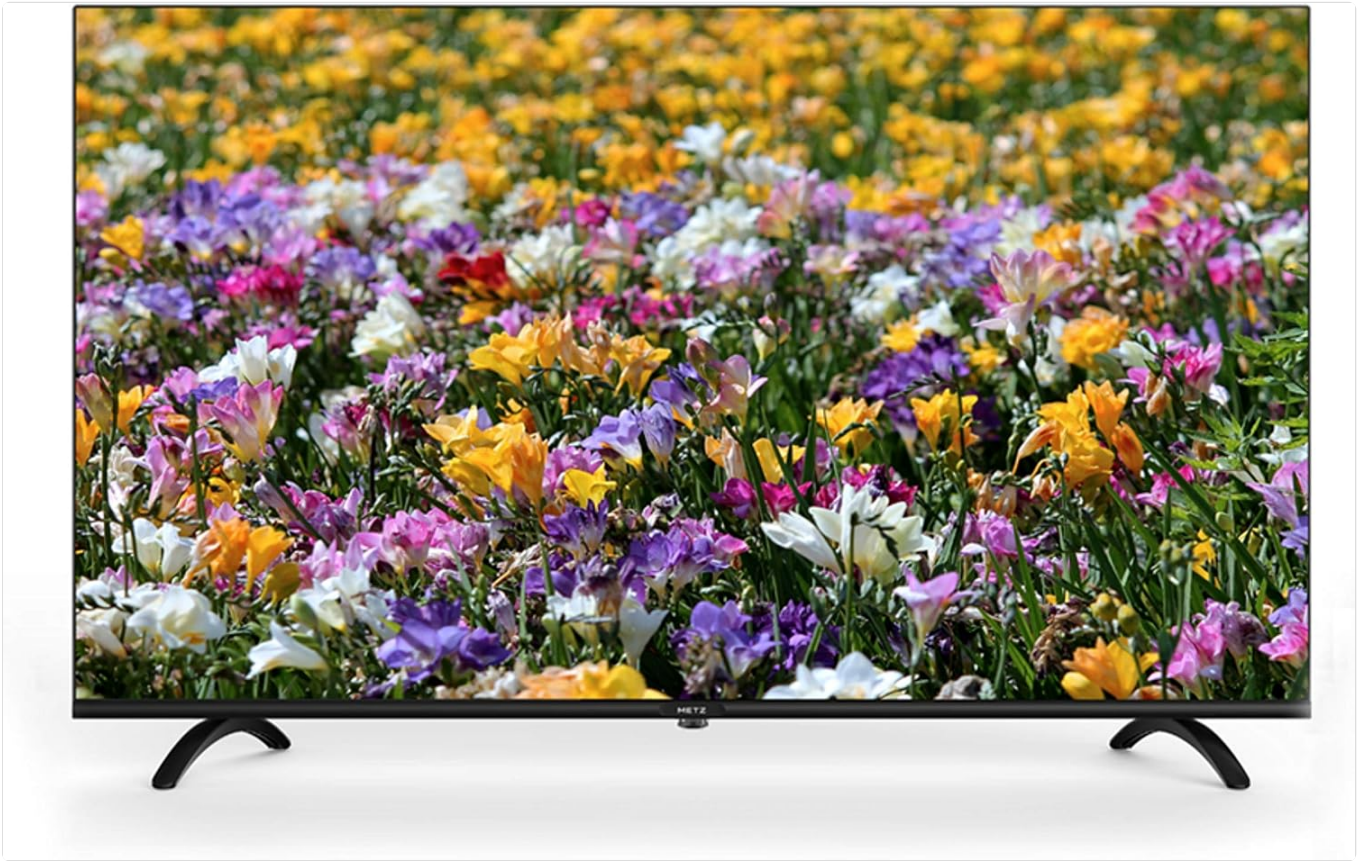

Figure 1: Front view of the Metz LED HD TV MTB2000, showcasing its sleek design and display.

Product Features

The Metz LED HD TV MTB2000 is designed to provide a high-quality viewing experience with a range of convenient

features:

- **Display:** 32-inch LED HD display with 1080p resolution.
- **Refresh Rate:** 60 Hz for smooth motion.
- **Connectivity:** Multiple hardware interfaces including AV Port, HDMI, and USB for versatile device connections.
- **Compact Design:** Lightweight at 3.6 kg, suitable for various living spaces.

Setup

Follow these steps to set up your Metz LED HD TV:

1. **Unpacking:** Carefully remove the TV and all accessories from the packaging. Retain the packaging for future transport or storage.
2. **Attaching the Stand:** Place the TV screen-down on a soft, flat surface. Align the stand with the designated slots on the bottom of the TV and secure it with the provided screws. Ensure the stand is firmly attached.
3. **Connecting Power:** Plug the power cord into the TV's power input, then plug the other end into a wall outlet.
4. **Connecting External Devices:** Use the available ports (HDMI, AV, USB) to connect your external devices such as set-top boxes, gaming consoles, or USB drives. Refer to the device's manual for specific connection instructions.



Figure 2: Angled view of the TV, illustrating the placement of various input ports for connecting external devices.

Initial Setup

Upon first power-on, the TV will guide you through an initial setup process. This typically includes:

- Language selection.
- Country/Region selection.
- Channel scanning (for antenna/cable connections).
- Time and date settings.

Operating

This section covers the basic operation of your Metz LED HD TV.

Remote Control Overview

The remote control allows you to access all TV functions. Familiarize yourself with the main buttons:

- **Power Button:** Turns the TV on or off.
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes TV channels.
- **Input/Source:** Selects the input source (HDMI, AV, USB, TV).
- **Menu:** Opens the main menu for settings and options.
- **Navigation Buttons (Arrows/OK):** Used to navigate through menus and confirm selections.

Basic Functions

- **Turning On/Off:** Press the Power button on the remote or the TV.
- **Changing Input Source:** Press the 'Input' or 'Source' button on the remote and select the desired input (e.g., HDMI 1, AV).
- **Adjusting Settings:** Press the 'Menu' button to access picture, sound, and other system settings. Use the navigation buttons to browse and 'OK' to select.



Figure 3: The Metz TV integrated into a home environment, demonstrating its operational presence.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your TV.

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth specifically designed for electronics. For stubborn marks, slightly dampen the cloth with water or a screen cleaner, then wipe dry immediately. Avoid using harsh chemicals, abrasive cloths, or spraying liquid directly onto the screen.
- **Cleaning the Body:** Use a soft, dry cloth to wipe the TV's casing. Do not use solvents or alcohol-based cleaners.
- **Ventilation:** Ensure the ventilation openings on the TV are not blocked. Adequate airflow is crucial to prevent overheating.
- **Storage:** If storing the TV for an extended period, disconnect it from power, pack it in its original packaging if possible, and store in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

This section addresses common issues you might encounter and their potential solutions.

Problem	Possible Cause	Solution
No Power	Power cord disconnected; Power outlet issue.	Check power cord connection; Test outlet with another device.
No Picture, but Sound is Present	Incorrect input source selected; External device issue.	Press 'Input/Source' button to select correct source; Check external device connection and power.
No Sound, but Picture is Present	Volume too low or muted; Audio cable issue.	Increase volume or unmute; Check audio cable connections.
Remote Control Not Working	Batteries depleted or incorrectly inserted; Obstruction between remote and TV.	Replace batteries; Ensure clear line of sight to TV's IR sensor.

If the problem persists after trying these solutions, please refer to the Warranty and Support section for further assistance.

Specifications

Detailed technical specifications for the Metz LED HD TV MTB2000:

Specification	Value
Model	32MTB2000
Model Year	2020
Display Technology	LED
Screen Size	32 Inches

Specification	Value
Resolution	1080p
Refresh Rate	60 Hz
Hardware Interfaces	AV Port, HDMI, USB
Voltage	240 Volts
Item Weight	3.6 Kilograms
Package Dimensions	80 x 55 x 15 cm

Warranty and Support

Your Metz LED HD TV MTB2000 comes with a standard manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including coverage period and limitations.
For technical support, service, or warranty claims, please contact Metz customer service. Contact information can typically be found on the manufacturer's official website or on the product packaging.
When contacting support, please have your TV's model number (32MTB2000) and serial number ready. The serial number is usually located on a sticker on the back of the TV.

© 2020 Metz. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08CZYBZZF

More documents and user manuals: **https://manuals.plus/**