Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Uniflasy grill-burners

Uniflasy Grill Replacement Parts User Manual

For Nexgrill 720 Series Gas Grills (5-Piece Stainless Steel Kit)

1. Introduction

Thank you for choosing Uniflasy Grill Replacement Parts. This kit is designed to restore the performance of your gas grill by replacing worn-out components. This manual provides essential information for safe installation, proper operation, and effective maintenance of your new parts.
This 5-piece stainless steel kit includes:

- 5 Heat Plates
- 5 Burner Pipes
- 5 Grill Igniters

Compatibility: These replacement parts are compatible with various Nexgrill 720 series gas grill models, including but not limited to:

- Nexgrill 720-0888, 720-0888N, 720-0830H, 720-0830A, 720-0830X, 720-0864, 720-0864M, 720-0882S, 720-0888A, 720-0894F, 720-0896CA, 720-0958A
- Members Mark 720-0882D
- Backyard 720-0888M
- BBQ Pro 122.47207610, 122.57901710, 720-0894R

NOTE: Always measure your original parts and compare them with the specifications provided before ordering to ensure proper fit.



Image: Uniflasy 5-piece grill replacement kit, including burner tubes and heat plates.

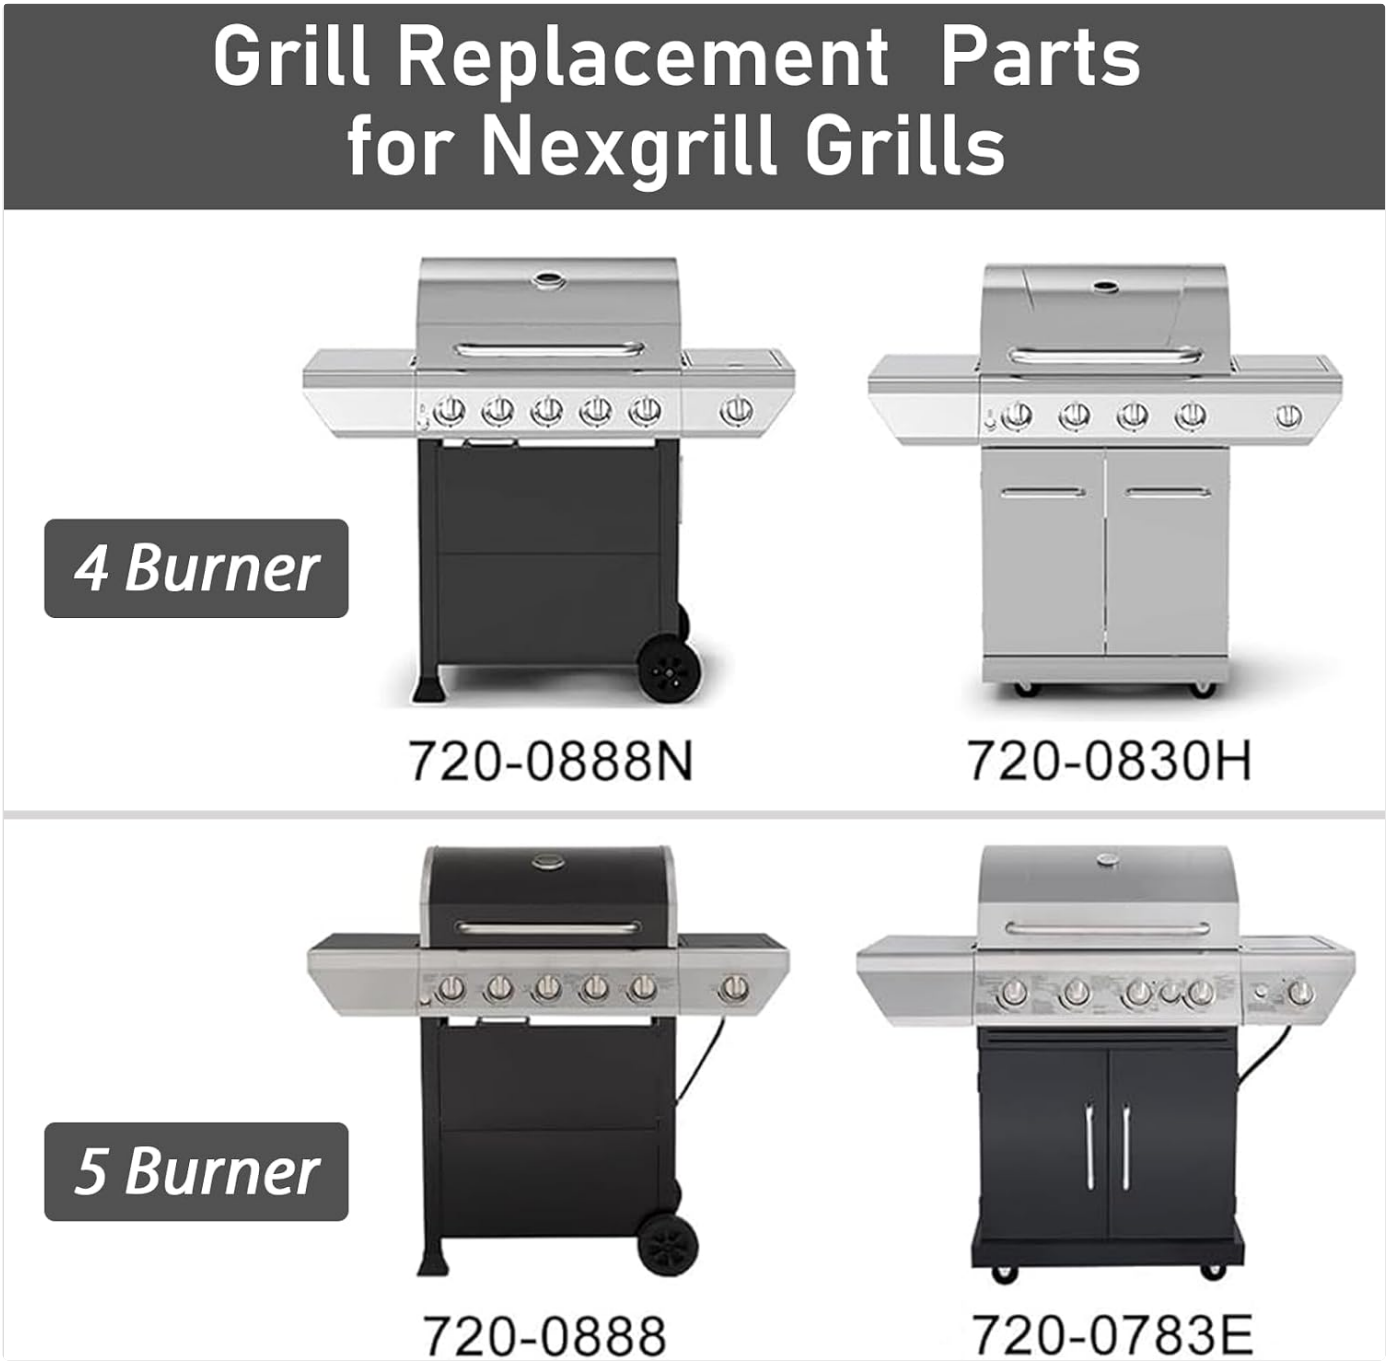


Image: Visual guide to compatible Nexgrill 4 and 5 burner grill models.

2. Safety Information

Before beginning any installation or maintenance, ensure your grill is completely cool and disconnected from its fuel source (propane tank or natural gas line). Wear appropriate safety gear, such as gloves, to protect your hands from sharp edges or rust.

- Always turn off the gas supply at the source before working on the grill.
- Allow the grill to cool completely before handling any parts.
- Inspect gas lines and connections for leaks after reassembly.
- Keep children and pets away from the grill during installation and operation.

3. Setup and Installation

Replacing your grill's internal components can significantly improve its performance. This kit includes all necessary

hardware, such as screws for securing burners and mounting igniter electrodes.

General Installation Steps:

1. **Preparation:** Ensure the grill is off, cool, and disconnected from the gas supply. Remove cooking grates and existing heat plates.
2. **Remove Old Burners:** Carefully detach the old burner tubes and igniters. Note their orientation for correct reinstallation.
3. **Install New Burners:** Position the new burner pipes, ensuring they align correctly with the gas valves and rear supports. Secure them using the provided screws.
4. **Connect Igniters:** Attach the new igniter electrodes to each burner. The igniter cables are 31.5 inches long, providing ample reach for connection.
5. **Place Heat Plates:** Install the new heat plates over the burner tubes. These plates help distribute heat evenly and prevent flare-ups.
6. **Final Check:** Reinstall cooking grates. Reconnect the gas supply and perform a leak test before lighting the grill.



Image: New burner tubes properly installed within the grill.



Image: Heat plates positioned above the burner tubes.



Image: Igniter cable connection to a burner, designed for easy installation.

Your browser does not support the video tag.

Video: A detailed guide on installing grill accessories for Nexgrill 720 Series models.

4. Operating the Grill with New Parts

Once installed, these replacement parts will help your grill operate efficiently. The stainless steel burner tubes ensure consistent flame distribution, while the heat plates provide even heat across the cooking surface and protect the burners from dripping grease, reducing flare-ups.

First Use:

1. After installation and leak testing, open the grill lid.
2. Turn on the gas supply.
3. Ignite the burners according to your grill's manufacturer instructions.

4. Allow the grill to preheat for 10-15 minutes to burn off any manufacturing residues.

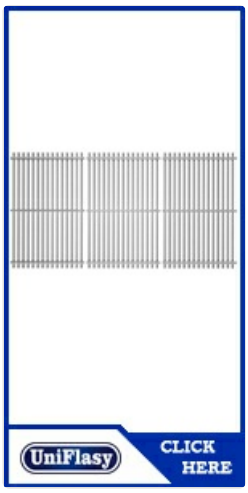


Image: Heat plates with flames, illustrating effective heat distribution.

5. Maintenance

Regular maintenance of your grill replacement parts will extend their lifespan and ensure optimal grilling performance.

- **Burner Tubes:** It is recommended to replace burner tubes annually to maintain consistent heat and prevent uneven cooking.
- **Heat Plates:** Heat shields should be replaced every year. You can choose between porcelain or stainless steel options based on your preference.
- **Igniters:** Replace igniters every 6 months to ensure reliable ignition.
- **Cleaning:** Regularly clean the burner tubes and heat plates to remove grease and food debris. Use a grill brush for grates and a soft brush for burners.
- **Inspection:** Periodically inspect all components for signs of wear, corrosion, or damage. Replace any compromised parts promptly.



Image: A clean heat plate, demonstrating its smooth surface for easy maintenance.

6. Troubleshooting

If you encounter issues after installing your replacement parts, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Uneven heating	Clogged burner ports or improperly seated heat plates.	Clean burner ports with a wire brush. Ensure heat plates are correctly positioned.

Problem	Possible Cause	Solution
Burner not igniting	Faulty igniter, loose igniter cable, or gas flow issue.	Check igniter cable connections. Ensure igniter sparks. Verify gas flow to the burner. Replace igniter if necessary.
Low flame or yellow flame	Obstruction in burner tube or gas orifice.	Clean burner tubes and orifices. Ensure proper gas pressure.
Excessive flare-ups	Grease buildup or improperly installed heat plates.	Clean heat plates and grill interior thoroughly. Ensure heat plates are correctly positioned to deflect grease.

7. Specifications

Detailed specifications for the Uniflasy Grill Replacement Parts:

- **Burner Dimensions:** 14 7/8 inches (L) x 1 inch (Dia)
- **Burner Material:** High Hardness Stainless Steel
- **Heat Plate Dimensions:** 14.6 inches (L) x 4.3 inches (W) x 1.4 inches (H)
- **Heat Shield Material:** Stainless Steel
- **Igniter Cable Length:** 31.5 inches
- **Item Weight:** Approximately 5.48 pounds (for the 5-piece kit)
- **Product Dimensions (Packaging):** 15 x 2 x 2 inches



Image: Detailed dimensions of the burner tube and heat plate.



Image: Features of the stainless steel burner tube, including high hardness and rust resistance.

8. Warranty and Support

Uniflasy products are designed for quality and durability. For any questions regarding installation, compatibility, or product performance, please contact our customer support. We are committed to providing assistance to ensure your satisfaction.
Return Policy: This product is typically eligible for a 30-day refund/replacement policy. Please refer to your purchase platform for specific return details.
Contact: For further assistance, please reach out to the seller, BBQMall Direct, through the platform where you made your purchase.

© 2026 Uniflasy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08DXNHB47

More documents and user manuals: **https://manuals.plus/**