Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEXiBOOK DOG01

LEXiBOOK Power Puppy DOG01 Smart Robot Dog User Manual

Your Guide to Setup, Operation, and Fun with Your Robotic Companion

1. Introduction

Welcome to the world of the LEXiBOOK Power Puppy DOG01, your new smart robot dog. This manual provides detailed instructions to help you set up, operate, and enjoy all the features of your programmable robotic companion. The Power Puppy is designed for interactive play, featuring remote control, gesture control, and various programmable tricks and light effects.



Image 1.1: The LEXiBOOK Power Puppy DOG01, its remote control, and product packaging.

2. Setup and Battery Installation

Before operating your Power Puppy, ensure all necessary batteries are correctly installed.

2.1. Power Puppy Battery

The Power Puppy operates on a rechargeable battery. Locate the battery compartment on the underside of the robot. Open the compartment, insert the rechargeable battery, and securely close the cover. Ensure the battery is fully charged before first use. Refer to the charging cable instructions for proper charging procedures.

2.2. Remote Control Batteries

The remote control requires 2 AA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Using a small screwdriver, open the battery compartment cover.
3. Insert 2 new AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and tighten the screw.

3. Operating Your Power Puppy

Your Power Puppy offers multiple ways to interact and perform various actions.

3.1. Remote Control Functions

Use the provided remote control to direct your Power Puppy. Familiarize yourself with the buttons for movement, tricks, and sound effects.

- **Movement:** Use the directional buttons to move the puppy forward, backward, left, and right.
- **Tricks:** Press specific buttons to make the puppy perform actions such as sitting, lying down, begging, saying hello, playing dead, or doing push-ups.
- **Sound & Light Effects:** Activate various sounds and light effects, including LED eye lights and necklace lights.
- **Learning Numbers:** The puppy can bark to teach numbers.



Image 3.1: A child operating the Power Puppy using the remote control.

3.2. Gesture Control

The Power Puppy responds to hand gestures. Wave your hand in front of its sensors to initiate movement or specific actions. Experiment with different gestures to discover all its capabilities.



Image 3.2: Demonstrating gesture control, where the puppy reacts to hand movements.

3.3. Training and Programming Function

Utilize the training function to program new sequences of dances and movements. Follow the instructions in the remote control section to enter programming mode and record your desired actions. The Power Puppy will then execute the programmed sequence.

3.4. Tactile Interaction

The Power Puppy is equipped with tactile sensors. Gently caress its head, and it may react by dancing or performing other endearing actions.

3.5. Follow-Me Function

Activate the "Follow-me" function, and your Power Puppy will attempt to follow you as you move, staying by your side.

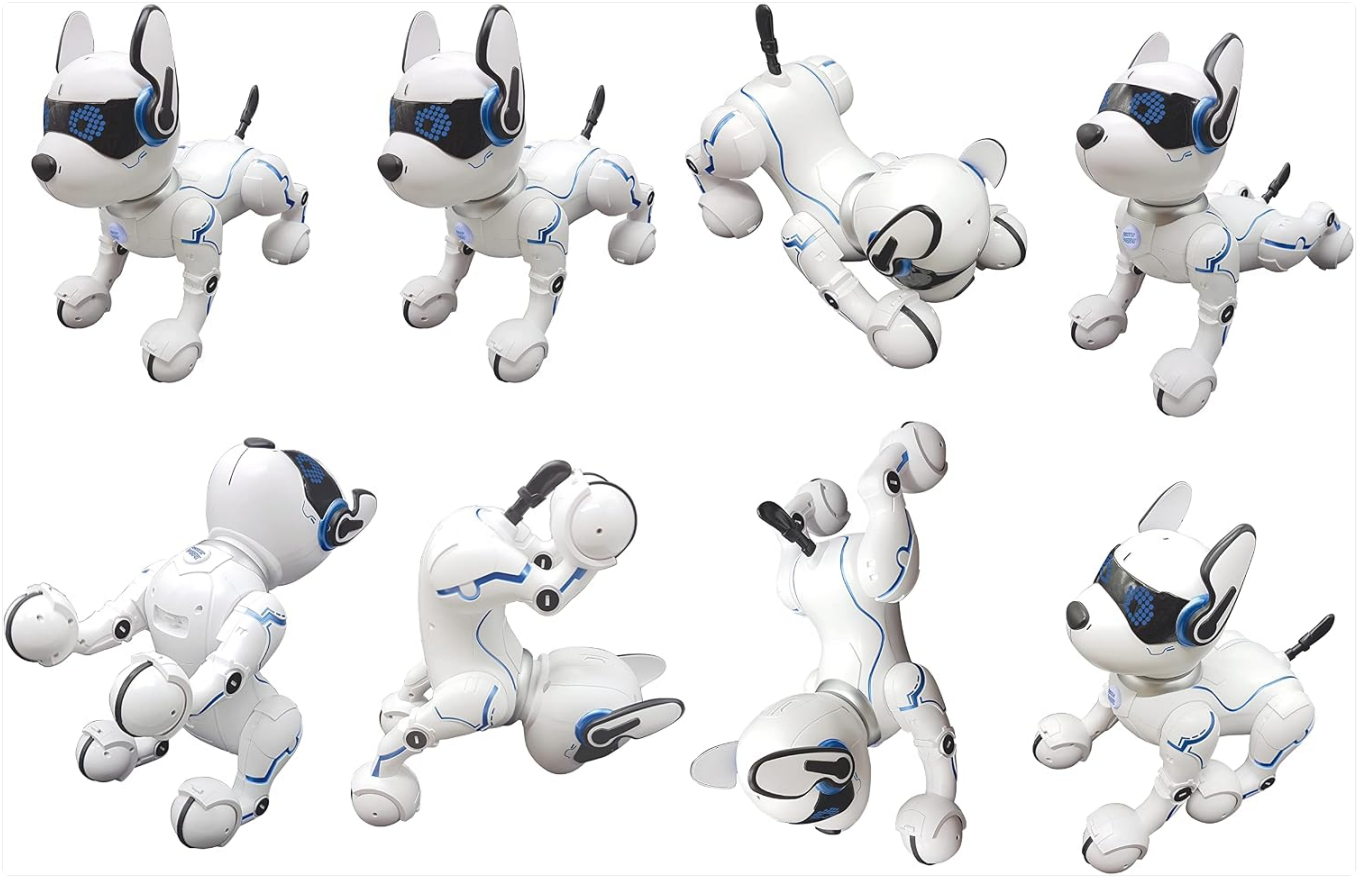

Image 3.3: The Power Puppy demonstrating a range of its programmed tricks and movements.

4. Maintenance and Care

To ensure the longevity and optimal performance of your Power Puppy, follow these maintenance guidelines:

- **Cleaning:** Wipe the robot with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Avoid exposing the robot to water or excessive moisture.
- **Battery Care:** Always remove batteries from the remote control if the toy will not be used for an extended period. For the rechargeable battery, follow the manufacturer's guidelines for charging and storage.
- **Storage:** Store the Power Puppy in a cool, dry place away from direct sunlight and extreme temperatures.
- **Supervision:** Adult supervision is recommended during play, especially for younger children, to prevent damage to the toy or injury.

5. Troubleshooting

If you encounter issues with your Power Puppy, refer to the following common solutions:

- **Robot Not Responding:**
  - Ensure the robot's rechargeable battery is fully charged.
  - Check if the remote control batteries are correctly installed and not depleted.
  - Make sure the robot and remote control are within operational range.
  - Turn both the robot and remote off, then on again to reset the connection.
- **Limited Movement/Tricks:**
  - The robot's battery might be low. Recharge it fully.
  - Ensure there are no obstructions hindering the robot's movement.

- **Gesture Control Not Working:**
  - Ensure your hand gestures are clear and performed within the sensor's detection range.
  - Check for any dirt or obstructions on the robot's sensors.

If problems persist after attempting these solutions, please contact customer support.

6. Product Specifications

Feature	Detail
Model Number	DOG01
Product Dimensions	10.12 x 6.3 x 11.02 inches (25.7 x 16 x 28 cm)
Item Weight	1.7 pounds
Recommended Age	3 years and up
Power Supply (Robot)	1 Rechargeable Battery (included)
Power Supply (Remote)	2 AA batteries (not included)
Manufacturer	Lexibook
Origin	Designed and developed in Europe - Made in China

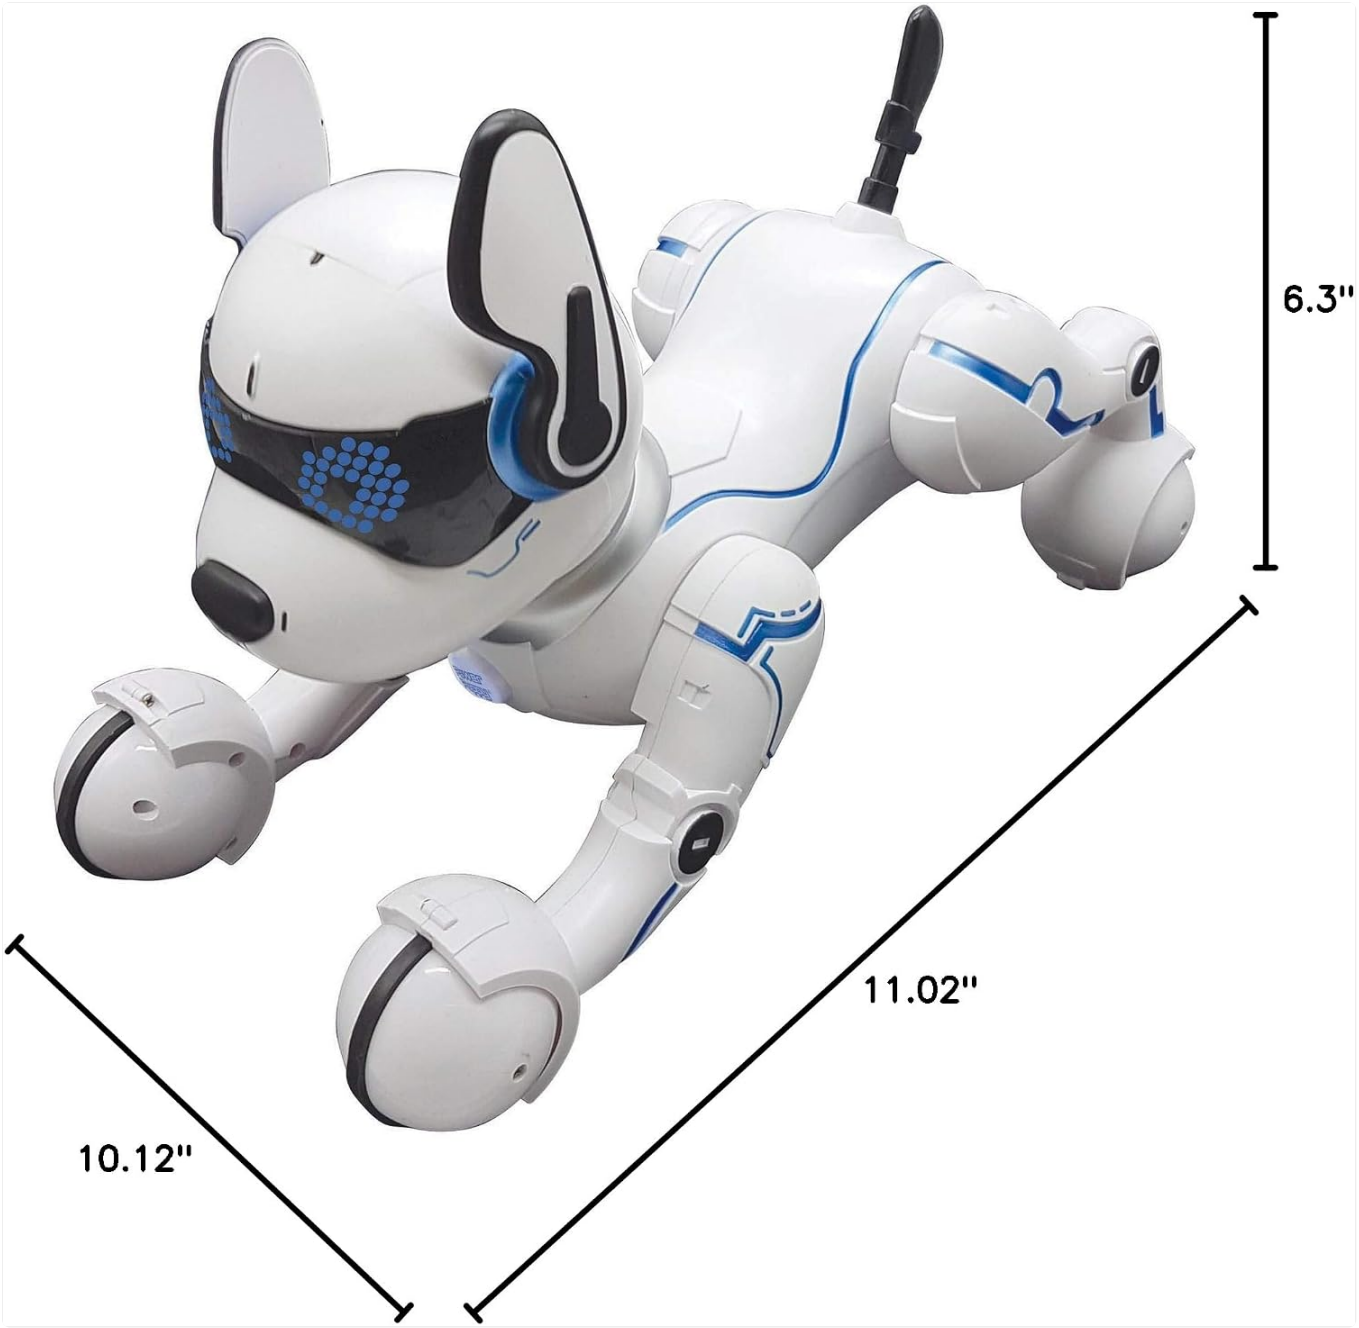

Image 6.1: Visual representation of the Power Puppy's dimensions.

7. Warranty and Support

7.1. Product Guarantee

The LEXiBOOK Power Puppy DOG01 comes with a 2-year guarantee. This guarantee covers manufacturing defects under normal use conditions. Please retain your proof of purchase for warranty claims.

7.2. Customer Support

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact LEXiBOOK customer support. Refer to the product packaging or the official LEXiBOOK website for contact information.

© 2025 LEXiBOOK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08HCYZZC8

More documents and user manuals: **https://manuals.plus/**