Manuals+
Q & A | Deep Search | Upload

TELLUR Obia

TELLUR Obia Portable Bluetooth Speaker User Manual

Model: Obia

Overview | Setup | Operation | Maintenance | Troubleshooting | Specifications | Safety Information | Warranty & Support | Introduction | What's in the Box | Product

1. Introduction

This manual provides essential instructions for the safe and efficient use of your TELLUR Obia Portable Bluetooth Speaker. Please read this manual thoroughly before using the device and retain it for future reference.

Figure 1: TELLUR Obia Portable Bluetooth Speaker, front view.

2. What's in the Box

Verify that all items are present upon unpacking:

- TELLUR Obia Speaker
- Charging cable (USB-A to Micro USB)
- 3.5mm AUX cable
- User Manual (this document)

3. Product Overview

3.1. Controls and Indicators

Figure 2: Top control panel with buttons and LED indicators.

1. **Power Button:** Press and hold to power on/off.
2. **Mode Button (M):** Short press to switch between Bluetooth, USB, FM Radio, and AUX-IN modes.
3. **Play/Pause Button (►):** Press to play or pause audio.
4. **Volume Down / Previous Track (-):** Short press for previous track, long press for volume down.
5. **Volume Up / Next Track (+):** Short press for next track, long press for volume up.
6. **TWS Button (∞+):** Press to activate True Wireless Stereo pairing.
7. **LED Indicators:** Display battery level and current mode.

3.2. Ports

Figure 3: Rear panel with USB, Micro USB charging, and AUX-IN ports.

- **USB Port:** For playing music from a USB flash drive (up to 128GB).
- **Micro USB Port (DC 5V):** For charging the speaker.
- **AUX-IN Port (3.5mm):** For connecting external audio devices via the provided AUX cable.

4. Setup

4.1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Micro USB charging cable to the speaker's Micro USB port and the other end to a USB power adapter (not included) or a computer's USB port. The LED indicators will show charging status and battery level. A full charge takes approximately 5 hours.

4.2. Power On/Off

Press and hold the Power button for approximately 3 seconds to turn the speaker on or off. A sound prompt will indicate the power status.

5. Operating Instructions

5.1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED). If not, press the **Mode (M)** button to switch to Bluetooth mode.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for "TELLUR Obia" in your device's Bluetooth list and select it to pair.
4. Once paired, the LED indicator will stop flashing and remain solid blue, and you will hear a confirmation sound.
5. The speaker will automatically connect to the last paired device when powered on, if available.

5.2. True Wireless Stereo (TWS) Pairing

TWS allows you to connect two Obia speakers for a stereo sound experience.

1. Ensure both Obia speakers are powered on and in Bluetooth mode, but not yet paired with any device.
2. On one of the speakers (this will be the primary speaker), press the **TWS (∞+)** button. The speaker will emit a sound and its LED will flash.
3. The primary speaker will automatically search for and pair with the secondary speaker. Once connected, both speakers will emit a confirmation sound, and the primary speaker's LED will flash slowly while the secondary speaker's LED will remain solid.
4. Now, pair your Bluetooth device with the primary speaker ("TELLUR Obia") as described in section 5.1.
5. Audio will now play in stereo through both speakers.
6. To disconnect TWS, press the **TWS (∞+)** button on either speaker.

Your browser does not support the video tag.

Video 1: Official product video demonstrating features including TWS pairing.

5.3. FM Radio Mode

1. Insert the 3.5mm AUX cable into the AUX-IN port. This cable acts as an antenna for better signal reception.
2. Press the **Mode (M)** button to switch to FM Radio mode.
3. Press and hold the **Play/Pause (►)** button to automatically scan and save available FM stations.
4. Use the **Previous Track (-)** and **Next Track (+)** buttons to navigate between saved stations.

5.4. USB Playback

Insert a USB flash drive (up to 128GB) containing audio files into the USB port. The speaker will automatically switch to USB mode and begin playing the audio. If it does not switch automatically, press the **Mode (M)** button to select USB mode.

5.5. AUX-IN Mode

Connect an external audio device (e.g., MP3 player, TV, computer) to the speaker's AUX-IN port using the 3.5mm AUX cable. Press the **Mode (M)** button to switch to AUX-IN mode. Control playback and volume from your external device.

5.6. Hands-Free Calls

When connected via Bluetooth to a smartphone, the speaker can be used for hands-free calls:

- **Answer Call:** Short press the **Play/Pause (►)** button.
- **End Call:** Short press the **Play/Pause (►)** button during a call.
- **Reject Call:** Long press the **Play/Pause (►)** button.

6. Maintenance

6.1. Cleaning

Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners, alcohol, or other chemical solvents, as these may damage the surface.

6.2. Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery periodically to maintain its lifespan.

Figure 4: The speaker is IPX5 splashproof, suitable for outdoor use.

7. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in Bluetooth mode (flashing LED). Turn on Bluetooth on your device. Move device closer to speaker (within 10m).
No sound.	Volume too low; incorrect mode selected; audio source issue.	Increase speaker and device volume. Press **Mode (M)** to select correct input. Check audio source playback.
FM radio signal is weak.	No antenna connected or poor reception area.	Ensure 3.5mm AUX cable is inserted into the AUX-IN port to act as an antenna. Try moving to an area with better reception.
TWS pairing fails.	Speakers already paired to a device; speakers too far apart.	Ensure both speakers are disconnected from any Bluetooth devices. Place speakers close to each other during TWS pairing.

8. Specifications

Model Name	Obia
Brand	TELLUR

Speaker Maximum Output Power	50 Watts
Connectivity Technology	Bluetooth
Bluetooth Range	10 Meters (32.8 Feet)
Audio Output Mode	Stereo (2.0 Channel)
Battery Capacity	3600 mAh
Play Time	Up to 6 hours
Charging Time	5 Hours
Input Voltage	5V DC
USB Support	USB 2.0 or 3.0, up to 128GB
Water Resistance Level	IPX5 Splashproof
Product Dimensions	6"D x 15"W x 7"H
Item Weight	2.54 Kilograms (5.59 pounds)
Material	Plastic
Included Components	Obia Speaker, Charging cable, User Manual

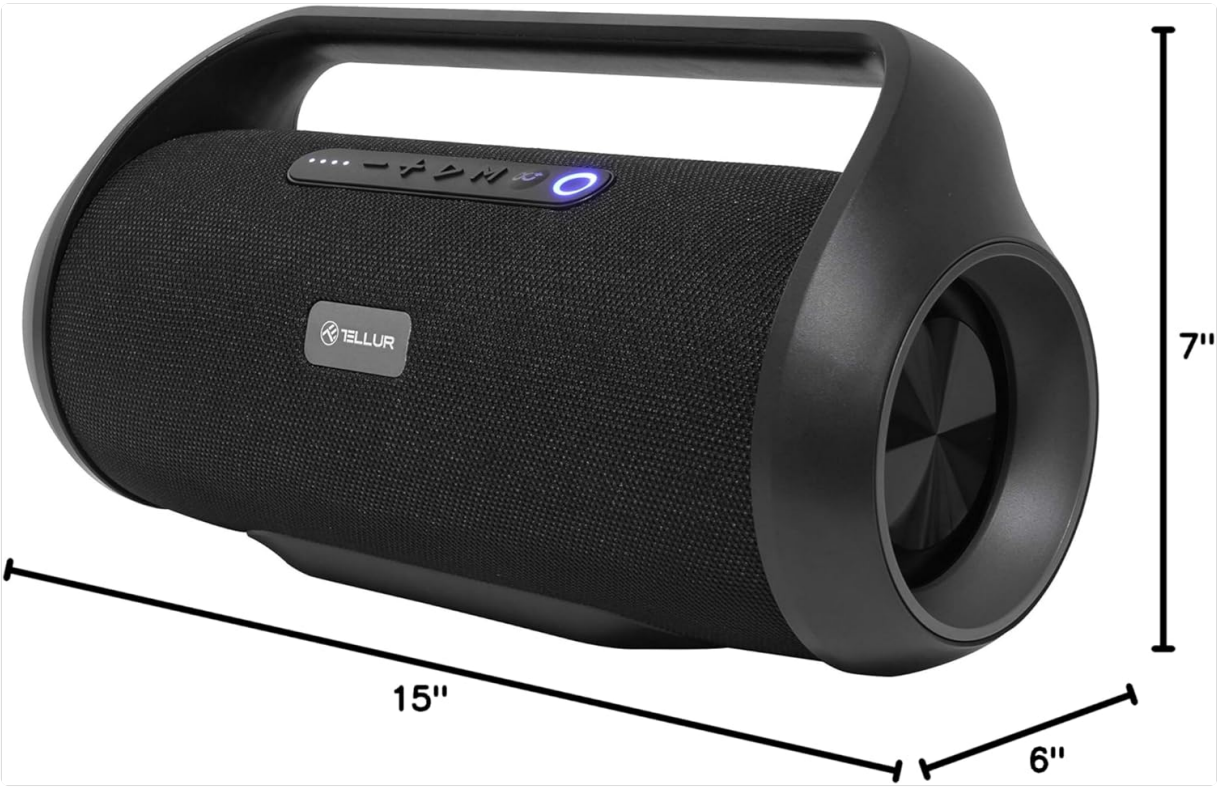

Figure 5: Product dimensions.

9. Safety Information

Warning - Ingestion Hazard: This product contains a battery. Death or serious injury can occur if ingested. A swallowed battery can cause internal chemical burns in as little as 2 hours. Keep new and used batteries OUT OF

REACH OF CHILDREN. Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.

General Safety Precautions:

- Do not expose the speaker to extreme temperatures, direct sunlight, or open flames.
- Do not immerse the speaker in water, despite its splashproof rating.
- Do not disassemble, repair, or modify the speaker.
- Use only the provided charging cable.
- Keep the speaker away from strong magnetic fields.
- Dispose of the speaker and its battery responsibly according to local regulations.

10. Warranty and Support

The TELLUR Obia Portable Bluetooth Speaker comes with a **Limited Warranty**. For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official TELLUR website.
For technical support or customer service, please contact TELLUR customer support through their official channels.