Manuals+
Q & A | Deep Search | Upload

DELUX M700BU(A725)

DELUX 67G Wired Lightweight Gaming Mouse User Manual

Model: M700BU(A725)

1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your DELUX 67G Wired Lightweight Gaming Mouse. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

2. Product Features

- **Lightweight Design:** Weighing only 67g (2.36oz) with a honeycomb shell for reduced fatigue during extended use.
- **High Precision Sensor:** Up to 7200 DPI with 6 adjustable levels (200/1200/2400/4800/6400/7200).
- **Customizable RGB Backlighting:** Side RGB light and solid logo light with 9 lighting modes.
- **7 Programmable Buttons:** Customize button functions, lighting effects, and macros using the onboard memory software.
- **Durable Switches:** 10 million clicking lifespan for long-term reliability.
- **Ultralight Weave Cable:** 1.8m cable designed to minimize drag, providing a near-wireless experience.

3. Package Contents

- DELUX 67G Wired Lightweight Gaming Mouse
- User Manual

4. Setup Instructions

4.1 Connecting the Mouse

1. Locate an available USB port on your computer.
2. Plug the USB connector of the DELUX 67G mouse into the USB port.

3. The mouse will be automatically detected by your operating system (Windows 7, 8, 10 compatible).
4. For advanced customization, download and install the official DELUX gaming software from the manufacturer's website.

Image: The DELUX 67G mouse with its ultralight weave cable and USB connector, ready for connection.

5. Operating Instructions

5.1 Button Functions

The DELUX 67G mouse features 7 programmable buttons. Refer to the diagram below for default button assignments:

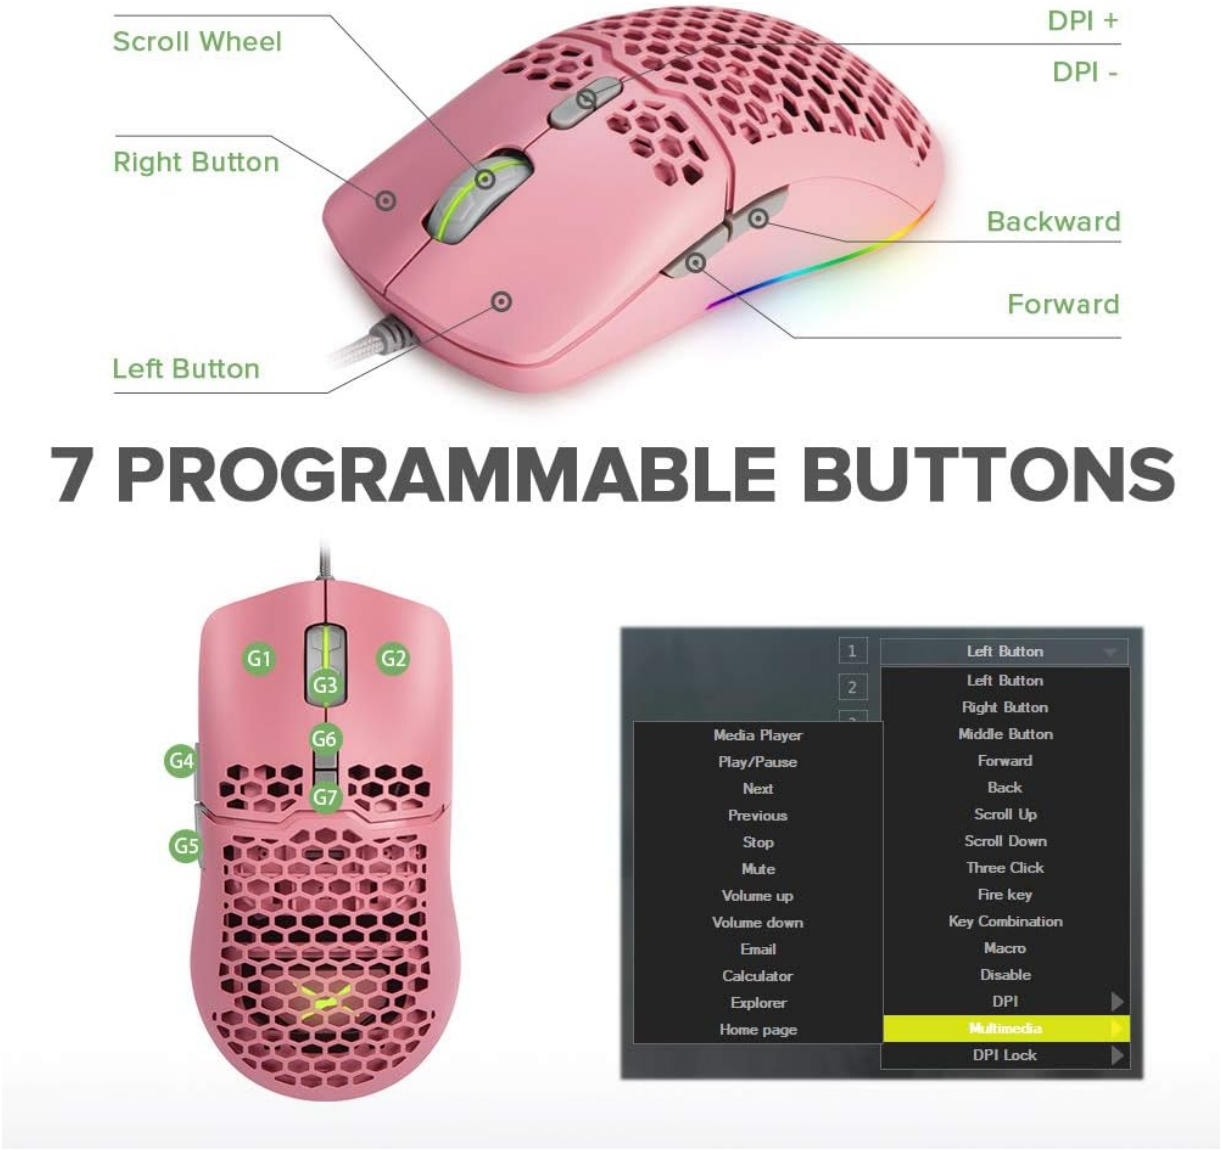

Image: A diagram illustrating the 7 programmable buttons on the DELUX 67G mouse, including Left, Right, Scroll Wheel, DPI+, DPI-, Forward, and Backward buttons.

- **Left Button:** Primary click function.
- **Right Button:** Secondary click function.
- **Scroll Wheel:** Scroll up/down, middle click.
- **DPI+ Button:** Increases DPI level.
- **DPI- Button:** Decreases DPI level.
- **Forward Button:** Navigates forward in web browsers or file explorers.
- **Backward Button:** Navigates backward in web browsers or file explorers.

5.2 DPI Adjustment

The mouse has 6 preset DPI levels: 200, 1200, 2400, 4800, 6400, and 7200. Use the DPI+ and DPI- buttons to cycle through these settings. The logo light color will change to indicate the current DPI level.

5.3 RGB Lighting Control

The mouse features side RGB lighting and a solid logo light. There are 9 lighting modes available. To quickly shift between lighting modes, press the **Backward button** and the **Scroll Wheel** simultaneously.

Image: The DELUX 67G mouse showcasing its customizable RGB lighting effects along the base and through the honeycomb shell.

5.4 Software Customization (On-board Memory)

For full customization of button functions, lighting effects, and macros, download and install the DELUX gaming software. The software allows you to:

- Remap all 7 buttons.
- Configure advanced lighting effects, speed, and direction.
- Create and assign macros for complex commands.
- Set up dual function modes (Office mode and Gaming mode) for quick switching. To switch between modes, press the **Scroll Wheel** and **Right button** for 3 seconds.
- Adjust DPI levels and enable/disable specific DPI steps.

Image: A screenshot of the DELUX gaming software interface, showing options for button remapping, macro creation, and LED settings for the M700BU mouse.

6. Maintenance

To ensure the longevity and optimal performance of your DELUX 67G mouse, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the mouse surface. For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive materials.
- **Cable Care:** Do not excessively bend or pull the cable. Store it neatly to prevent tangling and damage.
- **Environment:** Keep the mouse away from extreme temperatures, direct sunlight, and high humidity.
- **Sensor:** Ensure the optical sensor on the bottom of the mouse is clean and free from dust or debris for accurate tracking.

7. Troubleshooting

7.1 Mouse Not Responding

- Check if the USB cable is securely plugged into the computer's USB port.

- Try plugging the mouse into a different USB port.
- Restart your computer.
- Ensure no other mouse drivers are conflicting with the DELUX software.

7.2 DPI or RGB Lighting Not Changing

- Ensure the DELUX gaming software is installed and running.
- Verify that the settings in the software are applied and saved to the mouse's onboard memory.
- For RGB lighting, try the quick mode shift: press the**Backward button** and **Scroll Wheel** simultaneously.

7.3 Sluggish Movement or Lag

- Clean the optical sensor on the bottom of the mouse.
- Ensure you are using the mouse on a suitable mouse pad or surface.
- Check your computer's USB port for any issues.
- While the mouse is designed for gaming, some users have noted its polling rate (125Hz) might feel less responsive compared to higher-end gaming mice (500Hz+). This is a characteristic of the product's design.

8. Specifications

Feature	Detail
Model Number	M700BU(A725)
Weight	67g (2.36 ounces)
Dimensions	5.04 x 2.64 x 1.54 inches
DPI Levels	200/1200/2400/4800/6400/7200
Buttons	7 Programmable Buttons
Connectivity	Wired USB
Cable Length	1.8m Ultralight Weave Cable
Switch Lifespan	10 Million Clicks
Compatibility	Windows 7, 8, 10
Special Features	Honeycomb Shell, RGB Backlit, On-board Memory

9. Warranty and Support

All DELUX products include a **12-month warranty** and **free lifetime technical support**. For assistance, please contact DELUX customer service through their official website or the retailer where the product was purchased.

© 2024 DELUX. All rights reserved.