Manuals+
Q & A | Deep Search | Upload

Young YY-JVC-997

Young JVC-997 Replacement Remote Control User Manual

Model: YY-JVC-997

Introduction

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Young JVC-997 Replacement Remote Control. This universal remote is designed to be compatible with most JVC LCD LED Smart TVs, offering a seamless replacement experience.
Please read this manual thoroughly before using the remote control to ensure proper functionality and longevity of the device.

Product Overview

Figure 1: Front view of the Young JVC-997 Replacement Remote Control. This image displays the full layout of the remote, including all buttons such as power, input, navigation, volume, channel, and numeric keypad.

Figure 2: Angled view of the Young JVC-997 Replacement Remote Control. This perspective highlights the ergonomic design and button placement from a side angle, showing the power button and top row of controls.

The Young JVC-997 Replacement Remote Control is designed for ease of use and direct compatibility with a wide range of JVC LCD LED Smart TVs. It features a standard button layout for intuitive navigation and control of your television.

Setup

1. Battery Installation

The remote control requires **two (2) AAA alkaline batteries** for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Note: *Always use new batteries of the same type. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.*

2. Initial Use

This remote control is designed to work out of the box with most JVC LCD LED Smart TVs. No programming or pairing is typically required. Once batteries are installed, point the remote control towards your JVC TV and begin using it.

Operating Instructions

The JVC-997 remote control provides full functionality for your JVC television. Below are common functions and their corresponding buttons:

- **POWER** (Red Button): Turns the TV on or off.
- **INPUT** / **SOURCE**: Selects the input source (e.g., HDMI, AV, Component).
- **Numeric Keypad (0-9)**: Directly enters channel numbers.
- **CH +/-**: Changes channels up or down.
- **VOL +/-**: Adjusts the volume level.
- **MUTE**: Mutes or unmutes the TV sound.

- **MENU**: Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK** / **ENTER**: Confirms selections in menus.
- **BACK** / **EXIT**: Returns to the previous screen or exits a menu.
- **GUIDE**: Displays the electronic program guide (if supported by your TV).
- **MEDIA**: Accesses media playback functions.
- **HDMI** / **VIDEO** / **COMP** / **MUSIC** / **PC** / **TV** Direct input selection buttons.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Functionality varies by TV model and application. Refer to your TV's manual for specific uses.

For specific advanced functions or smart TV features, refer to your JVC television's original user manual, as some functions may be TV-dependent.

Maintenance

Proper care and maintenance will extend the life of your remote control:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can damage internal components.
- **Liquid Exposure:** Do not expose the remote control to liquids. If liquid spills on the remote, remove batteries immediately and allow it to dry completely before reinserting them.

Troubleshooting

If you experience issues with your Young JVC-997 Replacement Remote Control, refer to the following common solutions:

Problem	Possible Cause / Solution
Remote not working at all.	◦ **Batteries:** Check if batteries are installed correctly (polarity). Replace with new AAA batteries. ◦ **Line of Sight:** Ensure there are no obstructions between the remote and the TV's infrared sensor. ◦ **Distance:** Make sure you are within the effective range of the remote control.
Remote works intermittently.	◦ **Low Batteries:** Replace batteries. ◦ **Interference:** Other electronic devices might be causing interference. ◦ **Dirty Sensor:** Clean the TV's IR sensor and the remote's IR emitter with a soft cloth.
Certain buttons do not work.	◦ **Compatibility:** While universal, some very specific TV functions might not be supported by all replacement remotes. Refer to your TV's manual. ◦ **Stuck Button:** Check if the button is physically stuck or damaged.

Problem	Possible Cause / Solution
TV does not respond to remote.	◦ **TV Power:** Ensure the TV is powered on and not in standby mode. ◦ **TV Sensor:** The TV's infrared sensor might be blocked or faulty. ◦ **Remote Reset:** Remove batteries, press all buttons a few times to discharge any residual power, then reinsert batteries.

If the problem persists after trying these solutions, please contact customer support.

Specifications

Model Number	YY-JVC-997
Brand	Young
Compatible Devices	JVC LCD LED Smart TV (most models)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Alkaline Batteries (not included)
Product Dimensions	9 x 2 x 1 inches (approximately)
Item Weight	4 ounces (approximately)
Special Feature	Universal Replacement

Warranty and Support

Warranty Information

This product comes with a **one-year free quality guarantee** from the date of purchase. This warranty covers manufacturing defects and ensures the remote control functions as intended under normal use.
The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or improper battery installation.

Customer Support

If you have any questions, concerns, or require assistance with your Young JVC-997 Replacement Remote Control, please do not hesitate to contact our customer support team. We are committed to providing satisfactory solutions. For support, please refer to the contact information provided by your retailer or the manufacturer's official website.

© 2024 Young Electronics. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - YY-JVC-997

	JVC KD-AR755 Car Audio Receiver User Manual Comprehensive user guide for JVC KD-AR755, KD-R750, KD-AR555, KD-R650, KD-R450 car audio receivers. Covers features, operation, USB/iPod/iPhone connectivity, safety, and basic troubleshooting.
	JVC KW-V820BT Monitor with DVD Receiver Instruction Manual This instruction manual provides detailed information for the JVC KW-V820BT Monitor with DVD Receiver. It covers installation, operation, settings, and features such as Apple CarPlay, SiriusXM, Bluetooth, and iPod/iPhone integration for your car audio system.
	JVC Music Control User Guide: Organize, Play, and Analyze Your Music Comprehensive user guide for the JVC Music Control application, detailing how to manage music playlists, analyze song moods, control playback, and connect to JVC car audio systems.
	JVC LT-32P679 LCD Television User Guide A comprehensive user guide for the JVC LT-32P679 LCD Television, covering setup, remote control, picture and sound settings, iPod integration, device connectivity, and troubleshooting.
	JVC LT-19D200 LCD Television Built-in DVD Player User Guide This user guide provides comprehensive information for the JVC LT-19D200 LCD Television with built-in DVD player, covering setup, features, operation, and troubleshooting for an optimal home entertainment experience.
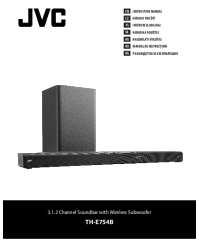	JVC TH-E754B 3.1.2 Channel Soundbar with Wireless Subwoofer User Manual User manual for the JVC TH-E754B 3.1.2 Channel Soundbar with Wireless Subwoofer. This guide provides setup, operation, safety instructions, and troubleshooting information for the JVC soundbar system.