Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZOKOP 1800P-D1

ZOKOP 5.6 Quarts Digital Air Fryer User Manual

Model: 1800P-D1

Introduction

Thank you for purchasing the ZOKOP 5.6 Quarts Digital Air Fryer. This appliance allows you to enjoy your favorite fried snacks and meals with significantly less oil, promoting a healthier lifestyle. Featuring a sleek design, advanced touch screen menu, and 7 cooking presets, this air fryer simplifies your cooking experience. Please read this manual thoroughly before first use to ensure safe and optimal operation.

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

Parts Identification

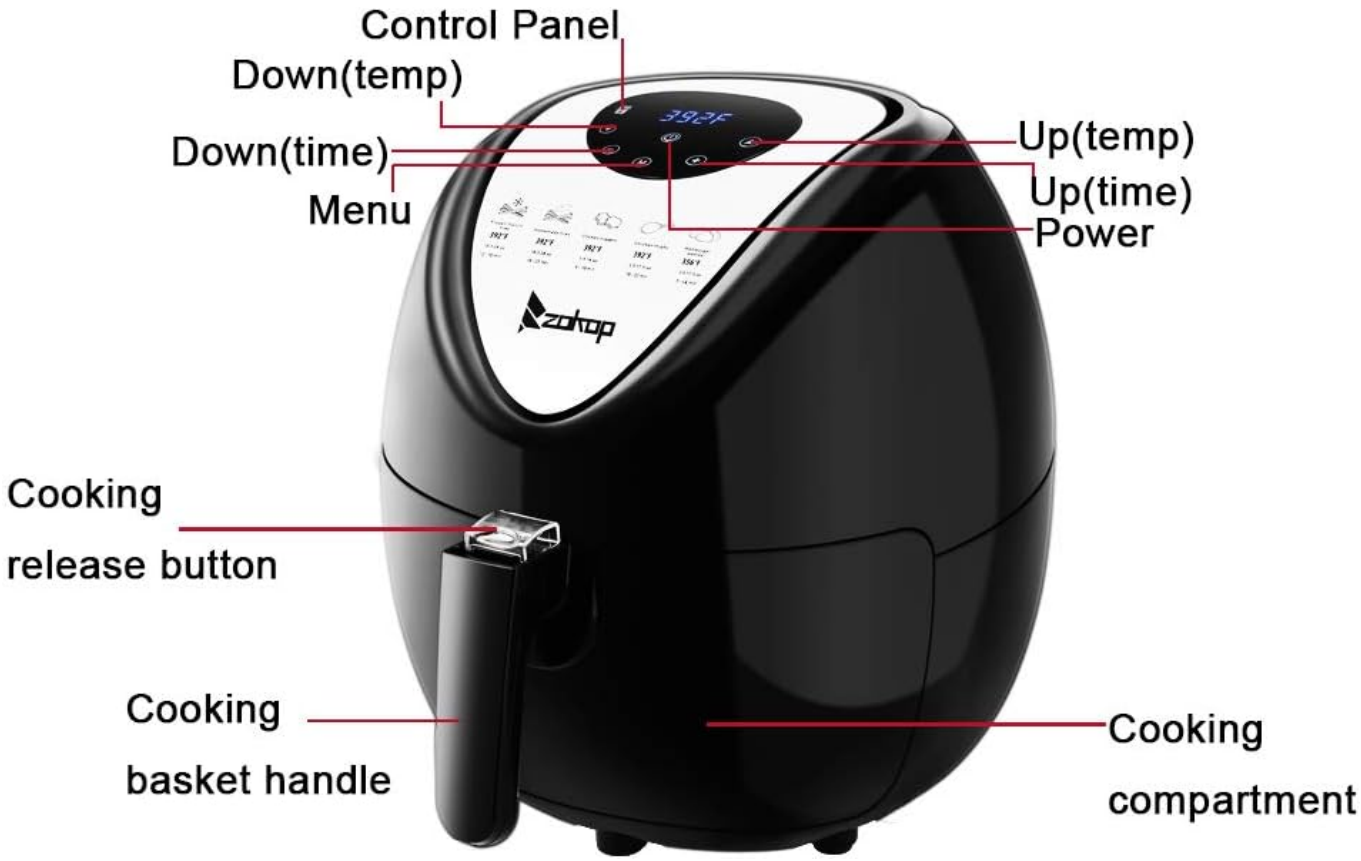


Figure 1: ZOKOP Digital Air Fryer with key components labeled.

- **Control Panel:** Digital display and touch controls for temperature, time, and presets.
- **Down (Temp):** Decreases cooking temperature.
- **Down (Time):** Decreases cooking time.
- **Menu:** Cycles through preset cooking functions.
- **Up (Temp):** Increases cooking temperature.
- **Up (Time):** Increases cooking time.
- **Power Button:** Turns the unit on/off and starts/pauses cooking.
- **Cooking Release Button:** Releases the cooking basket from the pan.
- **Cooking Basket Handle:** For safely pulling out the cooking basket.
- **Cooking Compartment:** Houses the cooking pan and basket.

Before First Use / Setup



Figure 2: Package contents of the ZOKOP Digital Air Fryer.

1. **Unpacking:** Carefully remove all packaging materials and check for any damage. Ensure all parts listed in the package contents are present: 1 x Air Fryer, 1 x Shelf, 1 x Food Clip, 1 x Manual.
2. **Cleaning:** Before first use, clean the cooking basket and pan thoroughly with hot water, dish soap, and a non-abrasive sponge. The basket and pan are dishwasher safe. Wipe the inside and outside of the appliance with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 4 inches (10 cm) of free space on the back and sides, and 4 inches (10 cm) above the appliance to allow for proper air circulation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

Operating Instructions

General Operation

1. **Power On:** Plug the air fryer into a power outlet. The power button will illuminate. Press the power button to turn on the display.

2. **Preheating (Optional):** For best results, preheat the air fryer for 3-5 minutes. Set the desired temperature and time, then press the power button to start.
3. **Load Food:** Carefully pull out the cooking pan and basket assembly using the handle. Place your ingredients into the cooking basket. Do not overfill the basket to ensure even cooking.
4. **Insert Basket:** Slide the cooking pan and basket assembly back into the air fryer until it clicks into place.
5. **Set Temperature and Time:** Use the Up/Down (Temp) buttons to adjust the temperature (140°F to 392°F) and the Up/Down (Time) buttons to set the cooking time (0-30 minutes).
6. **Start Cooking:** Press the power button to begin the cooking process. The fan and heating element will activate.
7. **Shake/Turn Food (Mid-Cycle):** For some recipes, especially fries or nuggets, it is recommended to shake or turn the food halfway through the cooking time. Carefully pull out the pan, shake the basket, and then reinsert it. The air fryer will resume cooking automatically.
8. **Remove Food:** Once the cooking time is complete, the air fryer will beep. Carefully pull out the cooking pan. Press the cooking release button on the handle to detach the basket from the pan.



Figure 3: Instructions for detaching the cooking basket from the pan.

9. **Serve:** Empty the cooked food from the basket into a serving dish. Use the included food clip or tongs if necessary.
10. **Power Off:** Press and hold the power button to turn off the air fryer. Unplug the appliance when not in use.

Using Cooking Presets

The ZOKOP Air Fryer comes with 7 built-in cooking presets for common foods:

- French fries
- Natural potato
- Chicken nuggets
- Chicken thighs
- Shrimp
- Fish
- Cake

To use a preset:

1. Turn on the air fryer.
2. Press the 'Menu' button repeatedly to cycle through the preset icons. The corresponding temperature and time will display.
3. Once you select the desired preset, press the power button to start cooking. You can adjust the time and temperature manually even after selecting a preset if needed.

Cleaning and Maintenance

Clean the air fryer after every use.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool down completely before cleaning.
2. **Basket and Pan:** The cooking basket and pan have a non-stick coating. Clean them with hot water, dish soap, and a non-abrasive sponge. For stubborn food residue, soak the basket and pan in hot water with some dish soap for about 10 minutes. They are also dishwasher safe.
3. **Interior:** Wipe the inside of the appliance with a hot water and non-abrasive sponge.
4. **Exterior:** Clean the exterior of the air fryer with a damp cloth. Do not use harsh abrasive cleaners or scouring pads.
5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.
6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

Troubleshooting

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
	The cooking pan is not inserted correctly.	Push the cooking pan completely into the appliance.
Food is not cooked evenly.	Too much food in the basket.	Cook smaller batches of food.

Problem	Possible Cause	Solution
	Food was not shaken/turned.	Shake or turn food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use.	Clean the pan and basket thoroughly after each use.
	Cooking fatty ingredients.	This is normal for fatty foods. Absorb excess oil from food before air frying.
French fries are not crispy.	Too much oil used.	Use only a small amount of oil or no oil at all.
	Potatoes not prepared correctly.	Soak fresh potato sticks in water for 30 minutes, then dry them thoroughly before adding oil.

Specifications

- **Model:** 1800P-D1
- **Color:** Black
- **Wattage:** 1800W
- **Voltage:** 120V/60Hz
- **Timer:** 0-30 Minutes
- **Temperature Range:** 140°F to 392°F (60°C to 200°C)
- **Mesh Basket Capacity:** 5.6 Quarts / 5.3 Liters
- **Fryer Pan Capacity:** 6.87 Quarts / 6.5 Liters
- **Material:** Cold Rolled Steel & PP Plastic
- **Dimensions:** 12.05 x 15.12 x 13.23 inches (30.6 x 38.4 x 33.6 cm) (L x W x H)
- **Weight:** 264.55 oz / 7500 g
- **Certification:** ETL Listed

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official ZOKOP website. Keep your purchase receipt as proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08QYQQZ99

More documents and user manuals: **https://manuals.plus/**