Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEXIBOOK TW45Z

LEXIBOOK TW45Z Long Range Walkie Talkies User Manual

Model: TW45Z

Introduction

Thank you for choosing the LEXIBOOK TW45Z Long Range Walkie Talkies. This manual provides essential information for the safe and effective use of your device. Please read it thoroughly before operation and keep it for future reference. These walkie talkies are designed for clear communication over distances up to 5 km in open areas, featuring a rechargeable base, LCD screen, and a built-in flashlight.



Image: Front view of two LEXIBOOK TW45Z Walkie Talkies.

Package Contents

Please check the package contents carefully. If any items are missing or damaged, contact your retailer.

- 2 x LEXIBOOK TW45Z Walkie Talkies
- 1 x Rechargeable Charging Base
- 1 x User Manual (this document)



Image: LEXIBOOK Walkie Talkies in their charging base.

Setup

1. Battery Installation

The LEXIBOOK TW45Z Walkie Talkies require 2 AA batteries per unit (not included).

1. Locate the battery compartment cover on the back of each walkie talkie.
2. Use a small screwdriver (not included) to loosen the screw and remove the cover.
3. Insert 2 AA batteries into each walkie talkie, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and tighten the screw.

Important:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the device will not be used for an extended period.

2. Charging the Walkie Talkies

The walkie talkies are rechargeable using the included charging base.

1. Connect the charging base to a power outlet using a compatible adapter (not included, typically a standard USB power adapter).
2. Place each walkie talkie into its designated slot on the charging base. Ensure they are seated correctly.
3. The walkie talkies will begin charging. The LCD screen may indicate charging status or battery level.
4. Once fully charged, remove the walkie talkies from the base.


LEXIBOOK®

Image: The LEXIBOOK charging base.

3. Powering On/Off

To turn the walkie talkies on or off, locate the On/Off quick access key (refer to the device's buttons). Press and hold the button until the device powers on or off.

Operating Instructions

1. Basic Communication

For two walkie talkies to communicate, they must be set to the same channel.

- **Channel Selection:** Use the channel selection quick access key (or arrow buttons) to cycle through the 8 available channels. Ensure both walkie talkies are on the same channel.
- **Transmitting:** Press and hold the "Call" or "Talk" button (usually on the side) to transmit your voice. Speak clearly into the microphone. Release the button when you are finished speaking.
- **Receiving:** When the "Call" or "Talk" button is not pressed, the walkie talkie is in receiving mode.



Image: Using the walkie talkies for communication.

2. Adjustable Volume

Adjust the listening volume using the dedicated volume control buttons or the quick access keys.

3. Call Tone Function

To alert the other party, press the "Call" quick access key. This will send a distinct tone to the other walkie talkie.

4. Built-in Flashlight

The walkie talkies include a built-in flashlight. Activate it using the dedicated flashlight quick access key. This feature is useful in low-light conditions or for sending coded messages.

5. Communication Range


The LEXIBOOK TW45Z offers a communication range of up to 5 km in open spaces. Actual range may vary significantly depending on terrain, weather conditions, electromagnetic interference, and obstructions (e.g., buildings, dense foliage). For optimal range, use in open, unobstructed environments.



Image: Ideal outdoor environment for maximum range.

Maintenance

- **Cleaning:** Wipe the walkie talkies with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The device is water resistant, meaning it can withstand splashes. Do not submerge the walkie talkies in water.
- **Battery Care:** If using rechargeable batteries, follow the manufacturer's guidelines for charging and discharging. If using non-rechargeable batteries, replace them when the low battery indicator appears on the LCD screen.
- **Storage:** Store the walkie talkies in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods to prevent leakage.
- **Belt Clip:** The walkie talkies come with a belt clip for convenient carrying. Ensure it is securely attached.

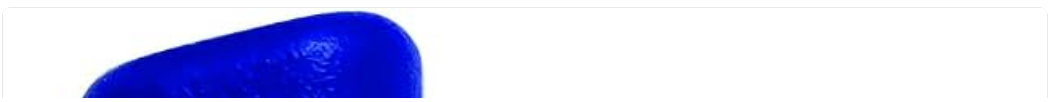



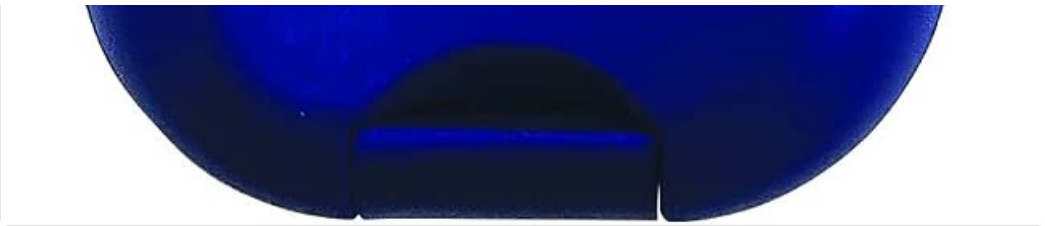


Image: Walkie Talkie with belt clip.

Troubleshooting

Problem	Possible Cause	Solution
No power / Device won't turn on	• Batteries are dead or incorrectly installed. • Device not charged.	• Check battery polarity and replace if necessary. • Place walkie talkie on charging base until fully charged.
Cannot communicate with other walkie talkie	• Different channels selected. • Out of range. • Obstructions blocking signal.	• Ensure both walkie talkies are on the same channel. • Move closer to the other unit. • Move to an area with fewer obstructions.
Poor sound quality / Static	• Weak signal due to distance or obstructions. • Low battery. • Interference from other electronic devices.	• Move closer or to a more open area. • Recharge or replace batteries. • Move away from sources of interference.
Low battery indicator on LCD	• Batteries are running low.	• Recharge the walkie talkie using the charging base or replace AA batteries.

Specifications

Model Number	TW45Z
Dimensions (per unit)	11.5 x 5.5 x 2.8 cm
Weight (per unit)	Approx. 170 g (340.19 g for the pair)
Power Source	2 x AA batteries per unit (not included)
Voltage	3 Volts (DC)
Number of Channels	8
Frequency Range	UHF
Maximum Talk Range	Up to 5 Kilometers (in open space)
Material	Plastic
Color	Blue
Water Resistance Level	Water resistant (splash-proof)
Recommended Age	3 years and up

Warranty and Support

The LEXIBOOK TW45Z Walkie Talkies come with a 2-year warranty from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For technical support, warranty claims, or further inquiries, please contact LEXIBOOK customer service through their official website or the retailer where the product was purchased. Please have your model number (TW45Z) and proof of purchase ready.

Online Support: Visit the official LEXIBOOK website for FAQs and support resources. www.lexibook.com

© 2024 LEXIBOOK. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08T5QLCB8

More documents and user manuals: **https://manuals.plus/**