Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEXiBOOK MP320FZZ

LEXiBOOK Disney Frozen 2 Portable Karaoke Digital Player User Manual

Model: MP320FZZ

Introduction

This manual provides essential information for the safe and effective operation of your LEXiBOOK Disney Frozen 2 Portable Karaoke Digital Player. This portable karaoke player is designed for children and operates wirelessly with Bluetooth-equipped devices. It includes two microphones, light effects, and functions for recording and voice changing. The unit is powered by a rechargeable battery and features various input options for external audio devices.

Package Contents

Please check that all items are present and in good condition:

- 1 x LEXiBOOK Disney Frozen 2 Portable Karaoke Digital Player
- 2 x Microphones
- 1 x USB-C Charging Cable
- 1 x AUX-IN Cable
- User Manual (this document)



Image: The karaoke player shown in its retail packaging, highlighting its features and included accessories.

Product Features

- Wireless Bluetooth connectivity for streaming music from compatible devices.
- Two included microphones for duet singing.
- AUX-IN, USB port, and TF/micro SD card slots (up to 32 GB) for versatile music playback.
- Headphones jack for private listening.
- Record function to capture singing performances.
- Voice changer function with three tunes: high pitched, deep pitched, or echo voice.
- Multicolour light effects for an enhanced karaoke experience.
- Built-in 1,200 mAh rechargeable battery, charged via USB-C.
- Integrated storage compartment for cables.



Image: Front view of the karaoke player, showcasing its main controls and the two attached microphones.

Setup

1. **Charging the Device:**

   Before first use, fully charge the karaoke player. Connect the provided USB-C cable to the charging port on the back of the unit and the other end to a compatible USB power adapter (not included). The charging indicator light will show the charging status.

2. **Connecting Microphones:**

   Plug the two microphones into the designated microphone jacks on the sides of the unit.

3. **Power On/Off:**

   Locate the power switch, usually on the back or side of the unit, and slide it to the "ON" position to power on the device. Slide to "OFF" to power down.



Image: Rear view of the karaoke player, illustrating the locations of the USB port, AUX-IN jack, Micro SD slot, headphone jack, and the charging port.

Operating Instructions

1. Bluetooth Connection

1. Ensure the karaoke player is powered on.
2. Activate Bluetooth on your external device (e.g., smartphone, tablet).
3. Search for "LEXiBOOK MP320FZZ" or a similar name in your device's Bluetooth settings.
4. Select the player to pair. A confirmation sound will indicate successful pairing.
5. Once connected, you can play music from your device through the karaoke player.



Image: The karaoke player demonstrating its Bluetooth connectivity with a smartphone, showing music playback on the phone screen.

2. Playing Music from External Sources (AUX-IN, USB, Micro SD)

- **AUX-IN:** Connect an external audio device using the provided AUX-IN cable to the AUX-IN jack.
- **USB:** Insert a USB flash drive into the USB port.
- **Micro SD:** Insert a TF/micro SD card (up to 32 GB) into the micro SD card slot.
- Use the "MODE" button on the player to switch between input sources.

3. Recording Function

- Press the "REC" button to start recording your singing.
- Press "REC" again to stop recording. Your recording will be saved to the inserted Micro SD card or USB drive.



Image: Detailed view of the karaoke player's control panel, specifically pointing out the buttons for voice changing and recording.

4. Voice Changer Function

- Press the voice changer button (often indicated by a microphone icon with an arrow) to cycle through the available voice effects: high pitched, deep pitched, or echo voice.

5. Multicolour Light Effects

- Press the light effects button (often indicated by a light bulb icon) to activate or change the multicolour light show.



Image: The karaoke player displaying its vibrant multicolour light effects, enhancing the visual experience during use.

6. Headphone Use

- Plug standard 3.5mm headphones into the headphone jack for private listening.

7. Cable Storage

- Utilize the storage compartment on the back of the unit to neatly store the charging and AUX-IN cables when not in use.

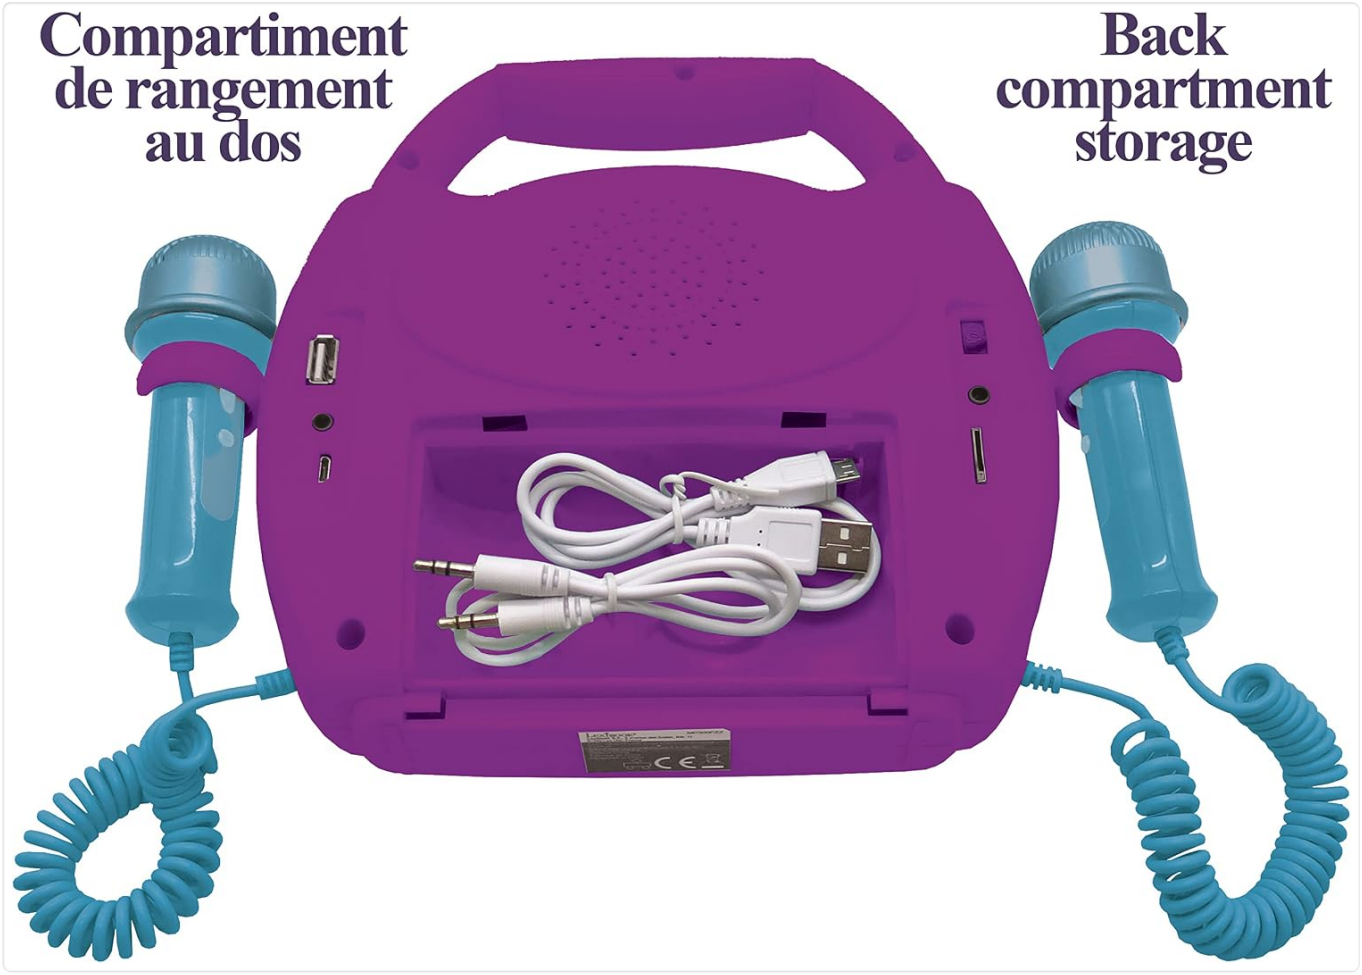


Image: The rear of the karaoke player with its storage compartment open, showing how cables can be neatly stored inside.

Maintenance

- Clean the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the device away from water and excessive moisture.
- Store in a cool, dry place when not in use.
- Regularly charge the battery to maintain its lifespan, even if not used frequently.

Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	Battery is low or depleted.	Charge the device fully using the USB-C cable.
No sound from speakers.	Volume is too low; incorrect input mode selected; microphones not connected properly.	Increase volume; press "MODE" to select correct input (Bluetooth, AUX, USB, SD); ensure microphones are securely plugged in.
Bluetooth connection fails.	Device is too far from the player; player is not in Bluetooth mode; interference.	Ensure devices are within range; switch player to Bluetooth mode; restart both devices.
Recording not working.	No Micro SD card or USB drive inserted; card/drive is full or corrupted.	Insert a compatible Micro SD card or USB drive; check storage space; try a different card/drive.

Specifications

Brand: LEXiBOOK

Model: MP320FZZ

Product Dimensions: 27.9 x 8.1 x 21.2 inches

Item Weight: 1.2 pounds

Power Source: Battery Powered

Battery: 1 x 1,200 mAh Lithium Ion rechargeable battery (included)

Charging: USB-C (cable included)

Connectivity: Bluetooth, AUX-IN, USB, TF/Micro SD card slot (up to 32 GB)

Included Components: Karaoke Player, 2 Microphones

Recommended Age: 3 years and up

Color: Multicolour, Purple

Warranty and Support

For detailed warranty information and further technical support, please refer to the official user manual provided by Lexibook. A digital version of the user manual is often available on the manufacturer's website or through the retailer's product page. You can also find additional support and contact information on the LEXiBOOK Store on Amazon.

© 2024 LEXiBOOK. All rights reserved. Disney Frozen 2 elements © Disney.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08TBQPDQV

More documents and user manuals: **https://manuals.plus/**