Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

She's Birdie BIRDIE-AQUA

She's Birdie Personal Safety Alarm User Manual

Model: BIRDIE-AQUA

1. Introduction

This manual provides essential information for the safe and effective use of your She's Birdie Personal Safety Alarm. The device is designed to provide a loud siren and flashing strobe light to attract attention in emergency situations. Please read these instructions carefully before using your Birdie alarm.

2. Product Overview

The She's Birdie Personal Safety Alarm is a compact, portable device featuring a loud siren and a bright LED strobe light. It is designed for ease of use and can be attached to keys, bags, or other personal items for quick access.



Image 2.1: She's Birdie Personal Safety Alarm (Aqua) with brass keychain.

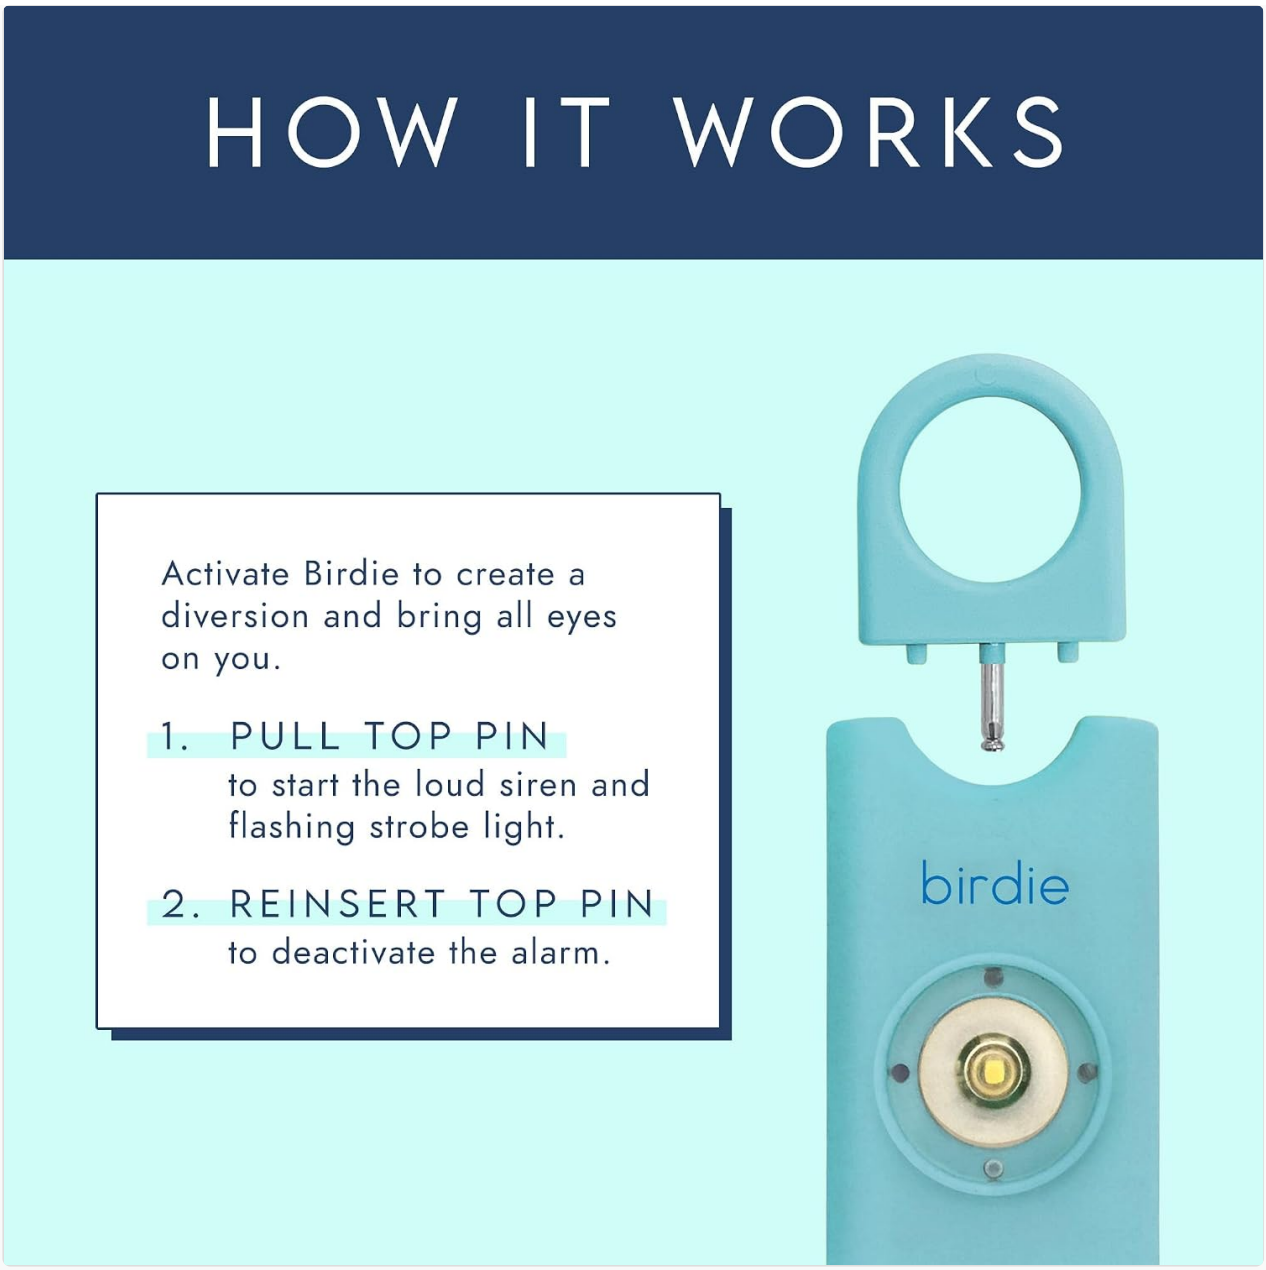

Image 2.2: Birdie alarm and separate brass keychain.

Key Features:

- **Loud Siren:** Emits a 130 dB alarm to draw attention.
- **Strobe Light:** Integrated LED light flashes to enhance visibility.
- **Easy Activation:** Simple pull-pin mechanism.
- **Compact Design:** Small and lightweight for portability.
- **Replaceable Batteries:** Powered by 2 CR2032 Lithium Metal batteries (included).



Image 2.3: Visual representation of key features.

3. Setup

Your She's Birdie Personal Safety Alarm comes with batteries pre-installed and is ready for immediate use. No initial battery installation is required.

Attaching the Alarm:

1. Identify the keyring loop on the top of the Birdie alarm.
2. Attach the provided brass keychain or your existing keys to this loop.
3. Ensure the alarm is securely fastened to your chosen item (e.g., purse, backpack, belt loop) for easy access.

4. Operating Instructions

The Birdie alarm is designed for simple and rapid activation in emergency situations.



Image 4.1: Activation and deactivation process.

Activation:

1. To activate the alarm, firmly pull the top pin away from the main body of the device.
2. Upon removal of the pin, the loud siren will sound, and the strobe light will begin flashing simultaneously.

Deactivation:

1. To deactivate the alarm, reinsert the top pin fully into the main body of the device.
2. The siren and strobe light will cease once the pin is securely reinserted.

Caution: The alarm is very loud (130 dB). Avoid activating it unnecessarily or near your ears to prevent discomfort or hearing damage.

5. Maintenance

Battery Replacement:

The She's Birdie alarm uses two CR2032 Lithium Metal batteries. These batteries provide approximately 40 minutes of continuous alarm use. When the siren volume decreases or the strobe light weakens, it is time to replace the batteries.

1. Locate the battery compartment on the back of the device.
2. Using a small screwdriver, carefully open the battery compartment cover.
3. Remove the old CR2032 batteries and insert two new CR2032 Lithium Metal batteries, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover.



Image 5.1: Back of the Birdie alarm, indicating battery access.

Cleaning:

Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

6. Troubleshooting

- **Alarm does not activate or is faint:**
  Check battery level. If the sound is weak or the light is dim, replace the batteries as described in the Maintenance section. Ensure the pull pin is fully removed.
- **Alarm activates unintentionally:**

Ensure the pull pin is fully and securely inserted into the device. Avoid placing the alarm in situations where the pin could be accidentally dislodged or partially pulled.

- **Alarm does not deactivate:**
  Ensure the pull pin is fully reinserted into the device. If the alarm continues, check for any obstructions preventing the pin from seating correctly.

7. Specifications

Feature	Specification
Model Number	BIRDIE-AQUA
Noise Level	130 dB
Power Source	Battery Powered
Battery Type	2 x CR2032 Lithium Metal (included)
Battery Life (continuous)	Approximately 40 minutes
Voltage	3 Volts (DC)
Product Dimensions	3.7 x 1.25 x 0.6 inches (9.4 x 3.2 x 1.5 cm)
Item Weight	0.352 ounces (10 grams)
Color	Aqua

8. Warranty Information

For information regarding warranty coverage and terms, please refer to the product packaging or contact She's Birdie customer support directly. Keep your proof of purchase for warranty claims.

9. Support Information

If you have any questions, require assistance, or need further information about your She's Birdie Personal Safety Alarm, please visit the official She's Birdie website or contact their customer service department. Contact details are typically available on the product packaging or the brand's official online presence.

© 2025 She's Birdie. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08TT47Y99

More documents and user manuals: **https://manuals.plus/**