Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DeLUX DELUX-K2201V

DeLUX K2201V Multi-Device Rechargeable Keyboard User Manual

Model: DELUX-K2201V

1. Introduction

This user manual provides comprehensive instructions for the DeLUX K2201V Multi-Device Rechargeable Keyboard. This keyboard is designed for seamless connectivity with up to three devices simultaneously, featuring quiet scissor switches and a built-in rechargeable battery. It is compatible with a wide range of operating systems, including Windows, Mac OS, iOS, and Android.

2. Package Contents

- 1 x DeLUX K2201V Wireless Keyboard
- 1 x Detachable USB Charging Cable
- 1 x User Manual (this document)

3. Product Overview

The DeLUX K2201V keyboard features a compact 78-key layout with an integrated stand for mobile devices and a dedicated multimedia function row.



Figure 3.1: Top-down view of the DeLUX K2201V Multi-Device Rechargeable Keyboard, showcasing its compact design and key layout.



Figure 3.2: The DeLUX K2201V keyboard positioned with a laptop, tablet, and smartphone, illustrating its multi-device compatibility.

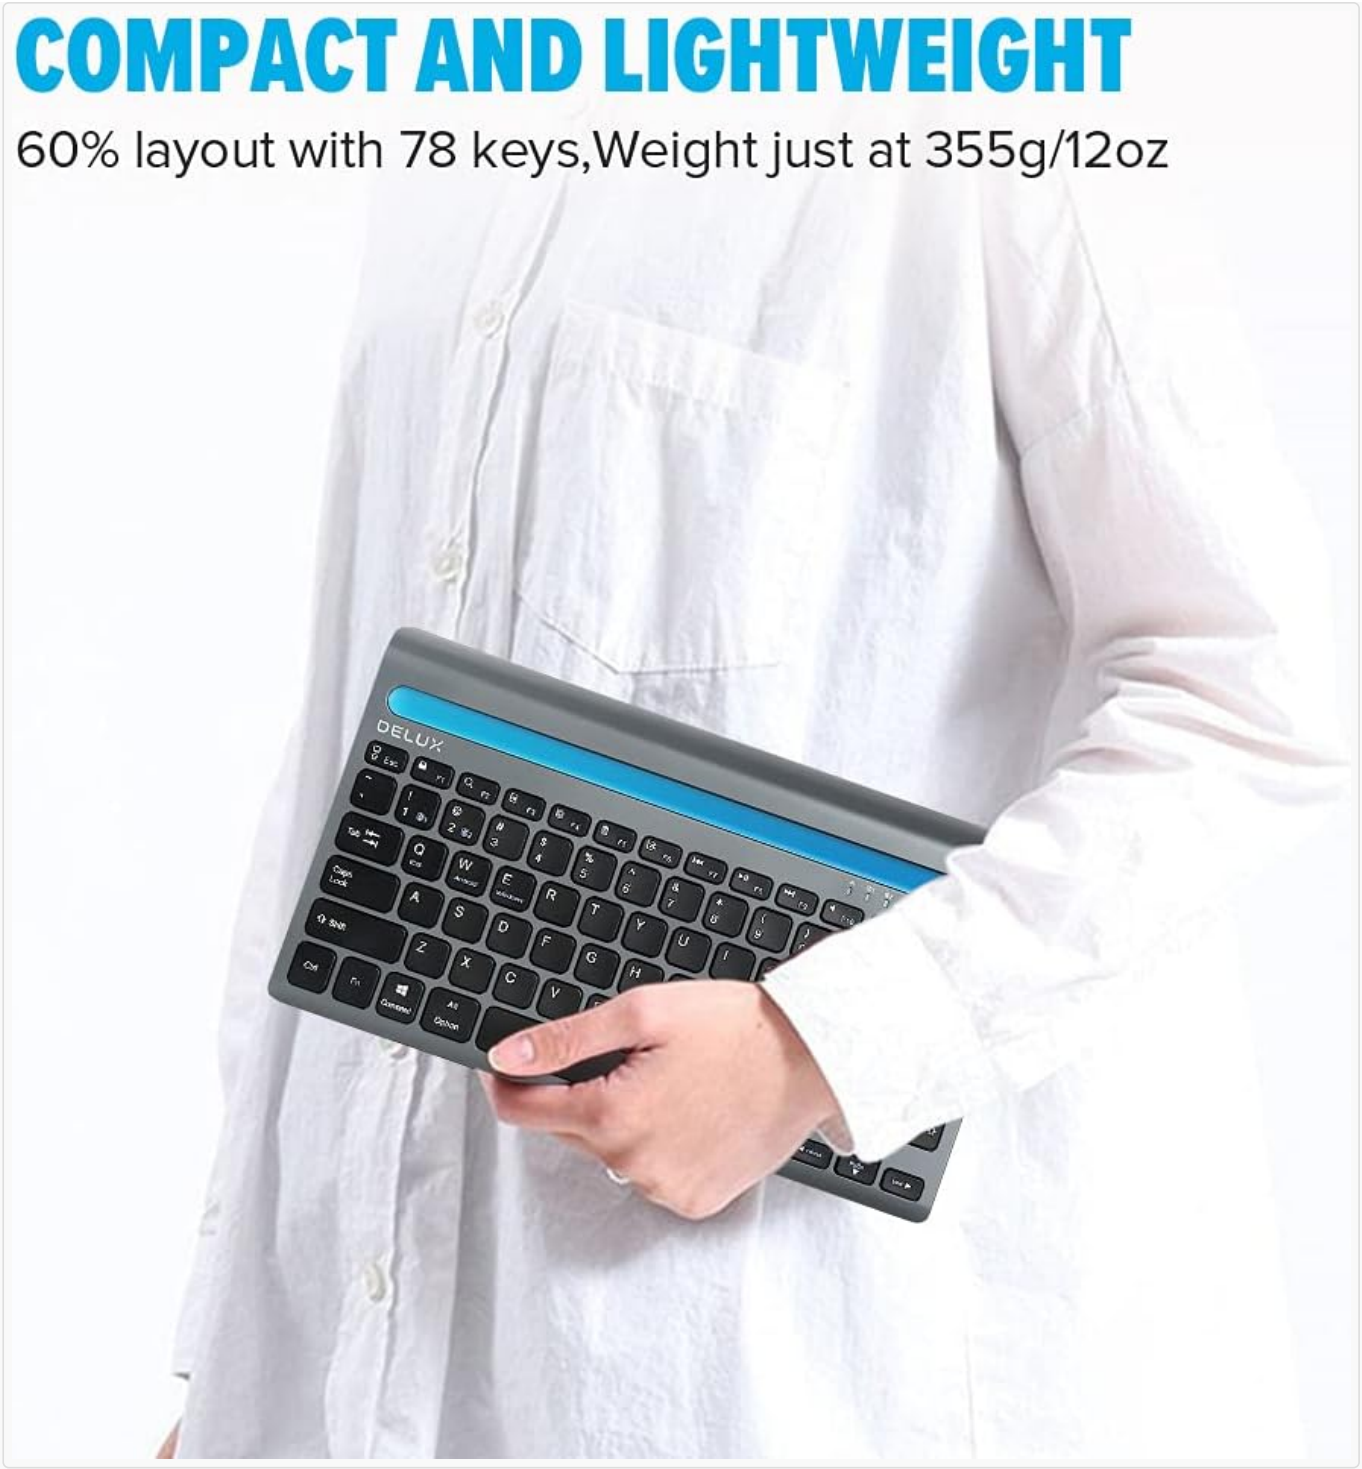


Figure 3.3: A person holding the DeLUX K2201V keyboard, highlighting its portability and lightweight nature.



Figure 3.4: The DeLUX K2201V keyboard with a tablet and smartphone securely placed in its integrated stand, designed to hold both devices simultaneously.



Figure 3.5: A detailed close-up of a key on the DeLUX K2201V keyboard, showing the scissor switch mechanism that provides quiet and comfortable typing.

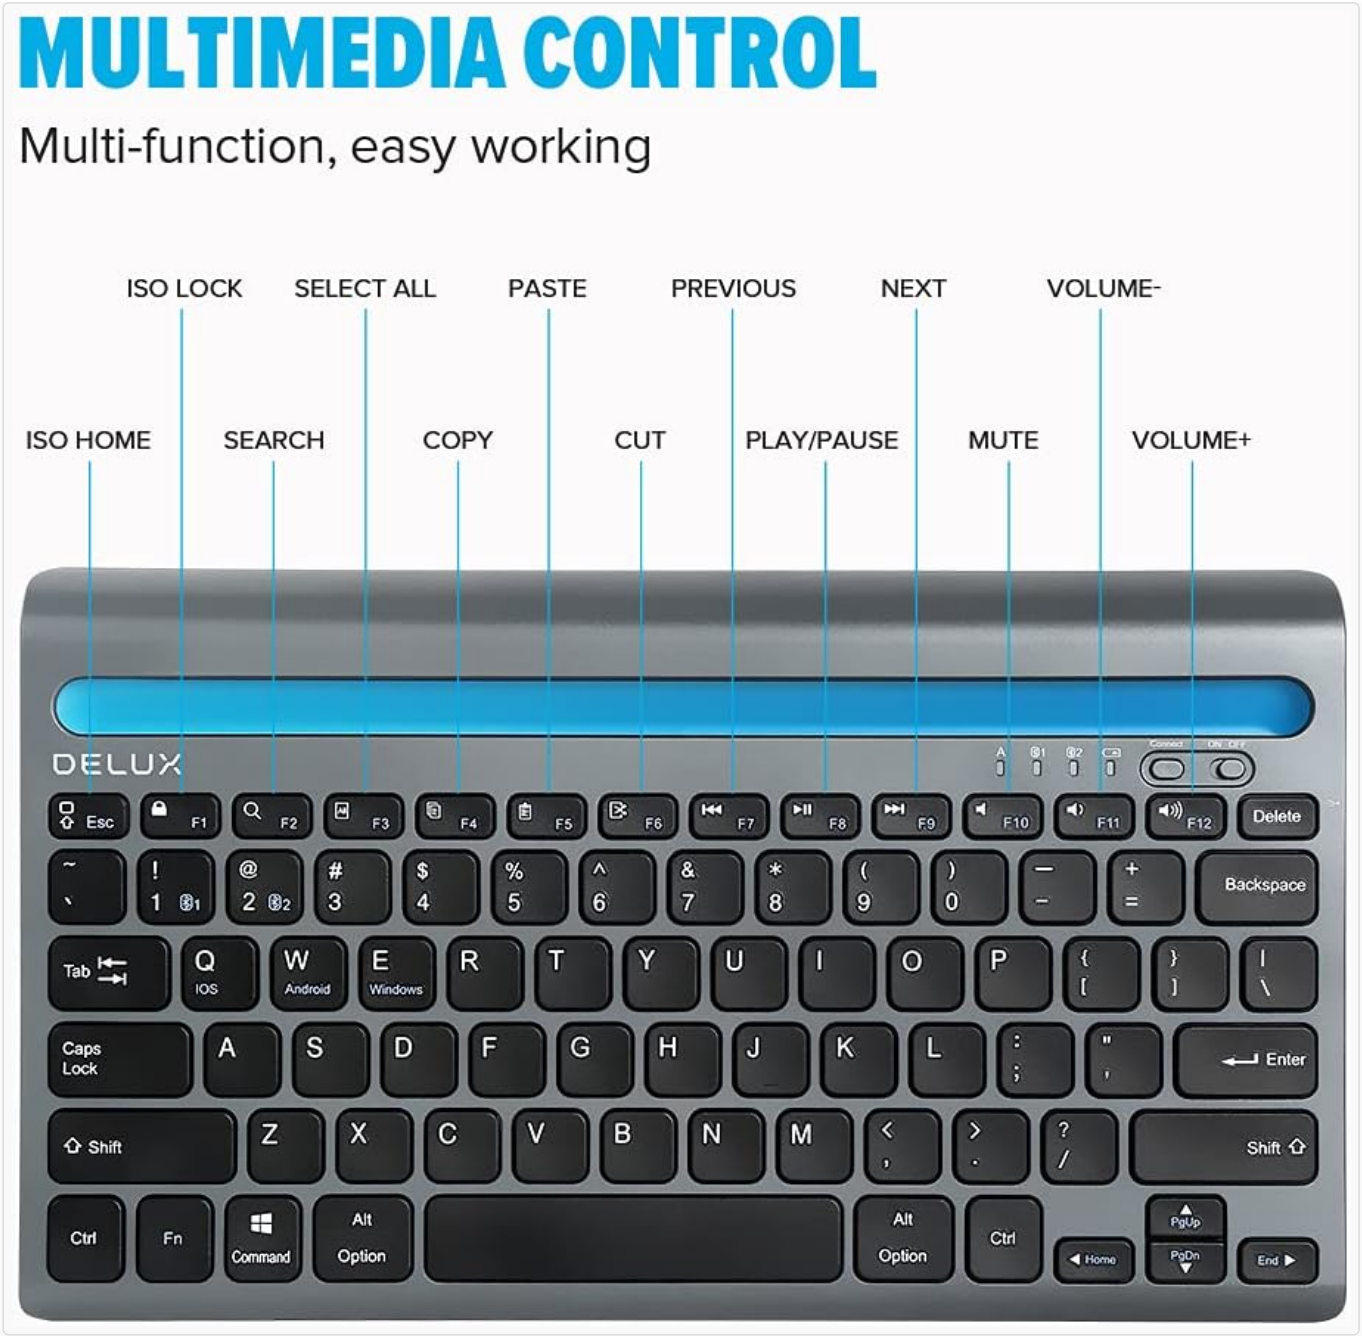


Figure 3.6: An illustration detailing the multimedia control functions available on the DeLUX K2201V keyboard, including volume, playback, and navigation keys.



Figure 3.7: A close-up view of the charging port and battery indicator lights on the DeLUX K2201V keyboard, highlighting its built-in rechargeable battery.

4. Specifications

Feature	Description
Model Number	DELUX-K2201V
Dimensions	285(L) x 163(W) x 18(H) mm (11.22 x 6.42 x 0.71 inches)
Net Weight	Approx. 0.4 kg (0.88 lb)
Key Numbers	78 Keys
Switch Type	Scissor Switch

Battery	Built-in 180 mAh rechargeable Lithium Ion battery
Battery Endurance	Approx. 60-70 hours of continuous use
Standby Time	Up to 2 weeks (or 3 months as per some descriptions) with 10 min auto-sleep
Connection	Bluetooth (BT1, BT2)
Compatibility	Windows 7/8/10 and above; Mac OS X v10.6 and above; iOS (iPhone, iPad); Android (Tablet, Smartphone); Smart TV; PC; Laptops; Mac; and other Bluetooth-enabled devices.
Color	Grey (K2201)

5. Setup Guide

5.1 Charging the Keyboard

Before first use, or when the battery indicator light shows low capacity, charge the keyboard using the provided USB cable.

1. Connect the small end of the USB cable to the charging port on the keyboard.
2. Connect the larger end of the USB cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The battery indicator light will illuminate during charging and turn off when fully charged.

A full charge provides approximately 60-70 hours of continuous use.

5.2 Bluetooth Pairing

The DeLUX K2201V keyboard supports connection with up to three devices via Bluetooth (BT1 and BT2 channels).

1. Turn on the keyboard by sliding the power switch to the 'ON' position.
2. Press and hold the **Fn** key and then press either **Q** (for BT1) or **W** (for BT2) for 3-5 seconds until the corresponding Bluetooth indicator light starts blinking rapidly. This indicates the keyboard is in pairing mode.
3. On your device (smartphone, tablet, PC, Smart TV):
    - Go to Bluetooth settings.
    - Ensure Bluetooth is enabled.
    - Search for new devices.
    - Select "DELUX K2201V" from the list of available devices.
    - Follow any on-screen prompts to complete the pairing process (e.g., entering a code).
4. Once successfully paired, the Bluetooth indicator light on the keyboard will stop blinking and remain solid for a few seconds before turning off.

Repeat these steps for additional devices using the other Bluetooth channel (BT1 or BT2).

6. Operating Instructions

6.1 Switching Between Connected Devices

To switch between your paired devices, simply press the**Fn** key simultaneously with the corresponding channel key:

- Press **Fn + Q** to switch to Device 1 (BT1).
- Press **Fn + W** to switch to Device 2 (BT2).
- Press **Fn + E** to switch to Device 3 (if applicable, typically for a third Bluetooth connection or a specific OS mode).

6.2 Multimedia Functions

The top row of keys (F1-F12) on the DeLUX K2201V keyboard also serves as multimedia control keys. To activate these functions, press the **Fn** key simultaneously with the desired F-key.

Key Combination	Function
Fn + Esc	ISO Lock / Home
Fn + F1	Home
Fn + F2	Search
Fn + F3	Select All
Fn + F4	Copy
Fn + F5	Paste
Fn + F6	Cut
Fn + F7	Previous Track
Fn + F8	Play/Pause
Fn + F9	Next Track
Fn + F10	Mute
Fn + F11	Volume Down
Fn + F12	Volume Up

6.3 Power Saving Mode

The keyboard features an automatic sleep mode to conserve battery. If inactive for approximately 10 minutes, the keyboard will enter sleep mode. To wake it up, simply press any key.

7. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the keyboard surface. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the keyboard regularly, even if not in constant use.
- **Avoid Liquids:** Do not expose the keyboard to liquids, as this can cause damage to internal components.

8. Troubleshooting

- **Keyboard not connecting/pairing:**
  - Ensure the keyboard is turned on and fully charged.
  - Make sure Bluetooth is enabled on your device.
  - Ensure the keyboard is in pairing mode (indicator light blinking rapidly).
  - Delete any previous pairings of the keyboard on your device and try pairing again.
  - Try restarting both the keyboard and your device.
- **Keys not responding:**
  - Check if the keyboard is connected to the correct device channel (Fn + Q/W/E).
  - Ensure the keyboard battery is not depleted.
  - Restart the keyboard and reconnect.
- **Lag or delay in typing:**
  - Ensure your device is within the effective Bluetooth range (typically up to 10 meters).
  - Minimize interference from other wireless devices.
  - Ensure the keyboard is fully charged.
- **Keyboard not charging:**
  - Verify the USB cable is securely connected to both the keyboard and the power source.
  - Try a different USB port or power adapter.
  - Ensure the USB cable is not damaged.

9. Warranty and Support Information

Specific warranty details for the DeLUX K2201V keyboard are not provided within this product data. For warranty claims, technical support, or further assistance, please refer to the warranty card included with your purchase or visit the official DeLUX website for the most up-to-date information and contact details.
You may also find support resources on the DeLUX brand store page on Amazon:DeLUX Amazon Store

© 2023 DeLUX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08TWK5BXV

More documents and user manuals: **https://manuals.plus/**