Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEXiBOOK ROB02DOG

LEXiBOOK Power Puppy Mini Robot Dog Instruction Manual

Model: ROB02DOG

Introduction Safety Contents Setup Operating Maintenance Troubleshooting Specifications Support

1. Introduction

Welcome to your LEXiBOOK Power Puppy Mini, an interactive robot dog designed for engaging play. This manual provides essential information for setting up, operating, and maintaining your new electronic companion. Please read these instructions carefully before use.



This image displays the LEXiBOOK Power Puppy Mini Robot Dog, a white and blue electronic toy, alongside its retail box. The packaging highlights key features such as sound, music, light effects, voice repeat, and sound reaction.

2. Safety Information

Please observe the following safety guidelines to ensure safe operation and prevent damage to the product or injury.

- Recommended for ages 3 years and up.
- Requires 2 AAA batteries (not included). Ensure correct polarity (+/-) when inserting batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the toy will not be used for an extended period to prevent leakage.
- Adult supervision is recommended during play, especially for younger children.
- Do not attempt to disassemble or modify the toy.
- Keep the toy away from water and moisture.

3. Package Contents

Verify that all items are present in the package:

- 1 x LEXiBOOK Power Puppy Mini Robot Dog
- 1 x Instruction Manual

4. Battery Installation

The Power Puppy Mini requires 2 AAA batteries for operation.

1. Locate the battery compartment on the underside of the Power Puppy Mini.
2. Using a small Phillips head screwdriver (not included), carefully open the battery compartment cover.
3. Insert 2 new AAA batteries, ensuring that the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

The Power Puppy Mini is now ready for use.

5. Operating Instructions

The Power Puppy Mini features three interactive modes, controlled by adjusting its head position. It also includes various sound and light effects, with its eyes lighting up during operation.

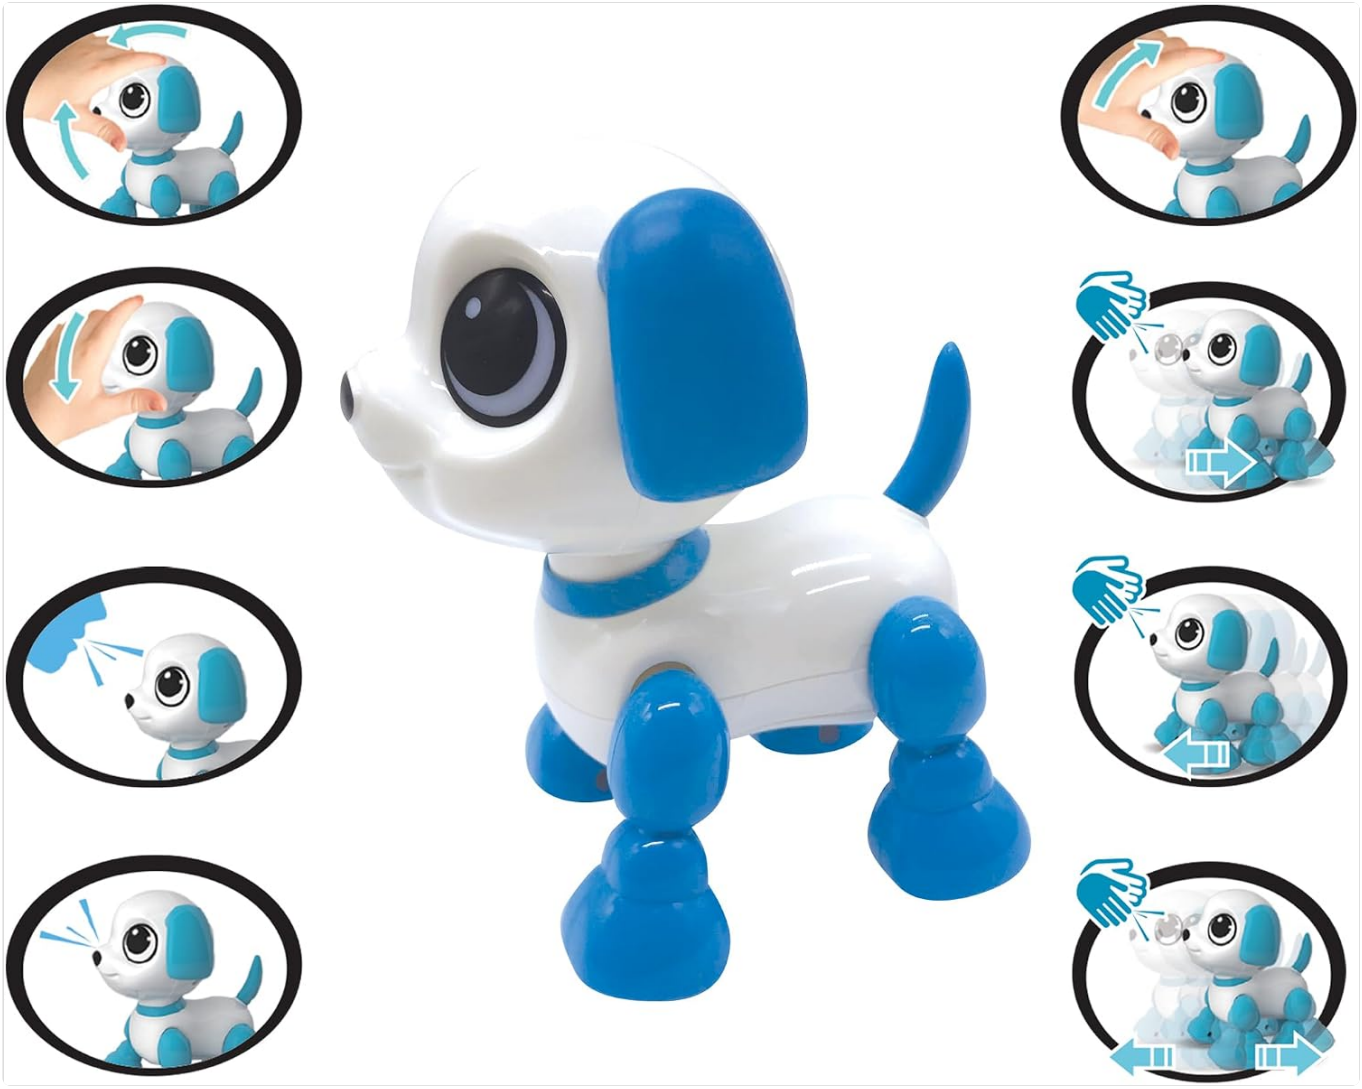

This diagram illustrates the various interactive functions of the Power Puppy Mini. It shows how head movements control modes (forward for voice repeat, back for sound reaction, middle for off) and how claps trigger different actions like moving forward, backward, or dancing.

5.1. Head Forward: Karaoke Mode

In this mode, the Power Puppy Mini will repeat what you say. Speak clearly towards the dog's head for optimal voice recognition. The dog will mimic your words in a fun, robotic voice.

5.2. Head Back: Sound Reaction Mode

The dog will react to claps or other distinct sounds in this mode:

- **One Clap:** The dog moves forward.
- **Two Claps:** The dog moves backward.
- **Three Claps:** The dog performs a dance sequence with accompanying music and light effects.

5.3. Head in the Middle: Off Mode

Position the dog's head in the central position to turn off the toy. This conserves battery life when the Power Puppy Mini is not in use.

6. Care and Maintenance

Proper care will extend the life of your Power Puppy Mini.

- Clean the toy with a soft, dry cloth. Do not use abrasive cleaners or chemical solvents.
- Do not immerse the toy in water or expose it to excessive moisture.
- Avoid exposing the toy to direct sunlight or extreme temperatures.
- Store the toy in a dry, cool place when not in use.
- Remove batteries if the toy will be stored for an extended period to prevent potential battery leakage and damage.

7. Troubleshooting

If you encounter any issues with your Power Puppy Mini, please refer to the following table for common problems and solutions.

Problem	Solution
Toy does not turn on.	Check battery installation and ensure batteries are new and correctly inserted with proper polarity. Ensure the head is in a functional position (not in the middle 'off' position).
Toy does not respond to commands (voice/claps).	Ensure the head is in the correct position for the desired mode (forward for Karaoke, back for Sound Reaction). Check battery level and replace if low. Speak clearly and closely for Karaoke mode. Clap distinctly for Sound Reaction mode.
Sound is distorted or too quiet.	Replace batteries with new ones. Ensure there are no obstructions to the speaker.
Toy moves erratically or not at all.	Check battery level. Ensure the toy is on a flat, smooth surface.

8. Specifications

- **Model:** ROB02DOG
- **Brand:** LEXiBOOK
- **Power Supply:** 2 x AAA batteries (not included)
- **Product Dimensions:** Approximately 11 x 13 x 7 inches (28 x 33 x 18 cm)
- **Item Weight:** Approximately 3.84 ounces (109 grams)
- **Recommended Age:** 3 years and up
- **Features:** Sound, Music, Light Effects, Voice Repeat, Sound Reaction



This image provides the approximate dimensions of the Power Puppy Mini Robot Dog, indicating its height, length, and width for reference.

9. Warranty and Support

For warranty information, technical support, or inquiries regarding your LEXiBOOK Power Puppy Mini, please refer to the contact details provided on the product packaging or visit the official LEXiBOOK website. Please retain your purchase receipt as proof of purchase for any warranty claims.

© 2025 LEXiBOOK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08VXWBKKM

More documents and user manuals: **https://manuals.plus/**