Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ECOLAND EL-708

ECOLAND EL-708 Eye-Caring LED Desk Lamp User Manual

Model: EL-708

1. Introduction

Thank you for purchasing the ECOLAND EL-708 Eye-Caring LED Desk Lamp. This manual provides important information regarding the setup, operation, maintenance, and troubleshooting of your new desk lamp. Please read it thoroughly before use and retain it for future reference.



Image: The ECOLAND EL-708 Eye-Caring LED Desk Lamp in a study setting, highlighting its eye-caring features and bright illumination.

2. Safety Instructions

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not disassemble or modify the lamp. This may cause electric shock or damage the product.
- Keep the lamp away from water or other liquids. This product is not water-resistant.
- Use only the provided power adapter. Using an incompatible adapter may cause damage or fire.
- Avoid placing the lamp in unstable locations to prevent it from falling.
- Do not look directly into the LED light source for extended periods, as it may cause eye strain.
- Unplug the lamp from the power outlet before cleaning or when not in use for a long time.

3. Package Contents

Please check the box for the following items:

- ECOLAND EL-708 Desk Lamp x 1
- AC Adapter x 1
- User Manual x 1
- Warranty Card x 1

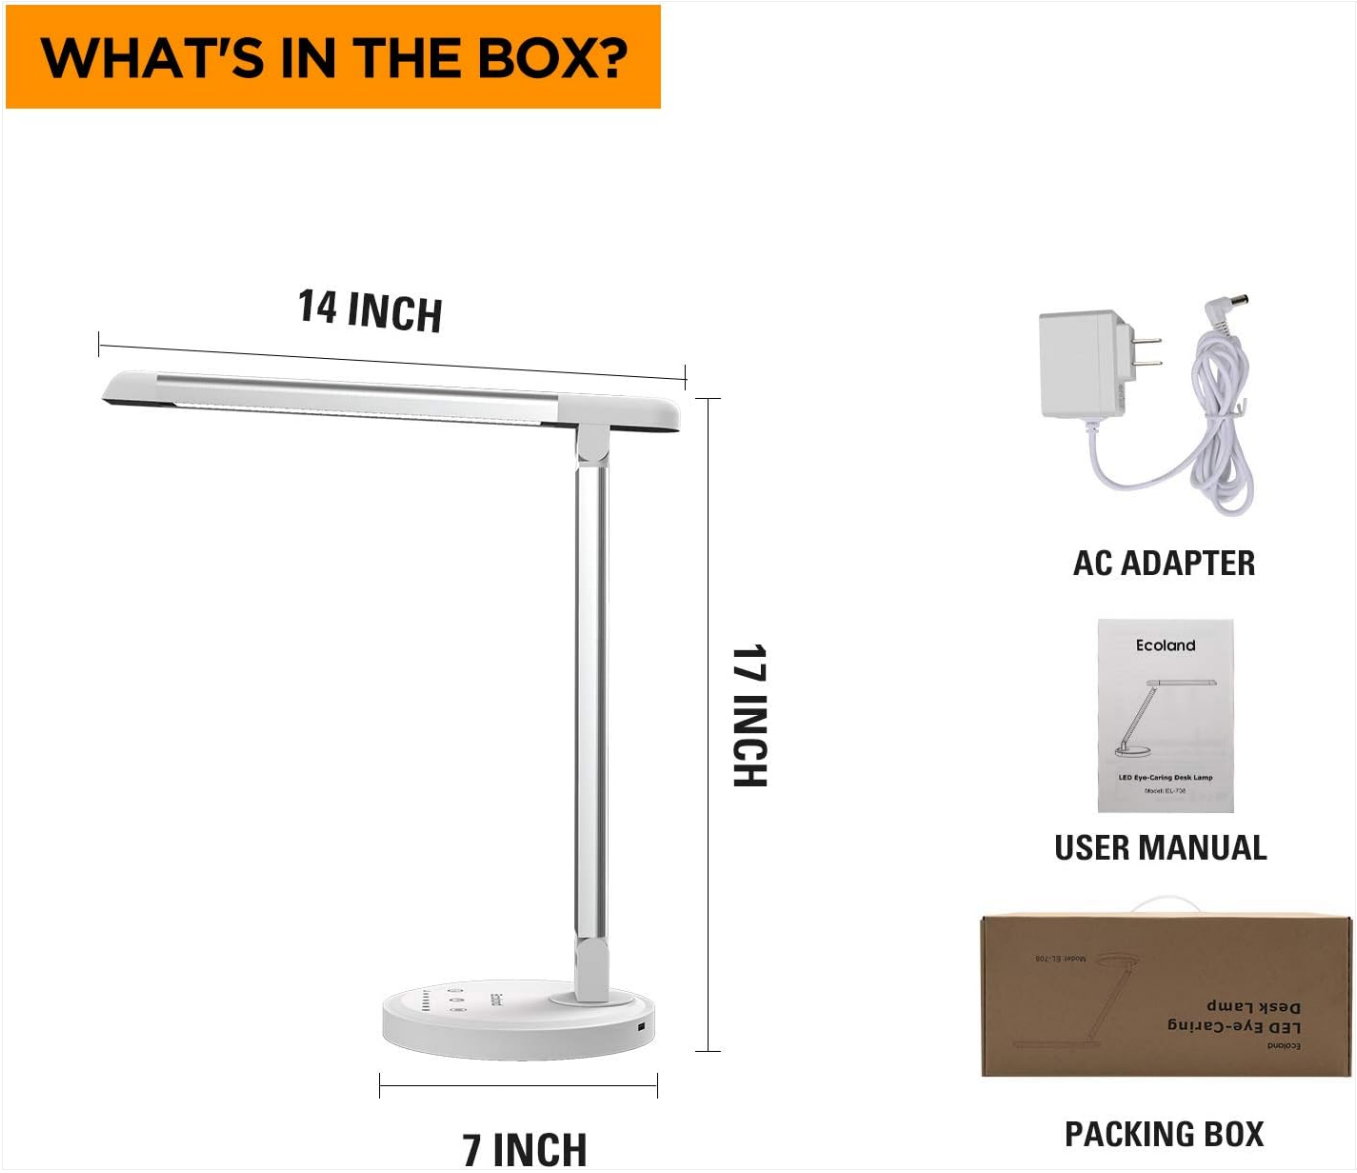


Image: A visual representation of the items included in the product package: the ECOLAND EL-708 Desk Lamp, AC adapter, user manual, and packing box.

4. Product Overview

The ECOLAND EL-708 is an advanced eye-caring LED desk lamp designed for various environments such as offices, homes, and study areas. It features:

- **12W High Power & 72 LED Beads:** Provides bright and uniform illumination.
- **5 Color Modes (3000K-5000K):** Adjustable color temperature to suit different tasks and preferences.
- **7 Brightness Levels:** Dimmable light to achieve optimal illumination.
- **USB Charging Port:** Convenient 5V/2.1A fast charging for mobile phones and tablets.
- **Touch Control:** Intuitive and easy-to-use touch-sensitive buttons.
- **Auto Timer:** 30/60 minute automatic shut-off function.
- **Memory Function:** Remembers the last used brightness and color mode settings.

- **Flexible Design:** Rotatable lamp head and arm for adjustable lighting angles.
- **High CRI (>90):** Ensures colors appear natural and vibrant.



Image: Diagram illustrating the lighting range of the ECOLAND EL-708 Desk Lamp with dimensions and a close-up of the 72 LED beads.

5. Setup

Follow these steps to set up your ECOLAND EL-708 Desk Lamp:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Place the Lamp:** Position the lamp base on a stable, flat surface.
3. **Connect Power:** Insert the AC adapter into the power input port located at the back of the lamp base. Plug the other end of the adapter into a standard electrical outlet.
4. **Adjust Angle:** Adjust the lamp arm and head to your desired lighting angle. The lamp arm can rotate 90 degrees, and the lamp head can rotate 130 degrees horizontally and 135 degrees vertically.

6. Operating Instructions

6.1 Power On/Off

- Touch the **Power button** (⏻) on the lamp base to turn the lamp on or off.

6.2 Adjusting Brightness

- With the lamp on, touch the **Brightness Up** (☀+) or **Brightness Down** (☀-) buttons to cycle through 7 brightness levels.



Image: Visual demonstration of the 7 brightness levels available on the ECOLAND EL-708 Desk Lamp, ranging from 14% to 100% illumination.

6.3 Changing Color Modes

- Touch the **Mode button** (☀) to switch between 5 color temperature modes (3000K, 3500K, 4000K, 4500K, 5000K).



Image: Illustration of the 5 distinct color temperature modes (3000K to 5000K) offered by the ECOLAND EL-708 Desk Lamp.

6.4 Using the USB Charging Port

- Connect your mobile phone, tablet, or other USB-powered device to the USB charging port on the lamp base using a compatible USB cable. The port provides 5V/2.1A fast charging.



Image: The ECOLAND EL-708 Desk Lamp's base with a smartphone connected to its 5V/2.1A fast USB charging port.

6.5 Setting the Auto Timer

- Touch the **Timer button** (⏲) to activate the auto-off timer. One touch sets it to 30 minutes, a second touch sets it to 60 minutes, and a third touch deactivates it.

6.6 Memory Function

- The lamp automatically remembers the last brightness and color mode settings used. When you turn the lamp on again, it will resume these settings.

6.7 Adjusting Lamp Angle

- The lamp arm can be rotated up to 90 degrees from its vertical position.
- The lamp head can be rotated up to 130 degrees horizontally and 135 degrees vertically to direct light precisely where needed.

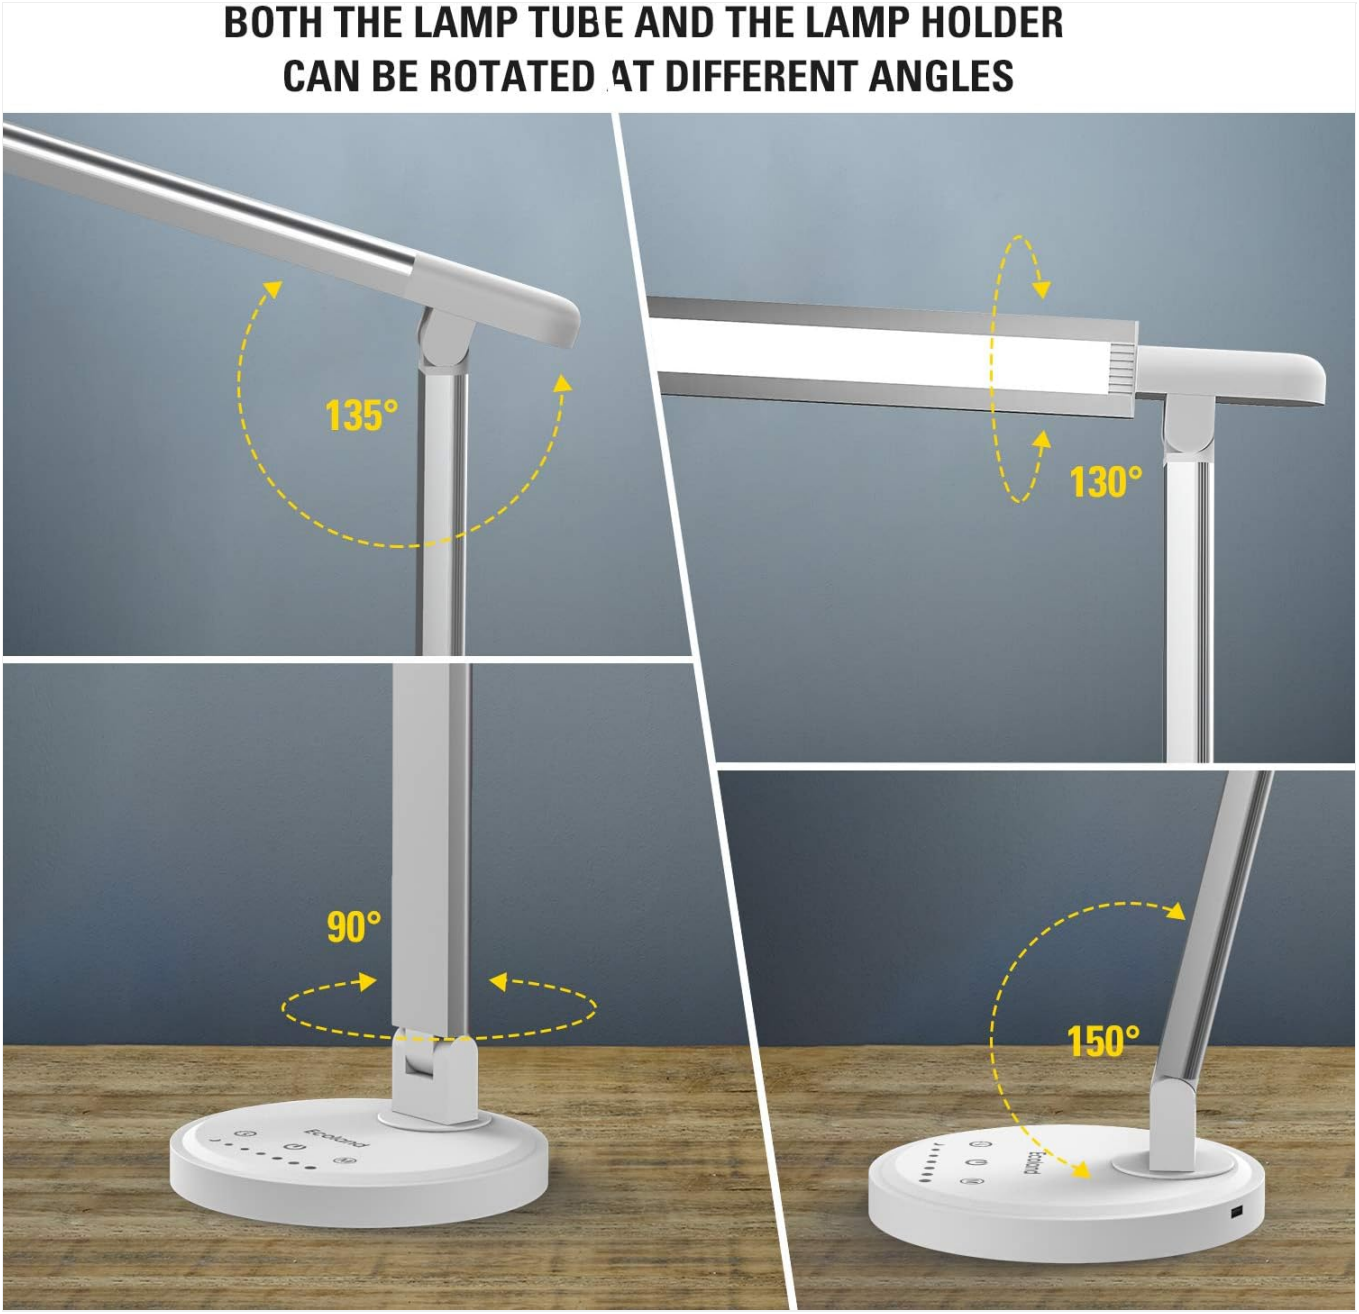


Image: Diagrams illustrating the flexible rotation capabilities of the ECOLAND EL-708 Desk Lamp's arm and head, showing angles of 90, 135, 130, and 150 degrees.

7. Maintenance

Proper maintenance ensures the longevity and optimal performance of your lamp:

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the lamp. Do not use abrasive cleaners, solvents, or harsh chemicals, as they may damage the finish.
- **Storage:** If storing the lamp for an extended period, unplug it and keep it in a cool, dry place.
- **LEDs:** The LED light source is integrated and not user-replaceable. Do not attempt to replace the LEDs.

8. Troubleshooting

If you encounter issues with your ECOLAND EL-708 Desk Lamp, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply.	Ensure the power adapter is securely plugged into both the lamp and the wall outlet. Check if the outlet is functional.
Light flickers or is unstable.	Loose connection or power fluctuation.	Check all power connections. Try plugging the lamp into a different outlet.
USB charging port not working.	Lamp not powered on or faulty cable.	Ensure the lamp is powered on. Try a different USB cable or device to confirm the port's functionality.
Touch controls are unresponsive.	Dust/debris on touch panel or temporary malfunction.	Clean the touch panel with a dry cloth. Unplug the lamp for 1 minute and then plug it back in to reset.

9. Specifications

Feature	Detail
Model Number	EL-708
Brand	ECOLAND
Power Source	AC Powered
Wattage	12 Watts
Light Source Type	LED (72 beads)
Color Temperature	3000K-5000K (5 modes)
Brightness Levels	7 Dimmable Levels
Luminous Flux	650 Lumens
Illumination	1500 Lux
Color Rendering Index (CRI)	>90
Control Method	Touch Control
USB Output	5V/2.1A
Auto Timer	30/60 Minutes
Materials	Metal Alloy, Plastic
Product Dimensions (L x W x H)	43.9 x 18.8 x 7.4 cm
Item Weight	2.43 pounds
Voltage	120 Volts
Water Resistance Level	Not Water Resistant

10. Warranty & Support

The ECOLAND EL-708 Eye-Caring LED Desk Lamp comes with a**2-year warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.
For warranty claims, technical support, or any inquiries, please contact your retailer or ECOLAND BIZ customer service with your purchase details and model number (EL-708).

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08WQBDBJG

More documents and user manuals: **https://manuals.plus/**