Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEGO 43194

LEGO Disney Anna and Elsa's Frozen Wonderland 43194 Building Set

Model: 43194 | Brand: LEGO

Introduction

This instruction manual provides detailed guidance for assembling and enjoying your LEGO Disney Anna and Elsa's Frozen Wonderland 43194 building set. Designed for builders aged 4 and up, this set encourages creative play with beloved characters and iconic Frozen elements. The set contains 154 pieces, allowing for the construction of an ice castle, a seesaw, a sled, and other small builds.



Image: The complete LEGO Disney Anna and Elsa's Frozen Wonderland 43194 set, showcasing the main ice castle, a sled with Anna and Olaf, a seesaw with Snowgies, and other small accessory builds.

Setup and Assembly

The LEGO Disney Anna and Elsa's Frozen Wonderland set is designed for easy assembly, especially for younger builders. Each bag inside the box contains pieces for a complete sub-model, simplifying the building process. The set includes a special beginner brick and a large wall element to help start construction quickly.

Assembly Instructions:

1. **Unpack Components:** Carefully open the box and sort the numbered bags. Each bag corresponds to a specific part of the model.
2. **Follow Printed Instructions:** Refer to the included instruction booklets, which feature simple, picture-based steps to guide you through the build.
3. **Utilize Digital Instructions:** For an enhanced building experience, download the LEGO Building Instructions app. This app provides interactive digital instructions with zoom and rotate functions, making assembly even clearer.
4. **Build the Ice Castle:** Begin with the main ice castle structure, utilizing the beginner brick and large wall for a stable foundation.
5. **Assemble Side Builds:** Construct the additional elements such as the seesaw, sled, and treasure chest as per the instructions.

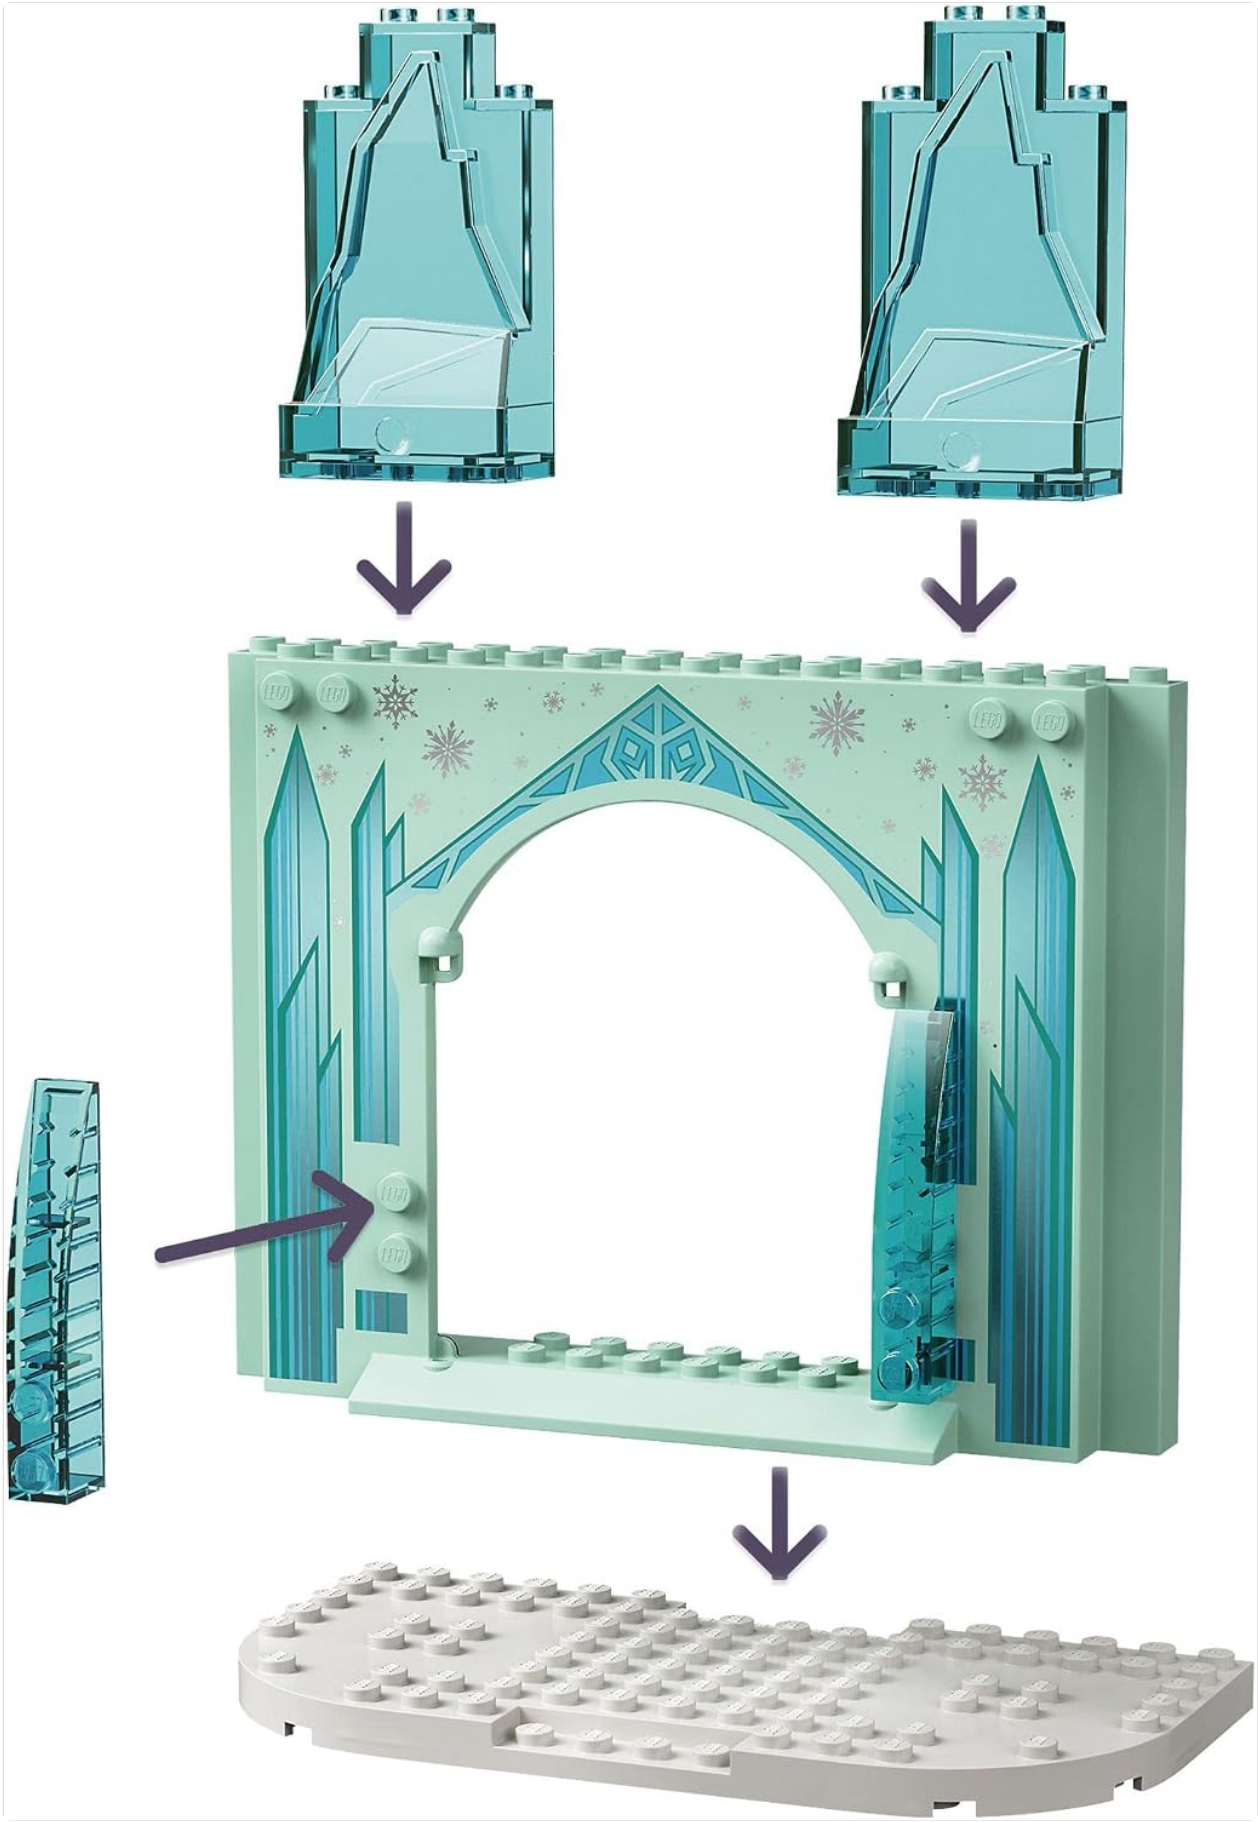

Image: A visual guide demonstrating a key assembly step for the ice castle, highlighting the connection points for transparent blue ice elements to the main structure.



Image: The back of the product packaging, illustrating the "Learn to Build" features and how the set's components come together, including the main castle and smaller builds.

Operating and Play Features

Once assembled, the LEGO Disney Anna and Elsa's Frozen Wonderland set offers numerous opportunities for imaginative play. Interact with the included minifigures and explore the various features of the ice castle and accompanying builds.

Key Play Elements:

- **Ice Castle:** The main castle features a spinning platform for Elsa, allowing her to "dance" or showcase her ice powers. A small cookie jar accessory adds to the interior details.
- **Seesaw:** A separate seesaw build provides interactive fun for the three Snowgies included in the set.
- **Sled:** The buildable sled can transport Anna and Olaf across the snowy landscape, complete with small chocolate bar accessories for their journey.
- **Treasure Chest:** A small treasure chest, filled with tiny treasures, can be hidden or used in various play scenarios.
- **Characters:** The set includes LEGO mini-doll figures of Disney's Anna and Elsa, along with a LEGO figure of Olaf

and three Snowgies, enabling diverse storytelling.



Image: A detailed view of the ice castle's interior, featuring Elsa on a spinning platform and a cookie jar, alongside a separate build with Anna and a treasure chest.



Image: Close-up of the included LEGO figures: Anna, Elsa, Olaf, and three adorable Snowgies, ready for play.



Image: A child and an adult engaging in imaginative play with the assembled LEGO Disney Frozen Wonderland 43194 set, demonstrating the interactive nature of the toy.

Maintenance

To ensure the longevity and cleanliness of your LEGO set, follow these simple maintenance guidelines:

- **Cleaning:** Clean LEGO bricks with a mild soap solution and lukewarm water (not exceeding 40°C or 104°F). Rinse thoroughly and air dry at room temperature. Avoid using hot water, harsh chemicals, or abrasive cleaners, as these can damage the plastic.
- **Storage:** Store your LEGO set in a cool, dry place away from direct sunlight to prevent discoloration and warping of the plastic elements. Keep small pieces in a container to avoid loss.
- **Handling:** Handle the assembled model with care to prevent pieces from detaching.

Troubleshooting

If you encounter any issues during assembly or play, consider the following common solutions:

- **Missing Pieces:** Double-check all packaging and sorting areas. If a piece is genuinely missing, contact LEGO Customer Service for assistance.
- **Assembly Difficulties:** Review the instruction steps carefully. Ensure all pieces are correctly oriented and firmly pressed together. The digital instructions in the LEGO Building Instructions app can provide alternative views and clearer guidance.
- **Loose Connections:** Ensure that all bricks are fully connected. Sometimes, a firm press is needed to secure pieces.

Specifications

Brand	LEGO
Model Name	LEGO Disney Anna and Elsa's Frozen Wonderland
Model Number	43194
Number of Pieces	154
Age Range	4 Years +
Material Type	Plastic
Item Dimensions (LxWxH)	2.32 x 11.1 x 10.31 inches
Item Weight	514 Grams
Educational Objective	Construction Skills, Creative Thinking, Engineering Skills, Hand-Eye Coordination, Role Play
GTIN / UPC	887961093926

Warranty and Support

LEGO products are manufactured to high-quality standards. For information regarding product warranty, missing parts, or any other support needs, please visit the official LEGO website or contact their customer service directly. You can typically find detailed support information and contact options at www.lego.com/service.

© 2024 LEGO Group. All rights reserved. LEGO and the LEGO logo are trademarks of the LEGO Group.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the

question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08WXBP73J

More documents and user manuals: **https://manuals.plus/**