Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Eureka NEC185

Eureka NEC185 Cordless Stick Vacuum Cleaner User Manual

Model: NEC185 | Brand: Eureka

Introduction

The Eureka NEC185 cordless vacuum cleaner is designed to provide efficient and convenient cleaning for your home. Its lightweight and versatile design makes it ideal for various cleaning tasks on hard floors, carpets, and rugs. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your new vacuum cleaner.



Figure 1: Eureka NEC185 Cordless Stick Vacuum Cleaner with included accessories.

Key Features

- **Bendable Wand:** Clean hard-to-reach areas with ease, even in tight spaces, and reduce back strain with our flexible wand.



Figure 2: The bendable wand allows for easy cleaning under furniture.

- **Efficient Cordless Cleaning:** Say goodbye to the hassle of cords and enjoy thorough cleaning with the latest motor technology that efficiently removes dirt and debris from carpets, hardwood floors, and rugs.



Figure 3: The vacuum head with LED lights effectively cleans debris from hard surfaces.

- **40 Minutes Fade-free Runtime:** Switch effortlessly to MAX power on fingertip controls for deeper cleaning on carpets and rugs, leaving your floors spotless and fresh.
- **Easy Rest Feature:** Our vacuum cleaner comes with a specially designed nook that ensures safe and easy resting between cleaning sessions, saving you time and effort.



Figure 4: The easy rest feature allows the vacuum to stand upright when paused.

- **LED Headlights:** Illuminate dust and debris under furniture, making it easier to spot and remove any hidden dirt for a more thorough clean, even in dimly lit areas.



Figure 5: LED headlights enhance visibility for thorough cleaning.

Setup and Assembly

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all included components are present: main unit, extension wand, floor nozzle, crevice tool, 2-in-1 dusting brush, and wall mount bracket.
2. **Assemble the Vacuum:** Insert the extension wand into the main unit until it clicks securely into place. Then, attach the floor nozzle to the other end of the extension wand, ensuring it also clicks into position.
3. **Initial Charge:** Before first use, fully charge the vacuum. Connect the charging cable to the main unit and plug it into a power outlet. The battery indicator lights will show charging status. A full charge provides up to 40 minutes of runtime.
4. **Attach Accessories:** The crevice tool and 2-in-1 dusting brush can be attached directly to the main unit for handheld cleaning, or to the end of the extension wand for reaching high or low areas.

Operating Instructions

Power Modes

The Eureka NEC185 features two power levels for different cleaning needs:

- **Low/Eco Mode:** Provides up to 40 minutes of runtime, ideal for light cleaning and everyday dust on hard floors.
- **High/MAX Power Mode:** Offers increased suction for deeper cleaning on carpets and stubborn debris.

Using the Vacuum

1. **Turn On/Off:** Press the power button on the handle to turn the vacuum on or off.
2. **Switch Modes:** Use the mode button to toggle between Low/Eco and High/MAX power settings.
3. **Cleaning Under Furniture:** Utilize the bendable wand and the 'Lays Down Flat' feature to easily clean under low-lying furniture without bending or moving heavy items.

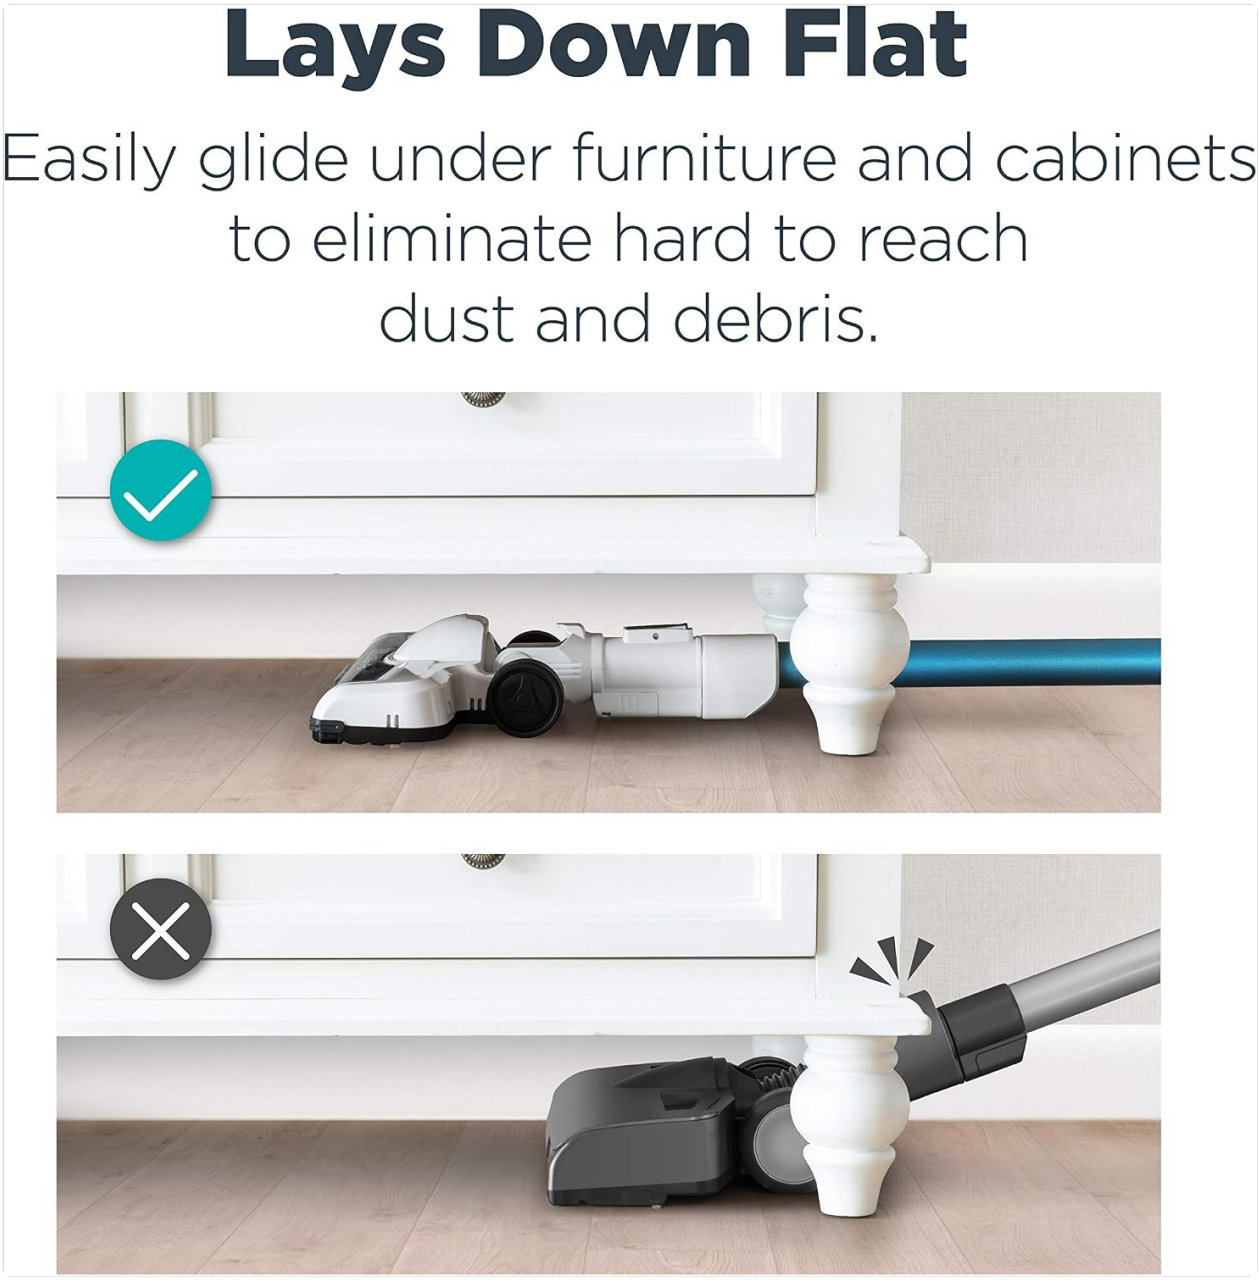

Figure 6: The vacuum's design allows it to lay flat for cleaning in tight spaces.

4. **Handheld Use:** Detach the main unit from the extension wand to use it as a portable handheld vacuum for quick clean-ups, car interiors, or upholstery. Attach the crevice tool or dusting brush as needed.

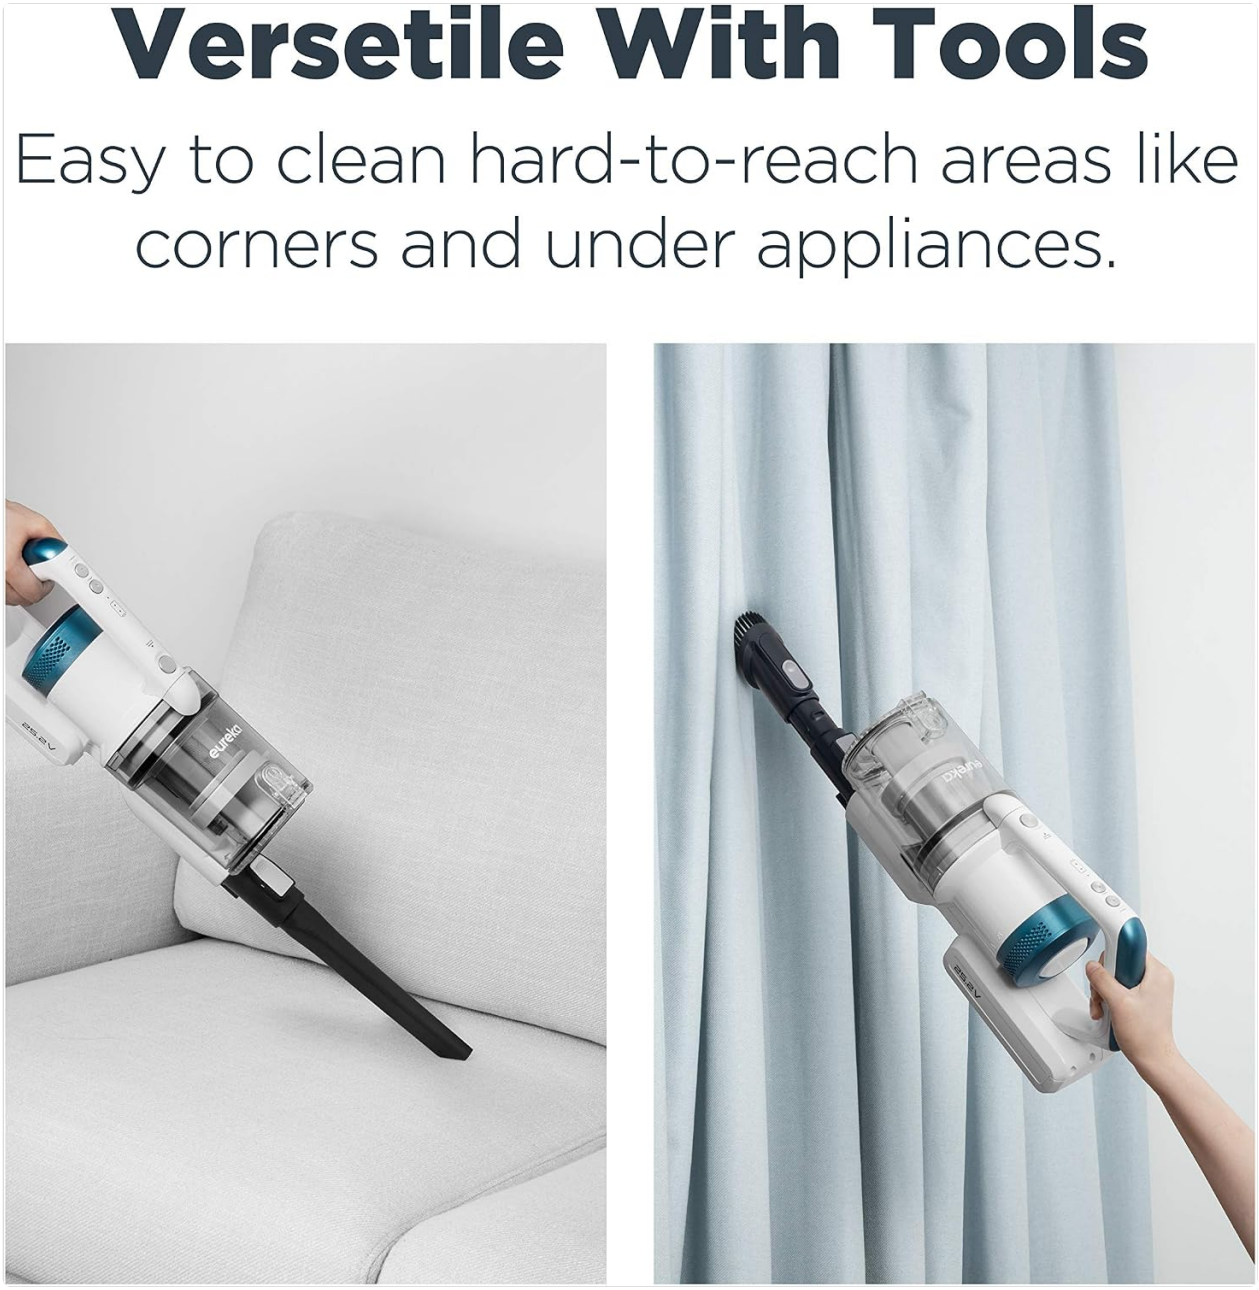

Figure 7: The lightweight design makes it easy to use as a handheld vacuum.

Maintenance

Emptying the Dust Cup

To maintain optimal suction, empty the dust cup regularly, ideally after each use.

1. Locate the dust cup release button on the main unit.
2. Position the dust cup over a trash bin.
3. Press the dust cup release button to open the bottom flap and empty debris.



Figure 8: Two methods for easily emptying the dust cup.

Cleaning the Filter

The Eureka NEC185 features a washable foam filter. Regular cleaning is essential for performance.

1. Twist and remove the dust cup from the main unit.
2. Pull out the foam filter from inside the dust cup.
3. Rinse the filter under cold running water until the water runs clear.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it into the dust cup. Do not use a dryer or direct heat.

Product Specifications

Feature	Specification
Brand	Eureka

Model Name	Rechargeable Handheld Vacuum Cleaner Portable with Powerful Motor Efficient Suction
Model Number	NEC185
Color	White
Special Feature	Lightweight, Headlight, Washable Filter
Filter Type	Foam
Included Components	Crevice Tool, 2-in-1 Dusting Brush, Wall Mount Bracket
Is Cordless?	Yes
Capacity	0.7 Liters
Wattage	150 watts
Runtime	40 minutes
Item Weight	5.5 pounds
Product Dimensions	10.04"L x 8.86"W x 46.5"H
Battery Type	Lithium-Ion
Noise Level	78 dB

Troubleshooting

- **No Power:** Ensure the vacuum is fully charged. Check if the power button is pressed firmly.
- **Low Suction:**
  - Check if the dust cup is full and needs emptying.
  - Inspect the foam filter for clogs and clean it as per maintenance instructions.
  - Check the floor nozzle and extension wand for any blockages.
  - Ensure the brush roll is free of tangled hair or debris.
- **Vacuum Not Charging:** Verify that the charging cable is securely connected to both the vacuum and the power outlet. Ensure the outlet is functional.
- **Unusual Noise:** Turn off the vacuum and check for any foreign objects lodged in the brush roll, nozzle, or wand.

Warranty and Support

Warranty: This product comes with a 1.5-year manufacturer's warranty.
For detailed instructions, safety information, and further support, please refer to the official user manual:
Download User Manual (PDF)
For customer service inquiries, please visit the Eureka official website or contact their support line.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08XWVX62X

More documents and user manuals: **https://manuals.plus/**