Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Craftmade 54960-SB-LED

Craftmade Melody 54960-SB-LED LED Wall Sconce Instruction Manual

Model: 54960-SB-LED

Important Safety Instructions

WARNING: Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing. All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.

- Read all instructions carefully before beginning installation.
- Ensure the mounting surface is structurally sound and can support the fixture's weight.
- Do not connect this fixture to an ungrounded electrical system.
- Do not attempt to alter the fixture in any way.
- Wear safety glasses and appropriate protective gear during installation.
- Keep children and pets away from the work area.

Package Contents

Verify that all components listed below are included in your package. If any parts are missing or damaged, contact Craftmade customer support before proceeding with installation.

- Wall Sconce Fixture (with integrated LED disk)
- Frosted Glass Shade
- Mounting Hardware Pack (includes mounting screws, wire nuts, etc.)
- Installation Guide (this document)



Image: The Craftmade Melody 54960-SB-LED wall sconce, featuring a satin brass frame and a white frosted oval LED light panel.

Tools Required (Not Included)

- Phillips Head Screwdriver
- Flat Head Screwdriver
- Wire Strippers
- Pliers
- Electrical Tape
- Safety Glasses
- Ladder (if necessary)

Installation Instructions

Follow these steps carefully to install your Craftmade Melody LED Wall Sconce. It is recommended to have a second person assist during installation.

1. **Turn Off Power:** Locate the circuit breaker or fuse box that supplies power to the wall switch or outlet where you intend to install the fixture. Turn off the power completely. Verify power is off using a voltage tester.
2. **Prepare Mounting Surface:** Ensure the existing junction box is securely mounted in the wall. The fixture is designed for standard

junction box installation.

3. **Attach Mounting Plate:** Secure the mounting plate (included in hardware pack) to the junction box using the provided screws. Ensure the plate is level and firmly attached.
4. **Make Electrical Connections:**
    - Connect the **black** wire from the fixture to the **black** (hot) wire from the junction box using a wire nut.
    - Connect the **white** wire from the fixture to the **white** (neutral) wire from the junction box using a wire nut.
    - Connect the **ground** wire (bare copper or green) from the fixture to the **ground** wire from the junction box (or to the junction box itself if no ground wire is present, using a ground screw).
    - Ensure all connections are secure and covered with wire nuts. Wrap electrical tape around wire nuts for added security.
5. **Mount Fixture:** Carefully tuck all wires into the junction box. Align the fixture's backplate with the mounting plate and secure it using the provided screws. Ensure the fixture is flush against the wall.
6. **Install Shade:** Gently place the frosted glass shade onto the fixture. Secure it according to the specific design of your sconce (e.g., by twisting or using small screws, typically detailed in a diagram).
7. **Restore Power:** Once the fixture is securely installed and all connections are made, restore power at the circuit breaker or fuse box.
8. **Test Fixture:** Turn on the wall switch to test the functionality of your new LED wall sconce.

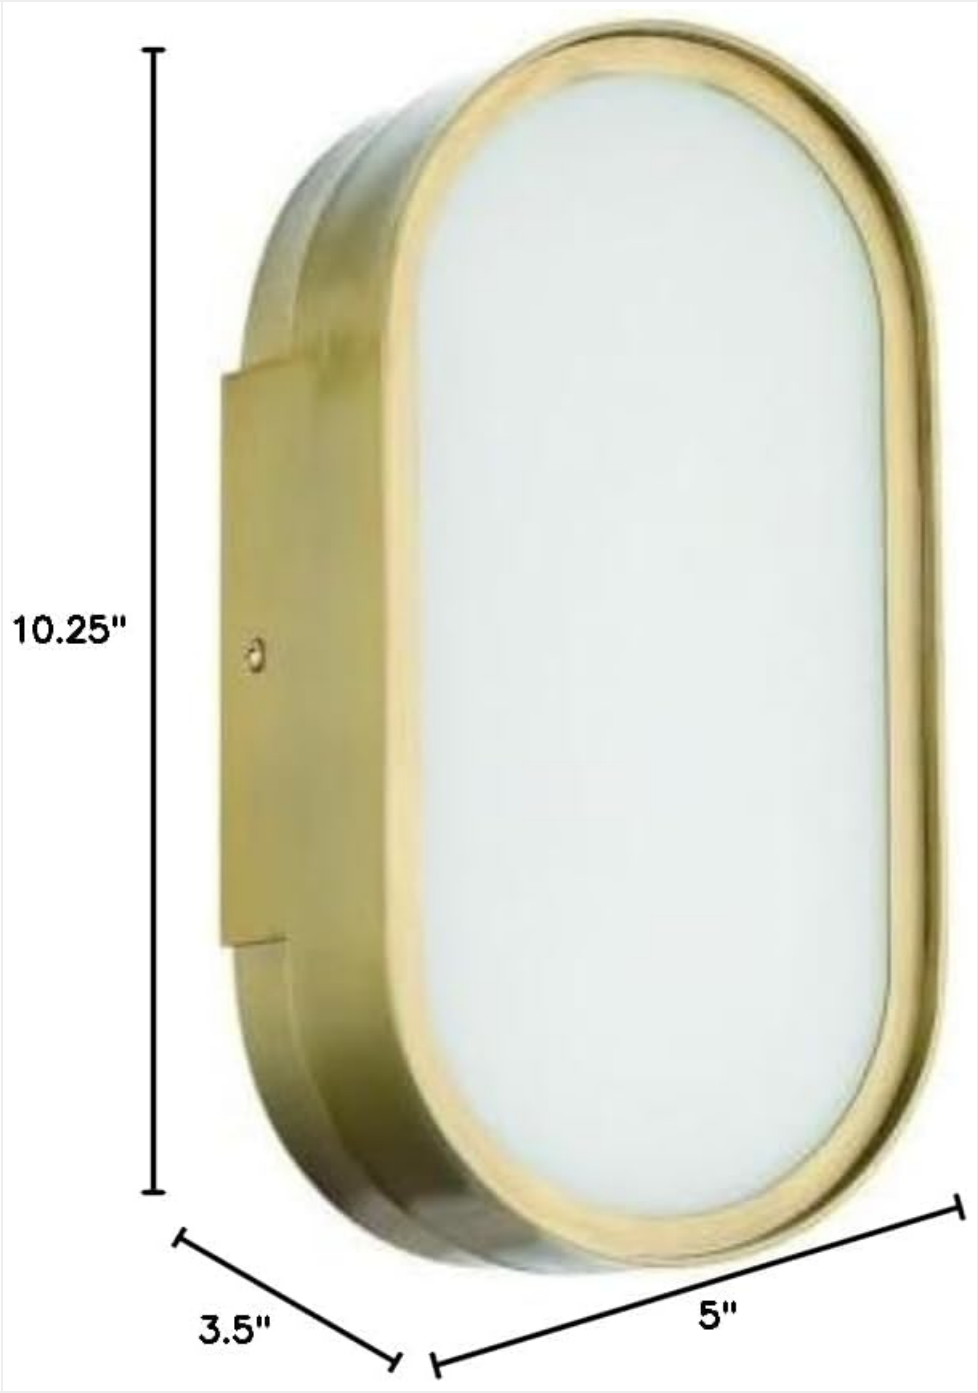

Image: Dimensional view of the Craftmade Melody 54960-SB-LED wall sconce, showing a height of 10.25 inches, width of 5 inches, and depth of 3.5 inches.

Operating Instructions

The Craftmade Melody 54960-SB-LED LED Wall Sconce is designed for simple operation.

- **Turning On/Off:** Use the standard wall switch connected to the fixture to turn the light on or off.
- **Dimming Functionality:** This fixture features an integrated dimmable LED disk. To utilize the dimming function, ensure you have installed a compatible LED dimmer switch (sold separately) in place of a standard wall switch. Follow the dimmer switch manufacturer's instructions for installation and operation.

Care and Maintenance

Proper care will ensure the longevity and appearance of your Craftmade Melody LED Wall Sconce.

- **Cleaning:** Always turn off power to the fixture before cleaning. Use a soft, dry, or slightly damp cloth to wipe down the metal finish and glass shade. Do not use abrasive cleaners, solvents, or polishes, as these can damage the finish or LED components.

- **LED Replacement:** The LED disk in this fixture is integrated and not designed for user replacement. If the LED light source fails, contact Craftmade customer support for assistance.
- **Inspection:** Periodically inspect the fixture for any loose connections or signs of wear.

Troubleshooting

If your Craftmade Melody LED Wall Sconce is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Loose wire connection. Faulty wall switch.	Check circuit breaker/fuse. Ensure wall switch is ON. Turn off power, check wire connections. Test wall switch or replace if faulty.
Light flickers or dims inconsistently.	Incompatible dimmer switch. Loose wire connection.	Ensure an LED-compatible dimmer is used. Turn off power, check wire connections.
Fixture hums.	Incompatible dimmer switch.	Replace with a high-quality, LED-compatible dimmer switch.

If these solutions do not resolve the issue, contact Craftmade customer support.

Specifications

Model Number	54960-SB-LED
Brand	Craftmade
Dimensions (H x W x D)	10.25" x 5" x 3.5"
Weight	3.79 lbs
Finish	Satin Brass
Shade Material	Frosted Glass
Light Source	Integrated LED Disk
Wattage	20.6 Watts
Lumen Output	920 Lumens
Color Temperature	3000K (Warm White)
CRI	90
Dimmable	Yes (with compatible LED dimmer)
Voltage	120 Volts
Indoor/Outdoor Use	Indoor Only
Compliance	ADA Compliant, cULus Listed

Warranty and Customer Support

Warranty: This Craftmade product is covered by a 1-year limited manufacturer's warranty from the date of purchase. This warranty

covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications.

Customer Support: For technical assistance, missing parts, warranty claims, or any questions regarding your Craftmade Melody LED Wall Sconce, please contact Craftmade customer support.

Phone: (800) 486-4892

Please have your model number (54960-SB-LED) and proof of purchase ready when contacting support.

© 2023 Craftmade. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08YZC6X1P

More documents and user manuals: **https://manuals.plus/**