Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun BC02XG

Braun Classic Travel Analogue Alarm Clock BC02XG User Manual

Model: BC02XG

Introduction

Thank you for choosing the Braun Classic Travel Analogue Alarm Clock, Model BC02XG. This manual provides detailed instructions for setting up, operating, and maintaining your alarm clock to ensure optimal performance and longevity. Please read this manual thoroughly before use.

Product Components

Familiarize yourself with the main components of your Braun BC02XG alarm clock:

- **Clock Face:** Displays time with hour, minute, and second hands.
- **Alarm Hand:** Indicates the set alarm time.
- **Snooze/Light Button:** Activates snooze and backlight.
- **Time Setting Knob:** Adjusts the current time.
- **Alarm Setting Knob:** Adjusts the alarm time.
- **Alarm ON/OFF Switch:** Toggles the alarm function.
- **Battery Compartment:** Holds one AA battery.



Image: Front view of the Braun BC02XG alarm clock, showing the clock face, hands, and snooze/light button.

Setup Instructions

1. **Insert Battery:**

   Open the battery compartment cover located on the back of the clock. Insert one AA battery, ensuring the polarity (+/-) matches the indicators inside the compartment. Close the cover securely.



Image: Rear view of the Braun BC02XG alarm clock, highlighting the battery compartment and setting knobs.

2. **Set Current Time:**

   Locate the time setting knob on the back of the clock. Rotate this knob in the direction indicated by the arrow (usually clockwise) to set the current hour and minute. Avoid rotating against the indicated direction to prevent damage to the movement.

Operating Instructions

Setting the Alarm

1. Locate the alarm setting knob on the back of the clock.
2. Rotate this knob in the direction indicated by the arrow to move the alarm hand to your desired alarm time.
3. Slide the alarm ON/OFF switch to the "ON" position (usually indicated by a green marker).

Integrated snooze / light function.





Snooze interval is 5 minutes. Light illuminates for 5 seconds once manually activated.

Image: Side view of the Braun BC02XG alarm clock, illustrating the position of the time and alarm setting knobs.

Using the Alarm and Snooze Function

- When the alarm sounds, it will begin with a soft beep that gradually increases in frequency and volume (crescendo beep alarm).
- To activate the snooze function, press the large button on the top of the clock. The alarm will pause for approximately 5 minutes and then sound again.
- To turn off the alarm completely, slide the alarm ON/OFF switch to the "OFF" position.



Image: The Braun BC02XG alarm clock with the snooze/light button activated, showing the illuminated display.

Using the Backlight

- To illuminate the clock face in low light conditions, press the large button on the top of the clock. The backlight will activate for approximately 5 seconds.
- The hour and minute hands are also luminous, providing a glow in the dark for improved legibility.

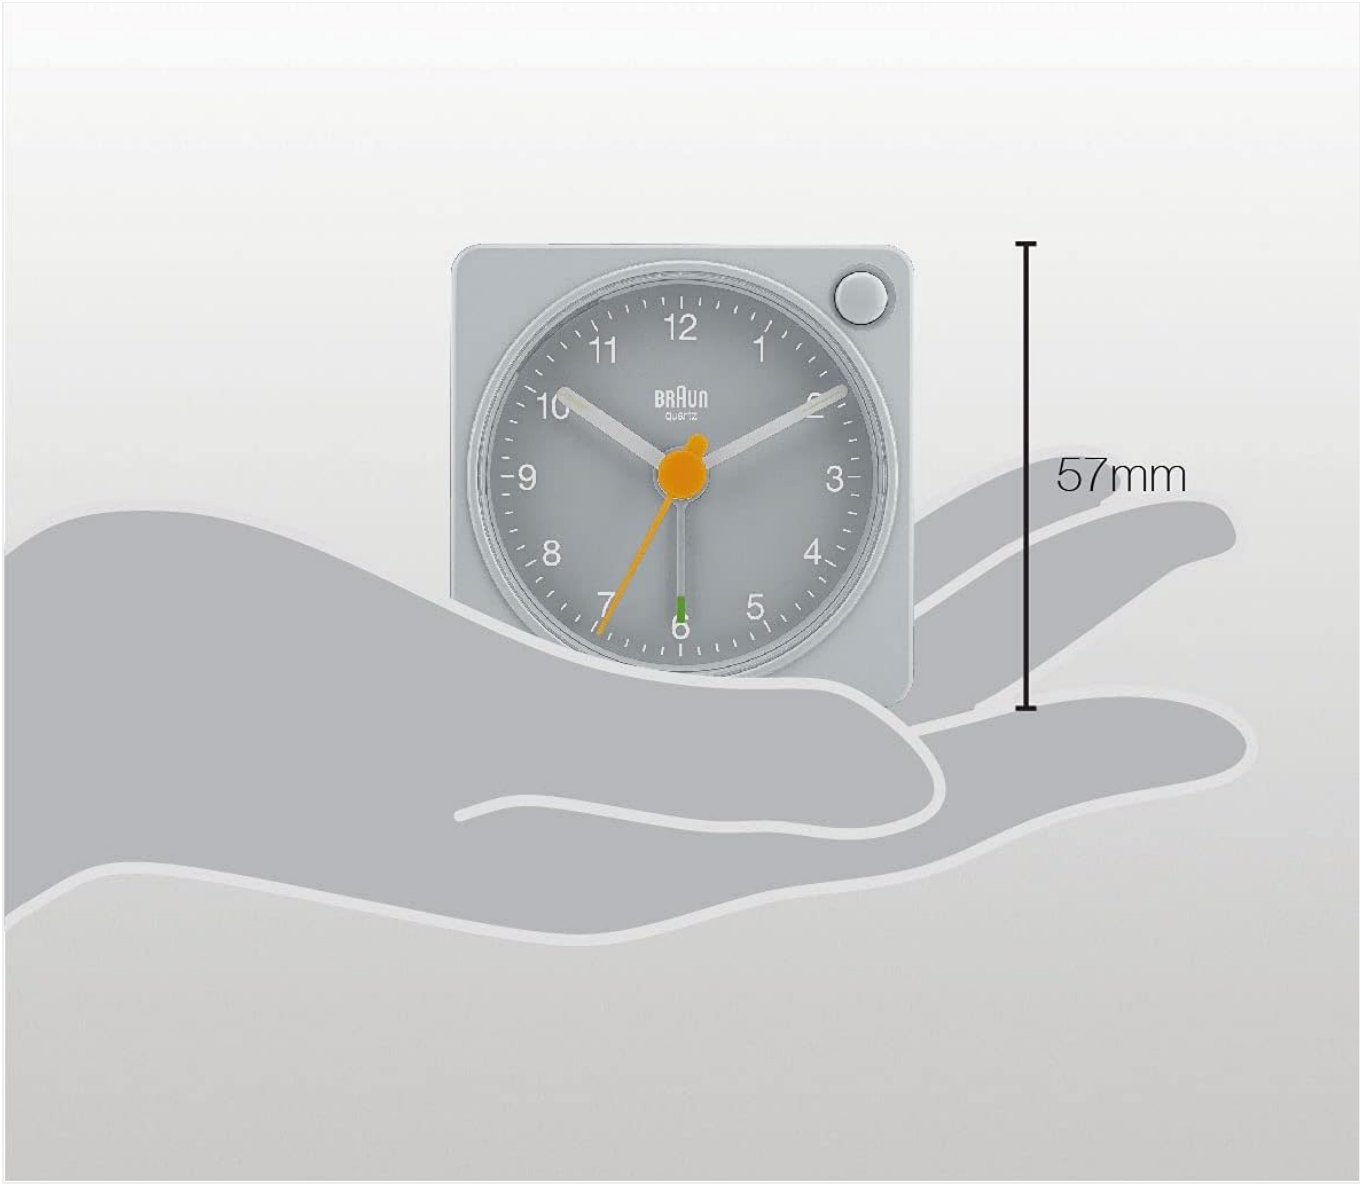


Image: The Braun BC02XG alarm clock demonstrating its luminous hands in a dark environment.

Maintenance and Care

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace the AA battery annually or when the clock's performance diminishes. Remove depleted batteries promptly to prevent leakage.
- **Storage:** If storing the clock for an extended period, remove the battery to prevent potential damage from leakage.
- **Environmental Conditions:** Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity.

Troubleshooting

Problem	Possible Cause	Solution
Clock not running or running slowly.	Depleted battery or incorrect battery insertion.	Replace the AA battery, ensuring correct polarity.
Alarm not sounding.	Alarm switch is OFF or alarm time is not set correctly.	Ensure the alarm ON/OFF switch is in the "ON" position. Verify the alarm hand is set to the desired time.

Problem	Possible Cause	Solution
Backlight not working.	Depleted battery or button not pressed firmly.	Replace the AA battery. Press the snooze/light button firmly.
Time setting knob is stiff or difficult to turn.	Attempting to turn against the indicated direction.	Always turn the setting knobs in the direction of the arrow to avoid damaging the internal mechanism.

Specifications

- **Model:** BC02XG
- **Movement:** Quiet Precision Quartz Movement
- **Display Type:** Analog
- **Alarm Type:** Crescendo Beep Alarm
- **Snooze Interval:** 5 minutes
- **Backlight Duration:** 5 seconds (manual activation)
- **Power Source:** 1 x AA Battery (not included)
- **Dimensions:** Approximately 5.7cm (W) x 5.7cm (H) x 2.7cm (D)
- **Material:** Plastic
- **Special Features:** Luminous tipped hands, compact size.



Image: The Braun BC02XG alarm clock held in a hand, illustrating its compact size and dimensions (57mm height).

Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Braun website. Keep your proof of purchase for warranty claims.

Online Support: www.braun.com

© 2025 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0916G9D5Y

More documents and user manuals: **https://manuals.plus/**