Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZOKOP JC-53

ZOKOP JC-53 Compressor Wine Cabinet User Manual

Model: JC-53 | Capacity: 18 Bottles (1.8 Cu.Ft / 52L)

1. Introduction

Thank you for purchasing the ZOKOP JC-53 Compressor Wine Cabinet. This manual provides important information regarding the installation, operation, maintenance, and troubleshooting of your new wine cooler. Please read this manual thoroughly before using the appliance to ensure proper operation and to prevent damage.



Figure 1: Front view of the ZOKOP JC-53 Compressor Wine Cabinet, showcasing its sleek black design and glass door with visible wine bottles inside.

2. Safety Information

Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

- Read all instructions before using the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended to be used in household and similar applications.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

3. Product Features

The ZOKOP JC-53 wine cabinet is designed with advanced features to ensure optimal wine storage conditions.

- **Precise Temperature Control:** Maintains temperatures between 41°F and 64°F (5°C - 18°C) for ideal wine fermentation and preservation.
- **Compressor Refrigeration System:** Provides rapid cooling, ≥65% humidity control, and a long working life (8-10 years).
- **Low Noise Operation:** Engineered for quiet performance, minimizing disturbance.
- **Chrome Plated Metal Shelves:** Durable and aesthetically pleasing shelves designed to securely hold wine bottles.
- **LED Soft Light:** Illuminates the interior without disturbing the wine fermentation process.
- **Smart Touchpad Control:** Intuitive touch control panel for easy temperature adjustments and light control.
- **Air-Tight Seal:** Ensures constant temperature and humidity for maintaining wine freshness.
- **Removable Shelves:** Allows for flexible storage configurations and easy cleaning.



Figure 2: Key features of the ZOKOP Compressor Wine Cooler, including circulation air system, temperature range, low noise, chrome shelves, LED light, and smart touchpad.

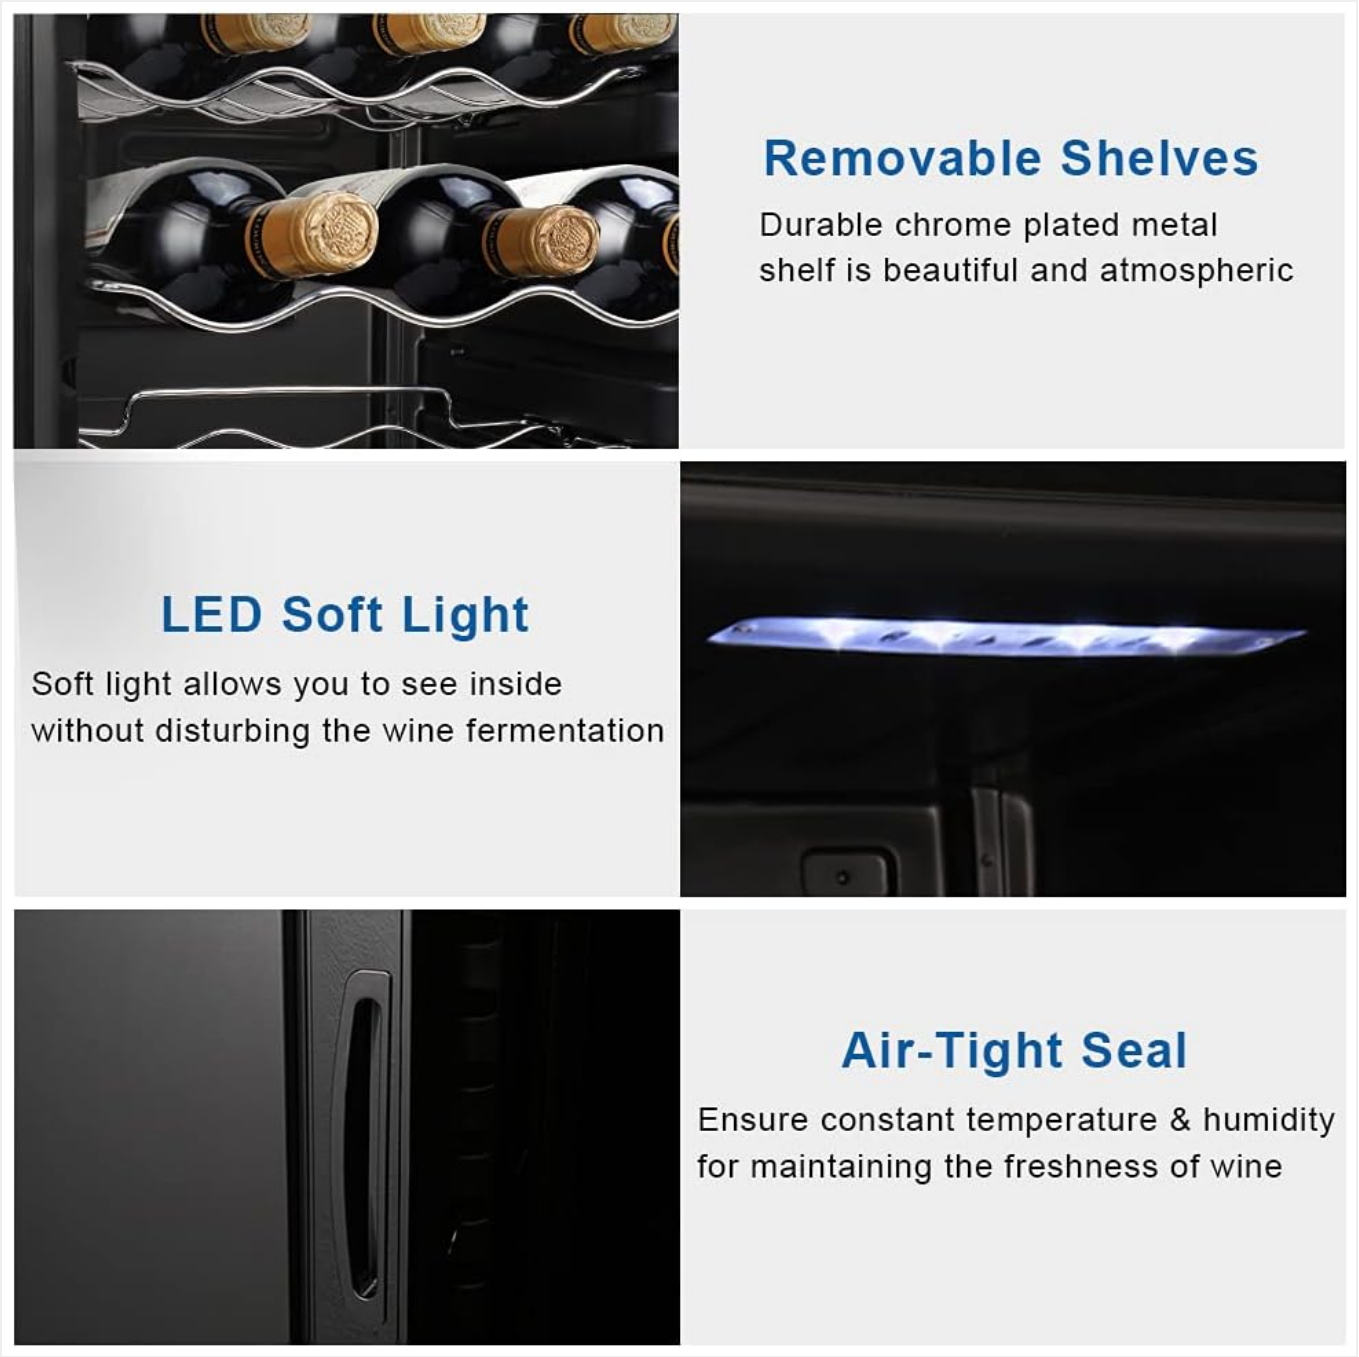

Figure 3: Detailed view of removable shelves, the soft LED interior light, and the air-tight seal designed to preserve wine quality.

4. Setup and Installation

4.1 Unpacking

- Remove all packaging materials, including the foam base and adhesive tape.
- Inspect the wine cabinet for any shipping damage. If damage is found, contact your retailer immediately.
- Keep packaging materials until you are satisfied with the product's operation.

4.2 Placement

- Place the wine cabinet on a flat, stable surface strong enough to support the unit when fully loaded.
- Ensure adequate air circulation around the unit. Allow at least 5 inches (12.7 cm) of space at the back and sides, and 10 inches (25.4 cm) at the top.
- Avoid placing the unit in direct sunlight or near heat sources (e.g., oven, radiator).
- This unit is designed for freestanding installation only. Do not recess or build it into cabinetry.

4.3 Leveling

- The wine cabinet has adjustable leveling legs at the bottom.
- Turn the legs clockwise to raise the unit, and counter-clockwise to lower it.
- Ensure the unit is level to prevent vibrations and ensure proper door sealing.

4.4 Electrical Connection

- Before plugging in, allow the unit to stand upright for at least 2-4 hours to allow the refrigerant to settle.
- Connect the unit to a dedicated, grounded 115V AC, 60Hz electrical outlet. Do not use extension cords or adapter plugs.

5. Operating Instructions

5.1 Control Panel

The control panel is located on the top front of the unit, above the door. It features a touch interface for easy operation.



Figure 4: Diagram of the Touch Control Panel, showing buttons for LED light, temperature unit switch (°C/°F), temperature display, and temperature control buttons (up/down).

- **Light Button:** Press to turn the interior LED light on or off.
- **°C/°F Button:** Press to switch the temperature display between Celsius and Fahrenheit.
- **Temperature Display:** Shows the current internal temperature.
- **Temperature Up/Down Buttons:** Use these buttons to adjust the desired temperature. Each press adjusts the temperature by 1 degree.

5.2 Setting the Temperature

- Press the "Up" or "Down" arrow buttons to set your desired temperature.
- The temperature range is 41°F to 64°F (5°C to 18°C).
- The display will flash the set temperature for a few seconds, then return to showing the actual internal temperature.



Figure 5: Recommended temperature ranges for various beverages: Champagne & Sparkling Red Wine (41-48°F), White Wine (48-57°F), Semi-Sweet & Sweet Red Wine (57-61°F), and Beers & Sodas (41-64°F).

5.3 Loading the Wine Cabinet

- Arrange bottles on the shelves to allow for proper air circulation.
- The unit is designed to hold standard 750ml wine bottles.
- Avoid overloading the shelves.



Figure 6: Dimensions of the ZOKOP JC-53 wine cabinet (13.8"W x 17.7"D x 29.7"H) and a single shelf (11.4"L x 10.8"W), along with a standard 750ml wine bottle for scale (2.95" diameter x 12.4" height).

6. Maintenance and Cleaning

6.1 Cleaning the Interior

- Always unplug the unit before cleaning.
- Use a soft cloth dampened with a mild detergent solution to clean the interior surfaces.
- The removable shelves can be washed with warm soapy water. Ensure they are completely dry before placing them back in the unit.
- Do not use abrasive cleaners or solvents.

6.2 Cleaning the Exterior

- Wipe the exterior with a soft, damp cloth.
- For glass surfaces, use a glass cleaner.

6.3 Defrosting

- The unit features an automatic defrost system. Frost will melt and drain into a tray at the back of the unit, where it evaporates.
- If excessive frost builds up, manually defrost the unit by unplugging it and leaving the door open until the frost melts. Remove any water with a clean cloth.

6.4 Power Outage

- Most power failures are corrected within a few hours and should not affect the temperature of your appliance.
- During longer power outages, minimize the number of times the door is opened.

7. Troubleshooting Guide

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Wine cabinet does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is fully inserted; check circuit breaker; verify power supply.
Temperature is not cold enough.	Door not closed properly; frequent door openings; warm ambient temperature; unit overloaded; poor ventilation.	Check door seal; minimize door openings; ensure proper room temperature; do not overload; ensure adequate clearance around unit.
Unit is making excessive noise.	Unit not level; loose parts; fan obstruction.	Adjust leveling legs; check for loose components; ensure fan is clear of obstructions.
Vibrations.	Unit not level; bottles touching each other or interior walls.	Level the unit; ensure bottles are spaced correctly.
Moisture build-up on exterior.	High humidity in room; door not sealed properly.	This is normal in humid environments; check door seal.

8. Specifications

Feature	Specification
Model	JC-53
Capacity	18 Bottles / 1.8 Cu.Ft (52L)
Power Supply	AC 115V, 60Hz
Temperature Range	41°F - 64°F (5°C - 18°C)

Feature	Specification
Installation Type	Freestanding
Dimensions (D x W x H)	13.58" x 17.72" x 30.31"
Color	Black
Material	Metal

9. Warranty and Customer Support

For warranty information or technical support, please refer to the warranty card included with your purchase or contact your retailer. Please have your model number (JC-53) and purchase date ready when contacting support.
For general inquiries or further assistance, please visit the ZOKOP official website or contact their customer service department.

© 2023 ZOKOP. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B094NWGK9C

More documents and user manuals: **https://manuals.plus/**