Toozey TK-HPP7040A

Toozey Pet Heating Pad Instruction Manual

Model: TK-HPP7040A

Product Overview

The Toozey Pet Heating Pad is designed to provide a warm and comfortable resting place for your pets. It features adjustable temperature settings and a timer function to ensure optimal comfort and safety. Its durable and safe construction makes it suitable for various indoor environments.



The Toozey Pet Heating Pad, shown with a Golden Retriever and a kitten, highlighting its primary use for pets.

Key features include:

- 6 adjustable temperature settings (86-131℉ / 30-55℃)
- Timer function with auto shut-off (4 to 24 hours)
- 7-layer protective structure with UL-certified heating wire
- Waterproof and flame-retardant PVC envelope
- Built-in intelligent temperature sensor to prevent overheating
- Dual chew-resistant cord protection
- Ultra-soft, machine-washable velvet cover

Safety Information

Please read all safety warnings before use to prevent injury or damage to the product.

- **DO NOT FOLD:** The heating pad has a built-in heat transfer wire. Folding it will cause the wire to break and lose heating effectiveness. Ensure the pad remains flat during use.
- **INDOOR USE ONLY:** This product is designed for indoor use. Do not use outdoors.
- **USE WITH COVER:** Always ensure your pet lays on the heating pad with the plush cover installed.
- **CHEW RESISTANT CORD:** The cord is designed to be chew-resistant, but regular inspection for damage is recommended.
- **OVERHEATING PROTECTION:** The intelligent temperature sensor helps prevent overheating.




Detailed diagram illustrating the 7-layer protective structure, including the UL-certified heating wire and waterproof PVC film.



Visual representation of the heating pad's waterproof PVC and fire-retardant properties.

Setup

1. Unpack the Toozey Pet Heating Pad and its components (heating mat, instructions, tips, velvet cover).
2. Ensure the heating mat is fully inserted into the ultra-soft velvet cover and zipped securely.
3. Place the heating pad on a flat, stable surface in your desired indoor location. Ensure it is not folded or creased.
4. Plug the power cord into a standard electrical outlet. The LED controller will illuminate.

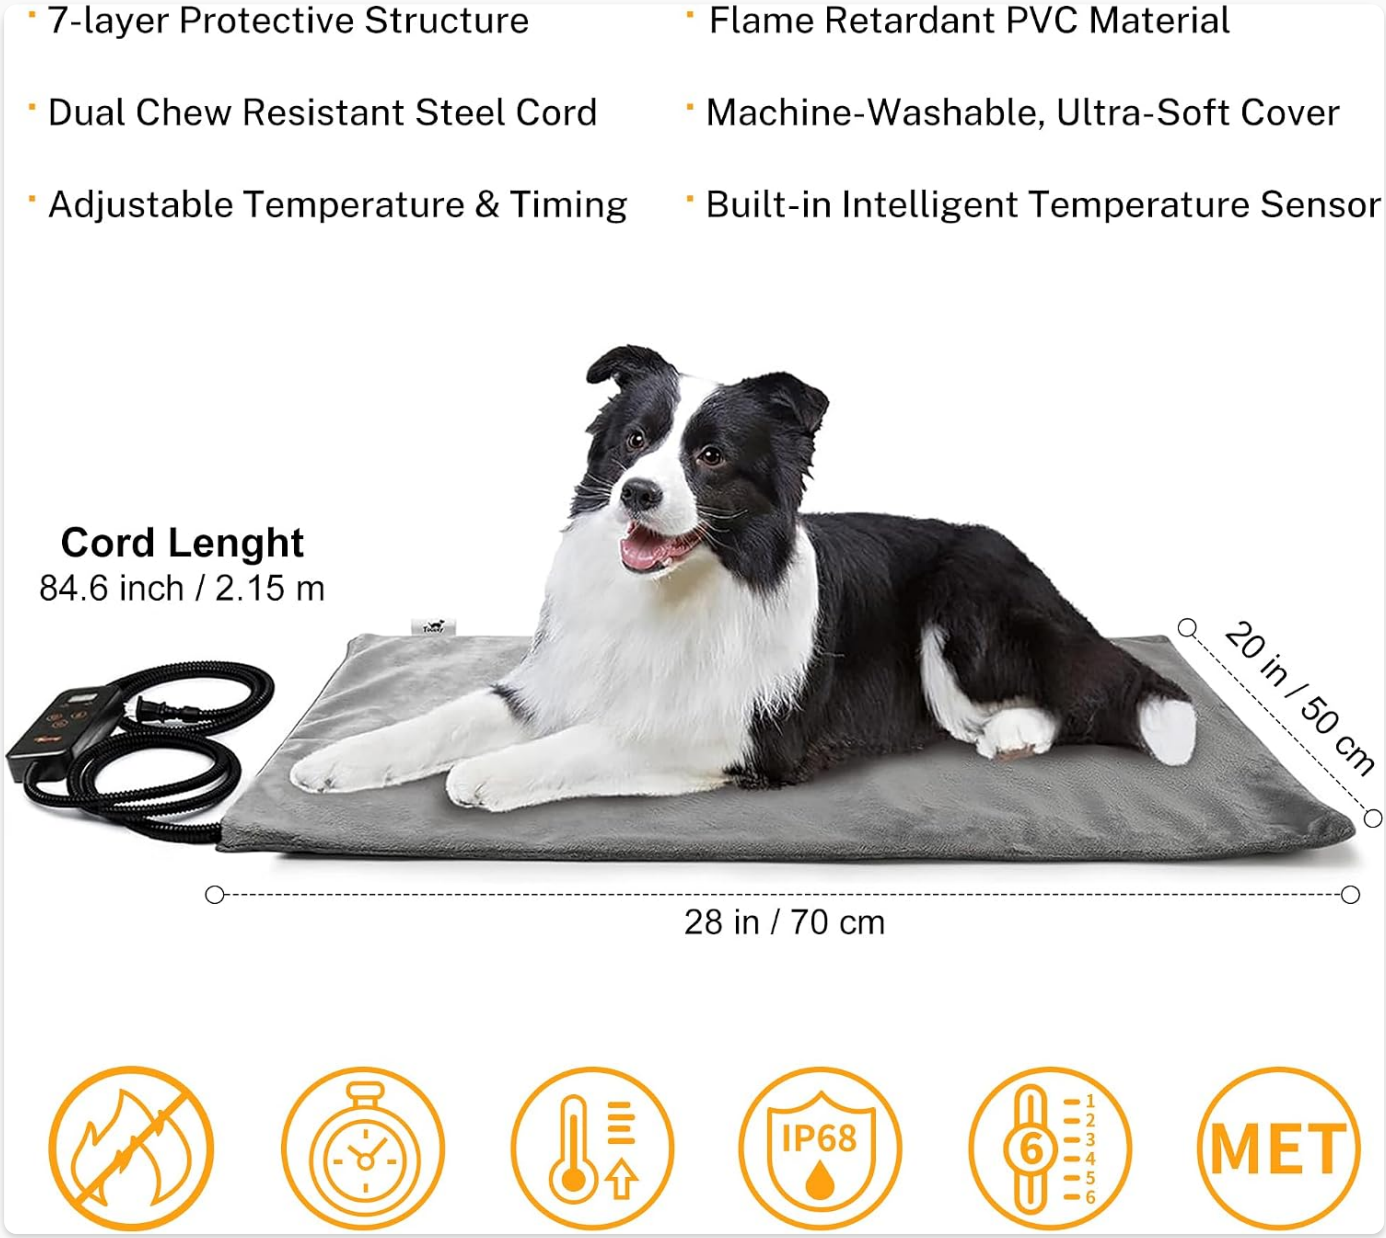

A Border Collie resting on the heating pad, illustrating its size (28x20 inches) and the chew-resistant cord.

Operating Instructions

Using the LED Controller

The heating pad is controlled via an intuitive LED controller attached to the power cord. This controller allows you to adjust temperature and set a timer.



The LED controller showing temperature and timer settings, with buttons for power, temperature adjustment, and timer.

Temperature Adjustment

1. Press the power button ( ) to turn on the heating pad.
2. Press the temperature button ( ) to cycle through the 6 temperature settings (86-131℉ / 30-55℃). The current setting will be displayed on the LED screen.

Timer Function

1. Press the timer button ( ) to select an auto shut-off duration: 4, 8, 12, or 24 hours. The selected time will be displayed.
2. If no timer is selected, the pad will remain continuously on.



A black Labrador sitting beside the heating pad, demonstrating the controller's use with temperature and timer options.

Video Demonstration

Your browser does not support the video tag.

An overview video demonstrating the features and use of the Toozey Pet Heating Pad.


Maintenance

Cleaning the Cover

The ultra-soft velvet cover is machine-washable for easy cleaning.

1. Unzip the velvet cover and remove the inner heating mat.
2. Machine wash the cover on a gentle cycle with cold water.
3. Tumble dry on low heat or air dry.

4. Ensure the cover is completely dry before reinserting the heating mat.

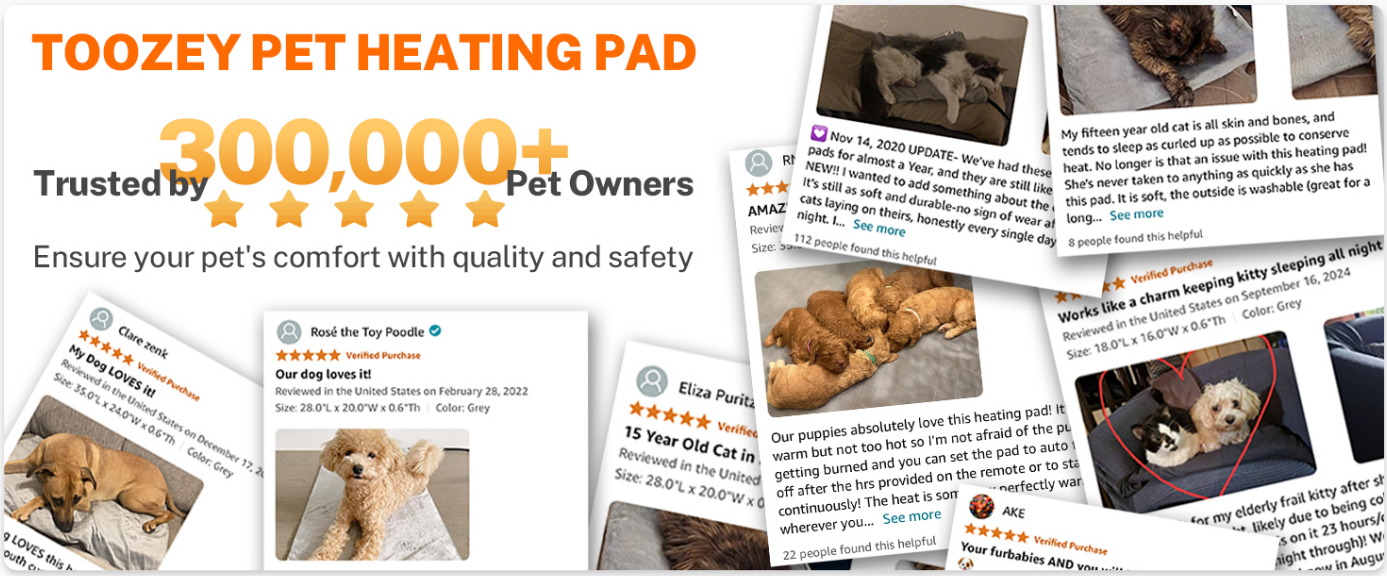

The removable velvet cover being placed into a washing machine for easy cleaning.

Cleaning the Inner Pad

If the inner pad becomes dirty, wipe it with a damp cloth. Do not soak the inner pad in water.

Cord Care

The dual chew-resistant cord is designed for durability. Periodically inspect the cord for any signs of damage or wear. If damage is found, discontinue use immediately.



A close-up view of the dual chew-resistant steel cord, designed to protect against pet chewing.

Troubleshooting

If you encounter any issues with your Toozey Pet Heating Pad, please refer to the following common solutions:

Problem	Possible Cause	Solution
Pad not heating	Not plugged in; power off; timer expired; internal wire damage from folding.	Ensure plug is secure and power is on. Check timer setting. If folded, inspect for damage and discontinue use if found.
Pad is too hot/cold	Incorrect temperature setting.	Adjust temperature setting using the controller.

Problem	Possible Cause	Solution
Pet avoids the pad	Temperature too high/low; unfamiliarity.	Adjust temperature. Allow pet time to acclimate. Ensure pad is flat and comfortable.

If the problem persists after trying these solutions, please contact customer support.

Specifications

- **Model Number:** TK-HPP7040A
- **Dimensions:** 28.0"L x 20.0"W x 0.6"Th
- **Item Weight:** 10.5 ounces
- **Material:** Velvet (cover), PVC (inner envelope)
- **Color:** Grey
- **Temperature Range:** 86-131℉ / 30-55℃
- **Timer Settings:** 4, 8, 12, 24 hours, or continuous
- **Care Instructions:** Machine Wash (cover), wipe clean (inner pad)
- **Special Features:** Chew Resistant Cord, Temperature Adjustment, Heating, Washable, Removable Cover
- **Manufacturer:** Toozey
- **Country of Origin:** China

Warranty and Support

The Toozey Pet Heating Pad comes with a**1-year manufacturer warranty**.

For any questions, concerns, or warranty claims, please contact Toozey customer support through the retailer where the product was purchased or visit the official Toozey website for contact information.

© 2025 Toozey. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question