Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

USARMT BN59-01315A

USARMT BN59-01315A/BN59-01315D Replacement Remote Control User Manual

For Samsung Smart TVs (6, 7, 8 Series)

Introduction

This manual provides instructions for the USARMT BN59-01315A/BN59-01315D replacement remote control. This remote is designed to be compatible with various Samsung Smart TVs, including 4K UHD, Curve, Ultra HDTV LED models from the 6, 7, and 8 Series. It features dedicated buttons for popular streaming services like Netflix, Prime Video, and Hulu.

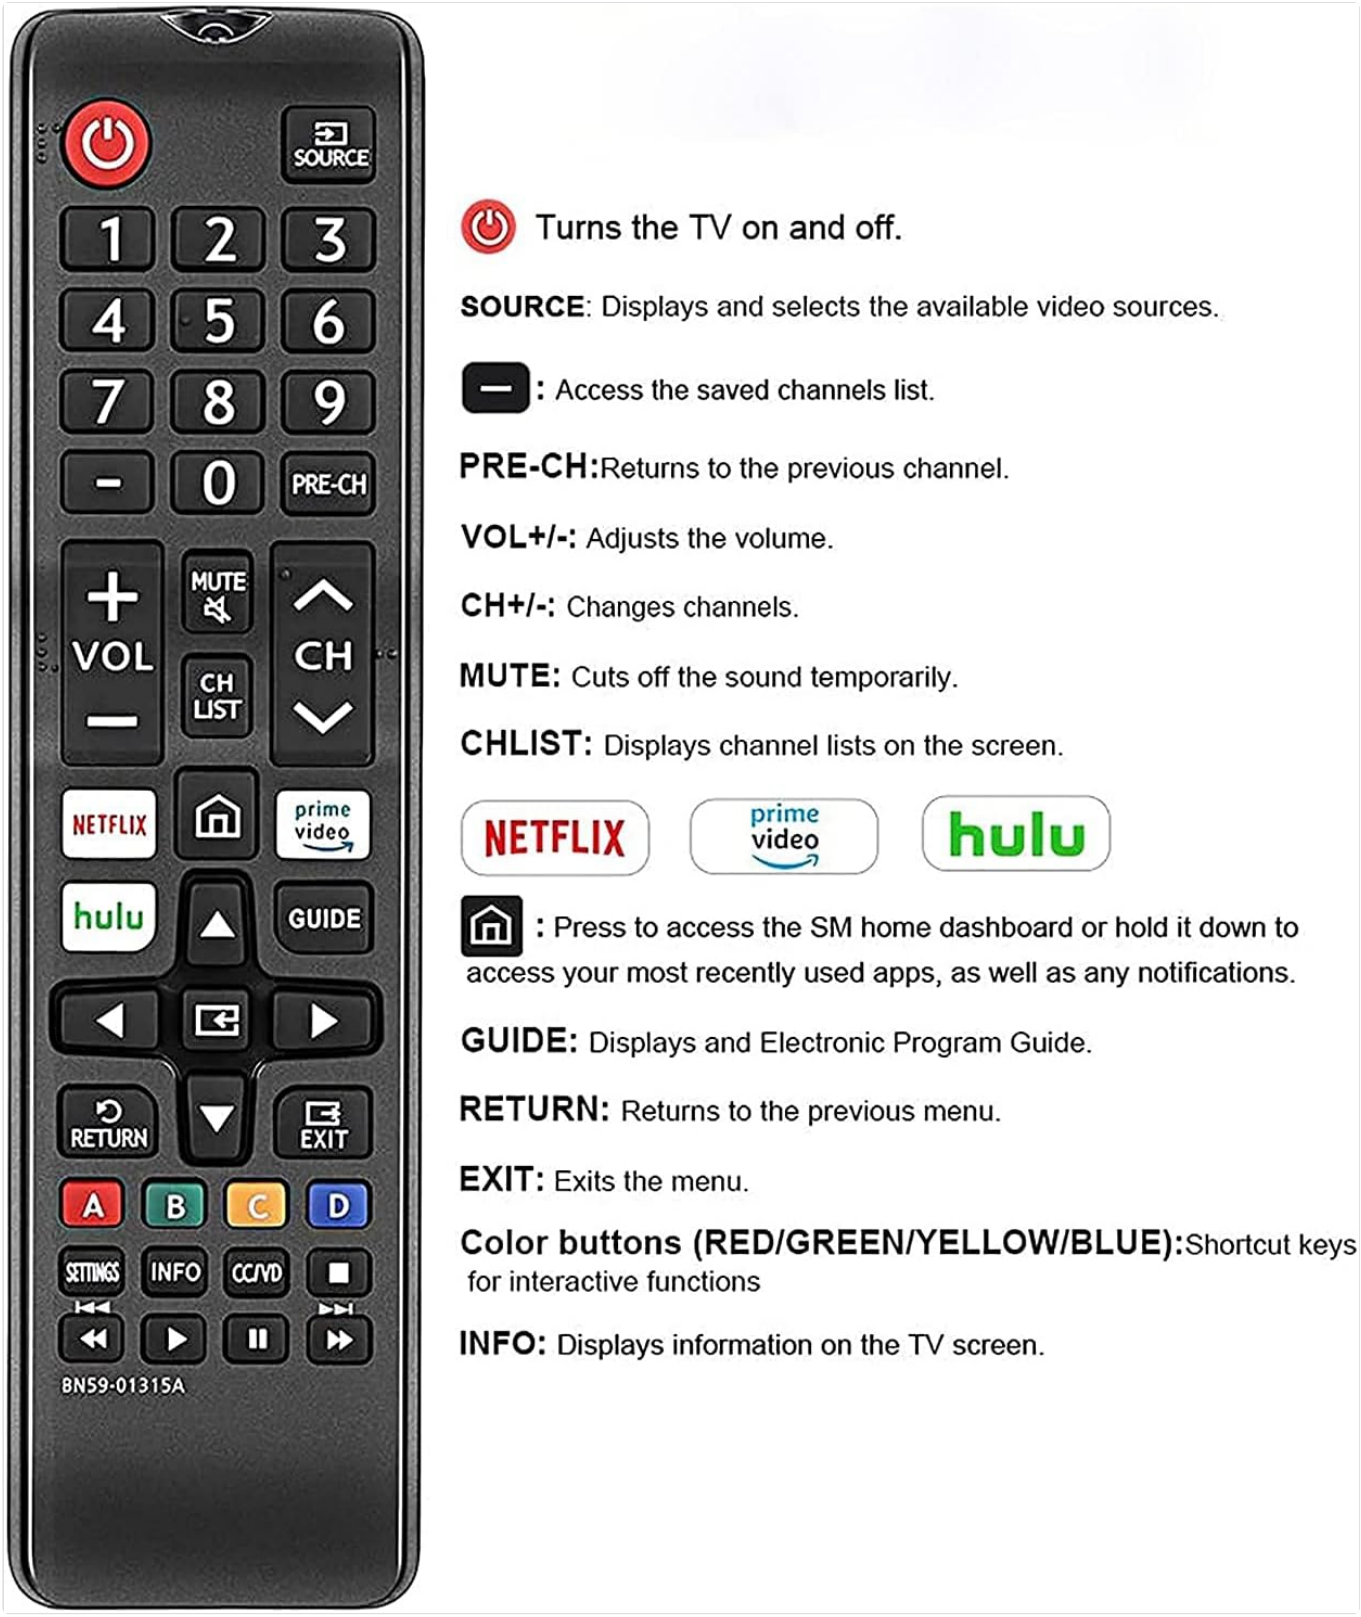

Figure 1: USARMT BN59-01315A/BN59-01315D Replacement Remote Control.

The remote control is pre-programmed and does not require any setup or pairing with your television. Simply insert batteries, and it is ready for use.

Setup

Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 2: Battery compartment with batteries inserted. Ensure correct polarity.

Once batteries are installed, the remote is ready for immediate use with compatible Samsung Smart TVs.

Operating Instructions

This section details the functions of each button on your USARMT replacement remote control.



Figure 3: Overview of remote control buttons and their functions.

Power Button (●): Turns the TV on and off.

SOURCE Button: Displays and selects the available video input sources (e.g., HDMI 1, TV, AV).

Number Buttons (0-9): Directly enter channel numbers.

PRE-CH Button: Returns to the previous channel.

VOL +/- Buttons: Adjusts the volume level up or down.

CH +/- Buttons: Changes channels up or down.

MUTE Button: Cuts off the sound temporarily. Press again to restore sound.

CH LIST Button: Displays channel lists on the screen.

Netflix Button: Direct access to the Netflix application.

Prime Video Button: Direct access to the Prime Video application.

Hulu Button: Direct access to the Hulu application.

Home Button (⌂): Press to access the Smart Hub dashboard or hold it down to access your most recently used apps and notifications.

GUIDE Button: Displays the Electronic Program Guide (EPG).

RETURN Button: Returns to the previous menu or screen.

EXIT Button: Exits the current menu or application.

Color Buttons (A, B, C, D - RED/GREEN/YELLOW/BLUE): Shortcut keys for interactive functions within certain applications or TV menus. Their function varies depending on the context.

SETTINGS Button: Accesses the TV's settings menu.

INFO Button: Displays information about the current program or content on the TV screen.

CC/VD Button: Toggles Closed Captions/Video Description.

Playback Control Buttons (Rewind, Play/Pause, Fast Forward): Controls media playback.

Maintenance

Cleaning the Remote

To maintain the remote control's appearance and functionality:

- Wipe the remote with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

Battery Care

- Replace batteries when the remote's response becomes sluggish or inconsistent.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

Troubleshooting

If you encounter issues with your remote control, refer to the following common solutions:

Problem	Solution

Problem	Solution
Remote is unresponsive.	• Check if the batteries are inserted correctly with the correct polarity. • Replace old batteries with new AAA batteries. • Ensure there are no obstructions between the remote and the TV's infrared receiver. • Point the remote directly at the TV.
Certain buttons do not work.	• Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris. • Ensure the TV is compatible with all functions of this remote. While broadly compatible, some specific TV models might have minor variations.
Remote works intermittently.	• This often indicates low battery power. Replace the batteries. • Check for strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the infrared signal.

Specifications

Model Numbers: BN59-01315A, BN59-01315D

Brand: USARMT

Compatible Devices: Samsung Smart Televisions (6, 7, 8 Series, 4K UHD, Curve, Ultra HDTV LED)

Power Source: 2 x AAA Batteries (not included)

Color: Black

Product Dimensions: 7 x 2 x 0.5 inches

Item Weight: 3 ounces

Special Feature: Universal (for specified Samsung models), Pre-programmed

Warranty and Support

Warranty Information

This product is covered by a 30-Day Hassle-Free Return Policy. Please refer to your purchase documentation or contact the seller for specific details regarding returns and warranty claims.

Customer Support

For further assistance or if you experience issues not covered in this manual, please contact the seller or manufacturer directly through the platform where the product was purchased. Provide your order details and a clear description of the problem for efficient support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B097S1GKLD

More documents and user manuals: **https://manuals.plus/**