Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VEVOR Safe Box 0.8 Cubic Feet

VEVOR 0.8 CU.FT Fingerprint Safe Box Instruction Manual

Model: Safe Box 0.8 Cubic Feet

Contents Introduction Safety Information Features Package Specifications Setup Operation Installation Maintenance Troubleshooting Warranty & Support

1. Introduction

This manual provides instructions for the safe and efficient use of your VEVOR 0.8 CU.FT Fingerprint Safe Box. Please read all instructions carefully before operating the safe and retain this manual for future reference.

2. Safety Information

- Do not store the emergency keys inside the safe. Keep them in a secure, separate location.
- Ensure the safe is installed on a stable surface or securely mounted to a wall or floor to prevent tipping or unauthorized removal.
- Keep the safe away from moisture and extreme temperatures.
- Do not attempt to force the safe open if it malfunctions. Refer to the troubleshooting section or contact support.
- Replace batteries promptly when the low battery indicator appears to avoid being locked out.

3. Product Features

- **Multiple Unlock Modes:** Key, Digital Keypad (Password), Fingerprint, and Dual Authentication (Password + Fingerprint).
- **Premium Q235 Steel Construction:** Heavy-duty 1.2 mm Q235 steel boards with a 3 mm thick door, concealed hinges, and soft carpeted interior for enhanced protection.
- **0.8 Cubic Feet Capacity:** Sufficient interior space for valuables such as passports, jewelry, watches, mobile hard drives, cash, and documents.
- **Wall Mounted Design:** Features pre-drilled holes and expansion screws for secure installation on walls, floors, or shelves.

- **Anti-Theft Features:** Pry-resistant design and robust locking mechanism.



Figure 1: Dual Authentication Mode (Fingerprint & Passcode)

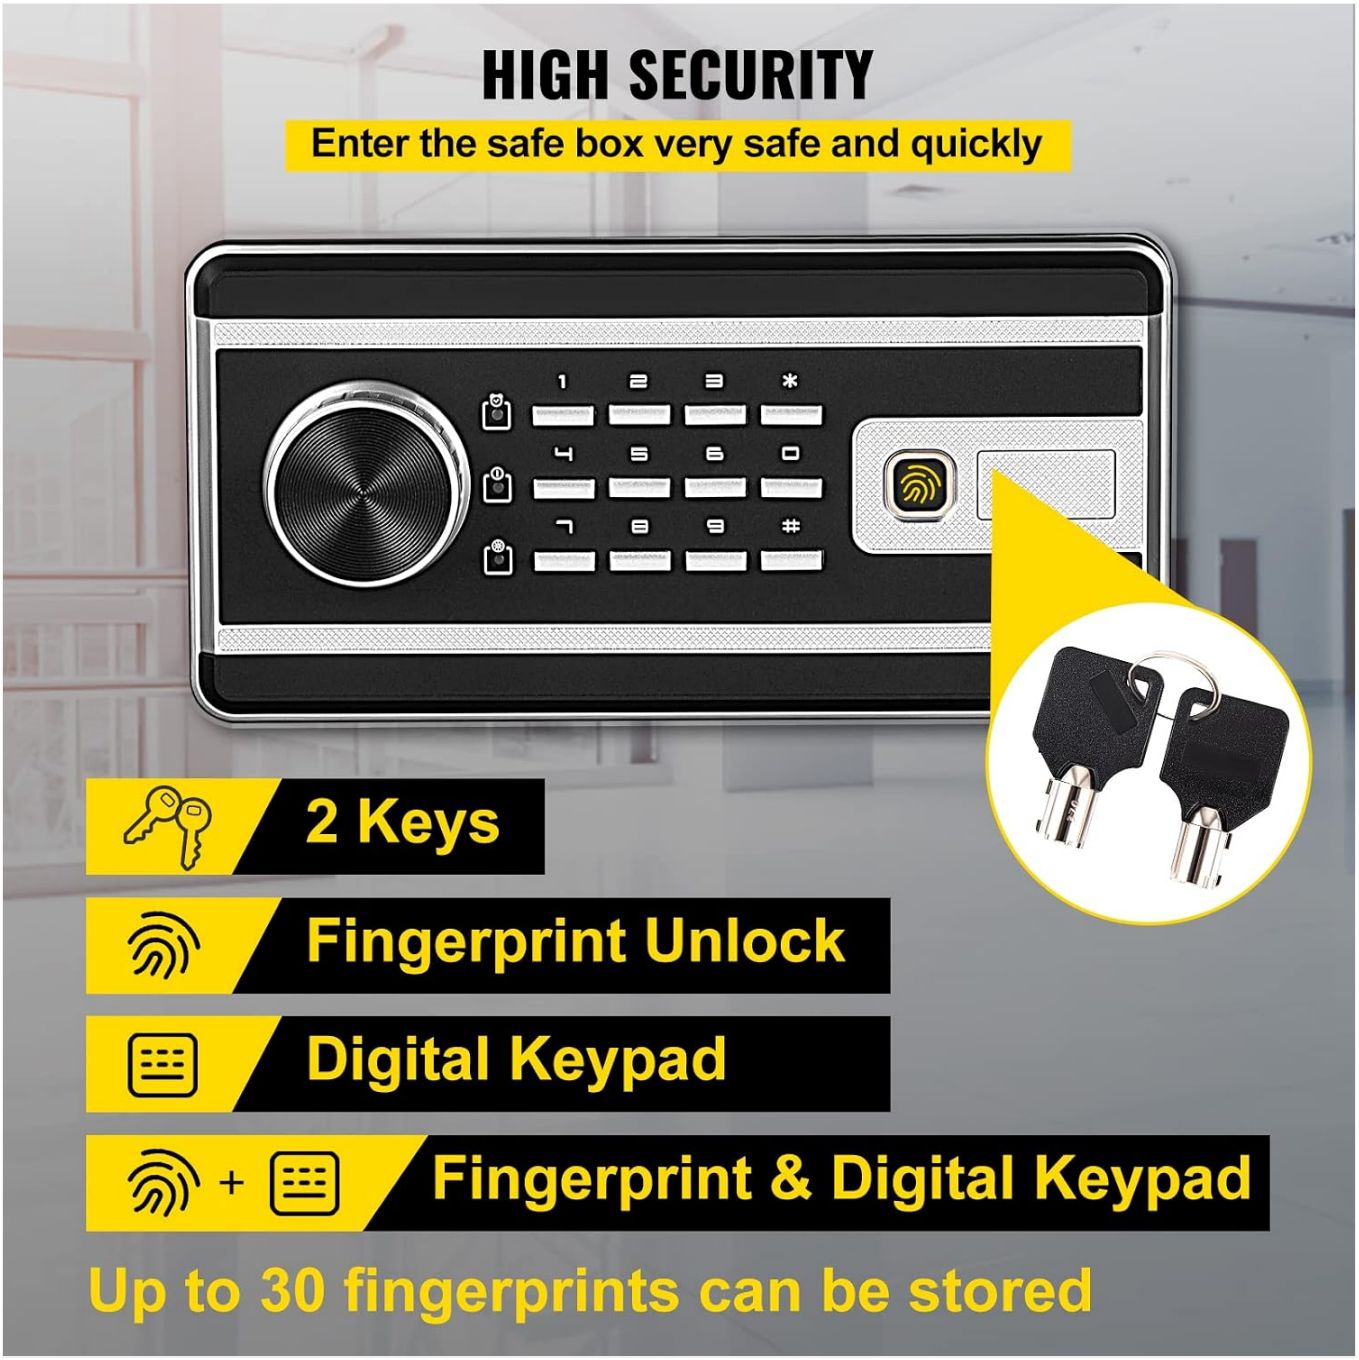

Figure 2: High Security Features with Multiple Unlock Options



Figure 3: Durable Construction Details

4. Package Contents

Verify that all items are included in your package:

- 1 x VEVOR 0.8 CU.FT Fingerprint Safe Box
- 2 x Emergency Keys
- 2 x Expansion Screws
- 2 x Expansion Tubes
- 1 x Carpet (for interior)
- 1 x English Instruction Manual (this document)

5. Specifications

Attribute	Value
Brand	VEVOR
Model Number	Safe Box 0.8 Cubic Feet
Product Dimensions (D x W x H)	9.8"D x 13.78"W x 9.8"H (25cm x 35cm x 25cm)
Internal Box Size (L x W x H)	13.6" x 9.6" x 8.3" (34.5cm x 24.5cm x 21cm)
Capacity	0.8 Cubic Feet (22 Liters)
Item Weight	13.8 Pounds (6.5 kg)
Material	Q235 Carbon Steel
Lock Type	Electronic (Fingerprint, Digital Keypad, Key)
Mounting Type	Floor Mount, Wall Mount
Special Features	Anti-Theft, Pry-Resistant



Figure 4: Product Specifications and Dimensions

6. Setup

6.1. Battery Installation

1. Open the safe door using one of the emergency keys.
2. Locate the battery compartment on the inside of the safe door.
3. Insert 4 AA batteries (not included) into the compartment, ensuring correct polarity.
4. Close the battery compartment cover.

▶ **Watch video online**
VEVOR Fingerprint Safe

Video 1: VEVOR Fingerprint Safe Setup and Operation. This video demonstrates battery installation, setting up fingerprint and password, and unlocking methods.

6.2. Setting a New Digital Password

1. With the safe door open, press the red reset button located on the inside of the door (refer to Figure 3).
2. The indicator light on the keypad will flash.
3. Enter your desired 3-8 digit password on the keypad.
4. Press the '#' button to confirm.
5. Re-enter the same password and press '#' again to confirm.
6. A successful setup will be indicated by a confirmation sound or light.

6.3. Registering Fingerprints

1. With the safe door open, press the red reset button.
2. Place your finger on the fingerprint scanner. The indicator light will flash.
3. Lift and place your finger on the scanner four times, rotating slightly each time to capture different angles of your fingerprint.
4. A successful registration will be indicated by a confirmation sound or light. Repeat for additional fingerprints (up to 30 can be stored).

7. Operating Instructions

7.1. Unlocking with Digital Password

1. Enter your programmed digital password on the keypad.
2. Press the '#' button.
3. Within 5 seconds, turn the knob clockwise to open the safe door.

7.2. Unlocking with Fingerprint

1. Place your registered finger on the fingerprint scanner.
2. If the fingerprint is recognized, the safe will unlock.
3. Within 5 seconds, turn the knob clockwise to open the safe door.

7.3. Dual Authentication Mode

For enhanced security, the safe can be set to require both a digital password and a fingerprint for unlocking. Consult the full manual for activation steps.

7.4. Emergency Key Access

In case of battery failure or forgotten password/fingerprint, the safe can be opened using the emergency key:

1. Locate the emergency keyhole, usually concealed behind a cover on the keypad panel.
2. Insert the emergency key and turn it counter-clockwise.
3. Simultaneously turn the main knob clockwise to open the safe door.

8. Installation

8.1. Mounting the Safe

The VEVOR safe can be securely mounted to a wall or floor for added security. Ensure the mounting surface is strong enough to support the safe's weight and contents.

1. Choose a suitable location for mounting.
2. Open the safe door and locate the pre-drilled mounting holes on the back or bottom of the safe.
3. Mark the drilling points on the wall or floor through the pre-drilled holes.
4. Drill pilot holes at the marked locations using an appropriate drill bit.
5. Align the safe with the drilled holes and insert the expansion screws through the safe's holes and into the wall/floor.
6. Tighten the screws firmly to secure the safe in place.

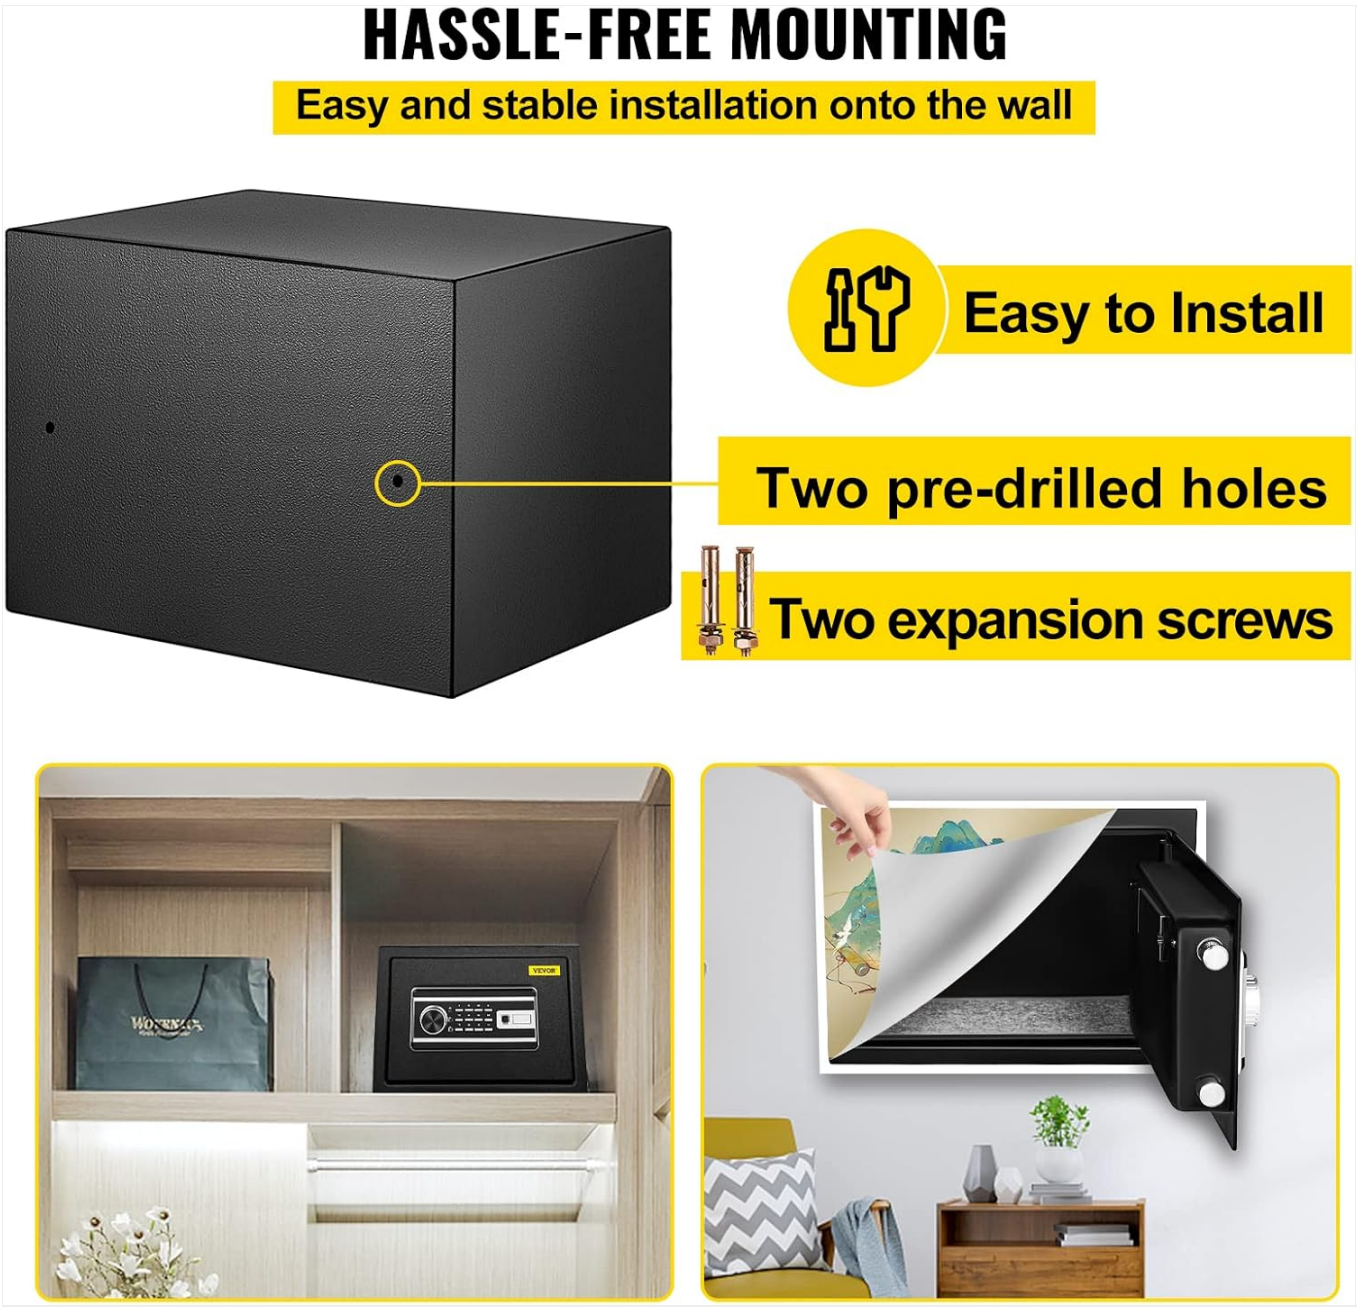

Figure 5: Hassle-Free Mounting Instructions

9. Maintenance

- Regularly check the battery level and replace batteries when necessary.
- Keep the keypad and fingerprint scanner clean and dry. Use a soft, dry cloth for cleaning.
- Avoid using abrasive cleaners or solvents on the safe's surface.
- Ensure the safe door closes properly and the locking bolts engage fully.

10. Troubleshooting

Problem	Possible Cause	Solution
Safe does not open with digital password/fingerprint.	Low batteries, incorrect password/fingerprint, or system error.	Replace batteries. Re-enter password carefully. Re-scan fingerprint. Use emergency key if necessary.

Door does not close properly.	Obstruction, misaligned door, or damaged locking mechanism.	Check for obstructions. Ensure the safe is on a level surface. Contact support if the issue persists.
Keypad is unresponsive.	Dead batteries or electronic malfunction.	Replace batteries. Use the emergency key to open. If still unresponsive, contact support.
Fingerprint not recognized.	Finger is dirty/wet, scanner is dirty, or fingerprint not properly registered.	Ensure finger and scanner are clean and dry. Try re-registering your fingerprint.

11. Warranty & Support

VEVOR products are designed for durability and performance. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official VEVOR website. Keep your purchase receipt as proof of purchase.
For further assistance, you may contact VEVOR customer service through their official channels.

© 2023 VEVOR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B097XLSTGJ

More documents and user manuals: **https://manuals.plus/**