Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun MQ9199XL

Braun MultiQuick 9 Hand Blender User Manual

Model: MQ9199XL

1. Introduction

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your Braun MultiQuick 9 Hand Blender, model MQ9199XL. Please read this manual thoroughly before first use and retain it for future reference.
The Braun MultiQuick 9 is designed for versatile kitchen tasks, offering powerful blending and processing capabilities with its advanced technologies and wide range of attachments.

2. Product Features

- **Active PowerDrive Technology:** Features an efficient 700W motor for up to 40% faster performance compared to Braun MQ500 on pesto.
- **iMode Technology:** Offers 3 controlled power ranges (low, high, and pulse) for optimal results across various ingredients.
- **Advanced SmartSpeed:** Provides intuitive single-hand operation, allowing power adjustment by squeezing a button.
- **ActiveBlade Technology:** The world's first technology where the blending shaft moves up and down, providing more cutting surface for finer blending with less effort.
- **PowerBell Plus:** Unique shape with an extra milling blade designed for quicker blending and reduced splashing.
- **EasyClick Plus System:** Enables easy swapping of attachments for ultimate versatility.
- **Comprehensive Food Processor:** Includes an 8-cup food processor with a dicer attachment and kneading tool, chopping blade, 5 slice and shred discs, and a French Fry cutting blade.



The Braun MultiQuick 9 Hand Blender is designed for effortless blending of whole foods.



ActiveBlade Technology and Active PowerDrive ensure efficient processing.

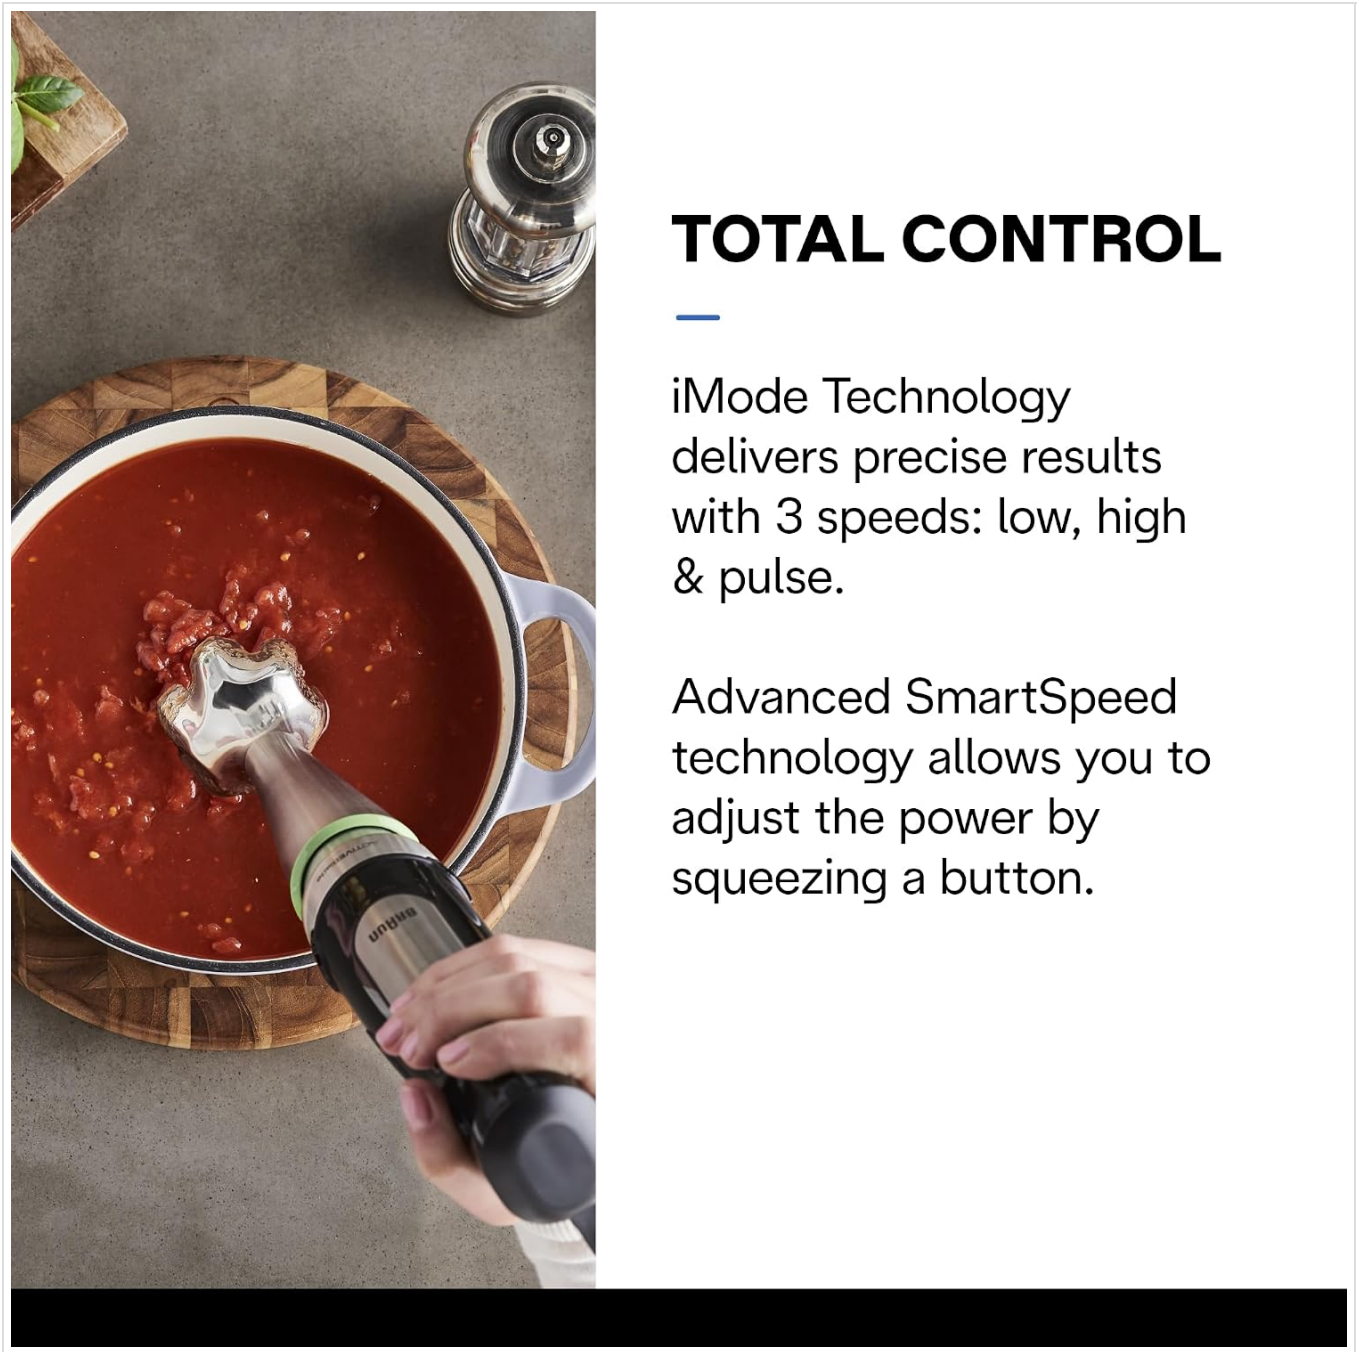

iMode Technology provides precise control with three speed modes for various tasks.

3. Components and What's in the Box

Your Braun MQ9199XL MultiQuick 9 Hand Blender package includes the following components:

- Braun MQ9199XL Hand Blender Motor Unit
- Metal Detachable Blending Wand (with ActiveBlade Technology)
- 20 oz Plastic Beaker
- Whisk Attachment
- Puree/Masher Attachment
- 1.5 Cup Chopper Attachment
- 8 cup Food Processor Attachment (includes Chopping Blade, Julienne Insert, Slicing Insert, French Fry Insert, Dough Kneading Hook, and Dicer)



Overview of the Braun MultiQuick 9 Hand Blender and its comprehensive set of attachments.



The included 500 ml chopper, whisk, puree/masher, and BPA-free plastic beaker.

4. Setup

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Cleaning:** Before first use, clean all parts that will come into contact with food. Refer to the "Maintenance and Cleaning" section for detailed instructions. The motor unit should only be wiped with a damp cloth.
3. **Assembly:**
    - To attach the blending wand or other EasyClick Plus attachments, align the attachment with the motor unit and push until it clicks securely into place.
    - Ensure all attachments are correctly assembled before connecting the appliance to power.
4. **Power Connection:** Plug the hand blender into a suitable 120 Volt power outlet.

5. Operating Instructions

The Braun MultiQuick 9 features iMode Technology and Advanced SmartSpeed for precise control.

5.1. Using the Hand Blender

1. **Preparation:** Ensure the blending wand is securely attached to the motor unit. Place ingredients in the beaker or a suitable container.
2. **Power On:** Press and hold the safety button on the top of the handle, then immediately press the SmartSpeed button (main power button) to start the motor. Release the safety button once the motor is running.
3. **Speed Control (Advanced SmartSpeed):** The blending speed is controlled by how hard you press the SmartSpeed button. Press gently for lower speeds and harder for higher speeds.
4. **iMode Technology:**
    - **Low Speed Mode:** Ideal for soft ingredients, slicing, and shredding.
    - **High Speed Mode:** Provides full 700-watt power for high-speed blending and tougher ingredients.
    - **Pulse Function:** Delivers evenly chopped ingredients without over-processing.

    Refer to the product's display for current mode indication.
5. **ActiveBlade Function:** For optimal results, move the blending wand up and down within the ingredients. This activates the unique ActiveBlade feature, increasing the cutting surface.
6. **Completion:** Release the SmartSpeed button to stop the motor. Unplug the appliance from the power outlet before detaching attachments or cleaning.

5.2. Using Attachments

The EasyClick Plus system allows for quick and secure attachment changes.

- **Chopper Attachment:** Ideal for chopping herbs, nuts, cheese, and small quantities of meat. Ensure the blade is correctly placed before attaching the motor unit.
- **Whisk Attachment:** Use for whipping cream, beating egg whites, and mixing light batters. Attach the whisk to the gear box, then attach the gear box to the motor unit.
- **Puree/Masher Attachment:** Perfect for mashing cooked vegetables like potatoes, carrots, and sweet potatoes.
- **Food Processor Attachment:** Utilize for larger chopping tasks, slicing, shredding, julienning, dicing, and kneading dough. Follow the specific assembly instructions for each disc and blade within the food processor bowl.

6. Maintenance and Cleaning

Proper cleaning ensures the longevity and hygiene of your Braun MultiQuick 9 Hand Blender.

1. **Always Unplug:** Disconnect the appliance from the power supply before cleaning.
2. **Motor Unit:** The motor unit should never be immersed in water or other liquids. Wipe it clean with a damp cloth.
3. **Detachable Parts:**
    - The blending wand, beaker, chopper bowl, food processor bowl, blades, and discs are dishwasher safe.
    - Alternatively, wash these parts in hot soapy water, then rinse thoroughly and dry.
    - Be cautious when handling sharp blades.
4. **Storage:** Store the appliance and its attachments in a dry, safe place, away from direct sunlight and heat.

7. Troubleshooting

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; safety button not pressed first; attachment not correctly secured.	Ensure power cord is securely plugged in. Press and hold the safety button before pressing the SmartSpeed button. Check that the attachment is clicked firmly into place.
Motor stops during operation.	Overload protection activated; ingredients too tough or quantity too large.	Unplug the appliance, reduce the quantity of ingredients, or cut tougher ingredients into smaller pieces. Allow the motor to cool down for a few minutes before restarting.
Poor blending results.	Insufficient liquid; ingredients too large; incorrect speed setting.	Add more liquid if blending. Cut ingredients into smaller, more uniform pieces. Increase speed or use the pulse function for tougher items. Ensure ActiveBlade is moving up and down.
Attachments are difficult to remove.	Food residue or suction.	Ensure the appliance is unplugged. Gently twist and pull the attachment. Clean any residue around the connection points.

8. Specifications

- **Model:** MQ9199XL
- **Brand:** Braun
- **Power:** 700 Watts
- **Voltage:** 120 Volts
- **Number of Speeds:** 3 (via iMode Technology)
- **Blade Material:** Stainless Steel
- **Product Dimensions:** 2.7"D x 2.7"W x 16.14"H
- **Item Weight:** 2 pounds
- **Color:** Black
- **Country of Origin:** Romania
- **Manufacture Year:** 2023



The compact design of the MultiQuick 9 Hand Blender, with its dimensions and weight.

9. Warranty and Support

Your Braun MQ9199XL MultiQuick 9 Hand Blender comes with a**3 Year Limited Warranty**.
For warranty claims, technical support, or additional assistance, please contact Braun customer service or refer to the official user manual PDF available online.
Official User Manual (PDF): Download Here
For more information, visit the official Braun Store:Braun Household Store

© 2023 Braun. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the

question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09B1VGZK2

More documents and user manuals: **https://manuals.plus/**