Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

UPBRIGHT 26.5V AC/DC Adapter

UpBright 26.5V AC/DC Adapter Instruction Manual

Compatible with Greenote GSC40 and GSC50 Cordless Vacuum Cleaners

1. Introduction

This manual provides essential information for the safe and effective use of your UpBright 26.5V AC/DC Adapter. This adapter is designed to provide reliable power for charging Greenote GSC40 and GSC50 22.2V Lithium-ion battery cordless stick vacuum cleaners.
The adapter features a wide input voltage range of 100-240VAC, 50/60Hz, making it suitable for international use. It incorporates multiple protection mechanisms, including Over Voltage Protection (OVP), Over Current Protection (OCP), and Short Circuit Protection (SCP), to ensure safe charging.



This image displays the UpBright AC Adapter alongside illustrations of the Greenote GSC50 and GSC40 cordless vacuum cleaners, indicating compatibility.


2. Important Safety Information

Please read and understand all safety instructions before using the adapter. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Do not** expose the adapter to rain, moisture, or extreme temperatures.
- **Do not** use the adapter if the cord or plug is damaged.
- **Do not** attempt to disassemble or modify the adapter. Refer all servicing to qualified personnel.
- Ensure the adapter is connected to a properly grounded electrical outlet.
- Unplug the adapter from the power outlet when not in use or during electrical storms.
- Keep the adapter out of reach of children.

The adapter is designed with safety features to prevent overheating and protect against electrical faults:

- **Over Voltage Protection (OVP):** Protects against excessive output voltage.
- **Over Current Protection (OCP):** Safeguards against excessive output current.
- **Short Circuit Protection (SCP):** Prevents damage from short circuits.
- Features good heat resistance and VO-Grade fire-retardant materials.

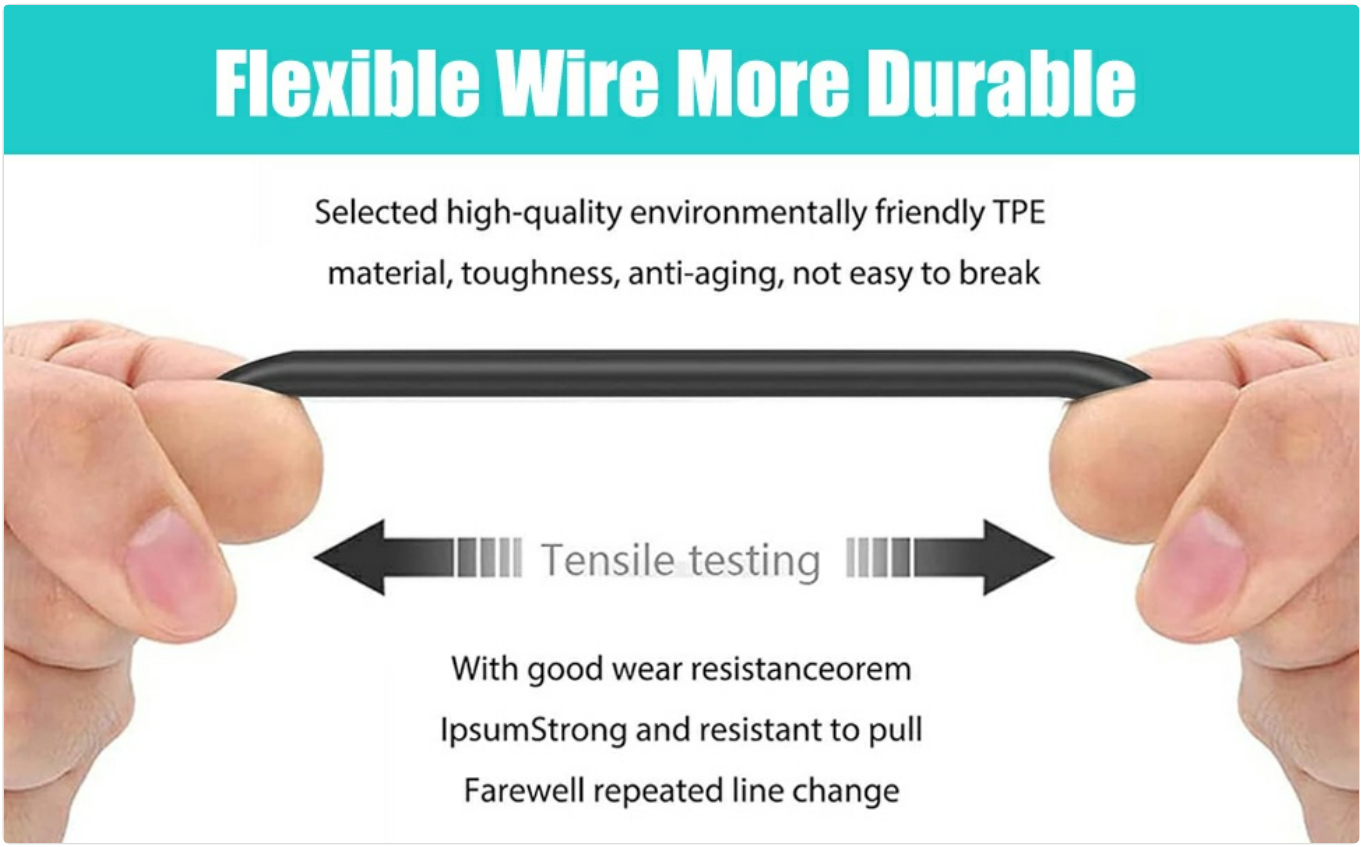

This graphic highlights the advanced safety mechanisms built into the UpBright adapter, such as good heat resistance, fire-retardant materials, and protection against overvoltage, overheat, overcharge, and overcurrent.

3. Package Contents

Verify that your package contains the following item:

- 1 x UpBright 26.5V AC/DC Adapter



A black UpBright 26.5V AC/DC adapter with its integrated power cord, featuring a barrel connector.

4. Setup Instructions

Follow these steps to set up your UpBright AC/DC Adapter:

1. Ensure the adapter is unplugged from any power source.
2. Locate the charging port on your Greenote GSC40 or GSC50 cordless vacuum cleaner.
3. Insert the barrel connector of the UpBright adapter firmly into the vacuum cleaner's charging port.
4. Plug the adapter's main plug into a standard 100-240VAC wall outlet.

Note: The vacuum's battery voltage is 22.2V. The charger's output voltage is 26.5V. This voltage difference is normal and necessary for proper battery charging.



A detailed view of the barrel-type connector end of the adapter's cable, which plugs into the vacuum cleaner.

5. Operating Instructions

Once the adapter is properly connected to both the power outlet and the vacuum cleaner, the charging process will begin automatically. Refer to your Greenote vacuum cleaner's manual for specific charging indicators (e.g., LED lights) that show the charging status.
Allow the vacuum's battery to fully charge before its first use or after extended periods of non-use to optimize battery life.

6. Care and Maintenance

Proper care of your UpBright AC/DC Adapter will ensure its longevity and safe operation:

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid sharp bends, kinks, or excessive pulling on the power cord. Do not place heavy objects on the cord.
- **Inspection:** Periodically inspect the adapter and cord for any signs of damage, such as cuts, fraying, or discoloration. If damage is found, discontinue use immediately.



This image illustrates the robust and flexible design of the adapter's wire, emphasizing its resistance to bending and pulling for enhanced durability.

7. Troubleshooting

If you encounter issues with your adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Adapter not charging the vacuum.	• Loose connection. • No power from the outlet. • Damaged adapter or cable. • Vacuum battery is old or faulty.	• Ensure all connections are secure. • Test the power outlet with another device. • Inspect the adapter and cable for visible damage. If damaged, discontinue use. • *Rechargeable batteries have a limited lifespan (typically 1-3 years). If the battery is old or faulty, it may not accept a charge, which is not an adapter issue.*

Problem	Possible Cause	Solution
Adapter feels excessively hot during charging.	• Poor ventilation. • Overload or internal fault.	• Ensure the adapter is in a well-ventilated area. • Unplug immediately and discontinue use if it feels excessively hot or emits smoke/odor. Contact support.

8. Specifications

Feature	Detail
Input Voltage	100-240VAC, 50/60Hz
Output Voltage	26.5VDC
Output Current	0.5A (500mA)
Connector Type	Barrel Connector
Compatible Devices	Greenote GSC40, Greenote GSC50 Cordless Vacuum Cleaners
Protection Features	OVP, OCP, SCP (Over Voltage, Over Current, Short Circuit Protection)
Product Dimensions	3 x 3 x 1 inches
Item Weight	2.08 ounces
Color	Black

9. Warranty and Support

UpBright offers the following warranty for this product:

- **Refund Policy:** 30 days from the date of purchase.
- **Exchange Policy:** 24 months from the date of purchase.

For technical support, warranty claims, or any questions regarding your UpBright AC/DC Adapter, please contact UpBright customer service through the retailer where the product was purchased.

© 2026 UpBright. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09CPFSZGC

More documents and user manuals: **https://manuals.plus/**