Garmin 010-02470-00

Garmin DriveSmart 76 GPS Navigator User Manual

Your comprehensive guide to setting up, operating, and maintaining your Garmin DriveSmart 76.

Important Safety Information

Always operate the device safely and responsibly. Failure to do so may result in injury or damage. For complete safety information, refer to the official Garmin safety guidelines.

- Do not operate the device in a manner that distracts you from driving.
- Ensure the device is securely mounted and does not obstruct your view of the road.
- Keep the device away from extreme temperatures and direct sunlight for prolonged periods.

Product Overview

The Garmin DriveSmart 76 is a 7-inch GPS navigator designed to simplify your driving experience with high-resolution maps, voice assist, and smart features.

Key Features

- 7-inch high-resolution display with North America map updates.
- Hands-free calling via Bluetooth technology.
- Garmin voice assist for easy navigation.
- Road trip features including HISTORY database, U.S. national parks directory, and Tripadvisor traveler ratings.
- Driver alerts for school zones, sharp curves, and speed changes.
- Live traffic, fuel prices, parking, and weather via Garmin Drive app.
- Alexa Built-in for music, audiobooks, and news.
- Built-in Wi-Fi for easy map and software updates.
- Included dual USB charger for additional device charging.

What's in the Box

- Garmin DriveSmart 76 device
- Vehicle suction cup mount
- Traffic receiver/vehicle power cable

- USB cable
- Documentation



Image: The Garmin DriveSmart 76 GPS Navigator, displaying a navigation screen.

Setup

Mounting the Device

Attach the vehicle suction cup mount to your windshield or dashboard, ensuring it does not obstruct your view. Securely snap the DriveSmart 76 onto the mount. Connect the vehicle power cable to the device and your vehicle's 12V power outlet.

Initial Power On and Configuration

Press and hold the power button to turn on the device. Follow the on-screen prompts to select your language, region, and accept the user agreements. Connect to a Wi-Fi network for initial map and software updates.

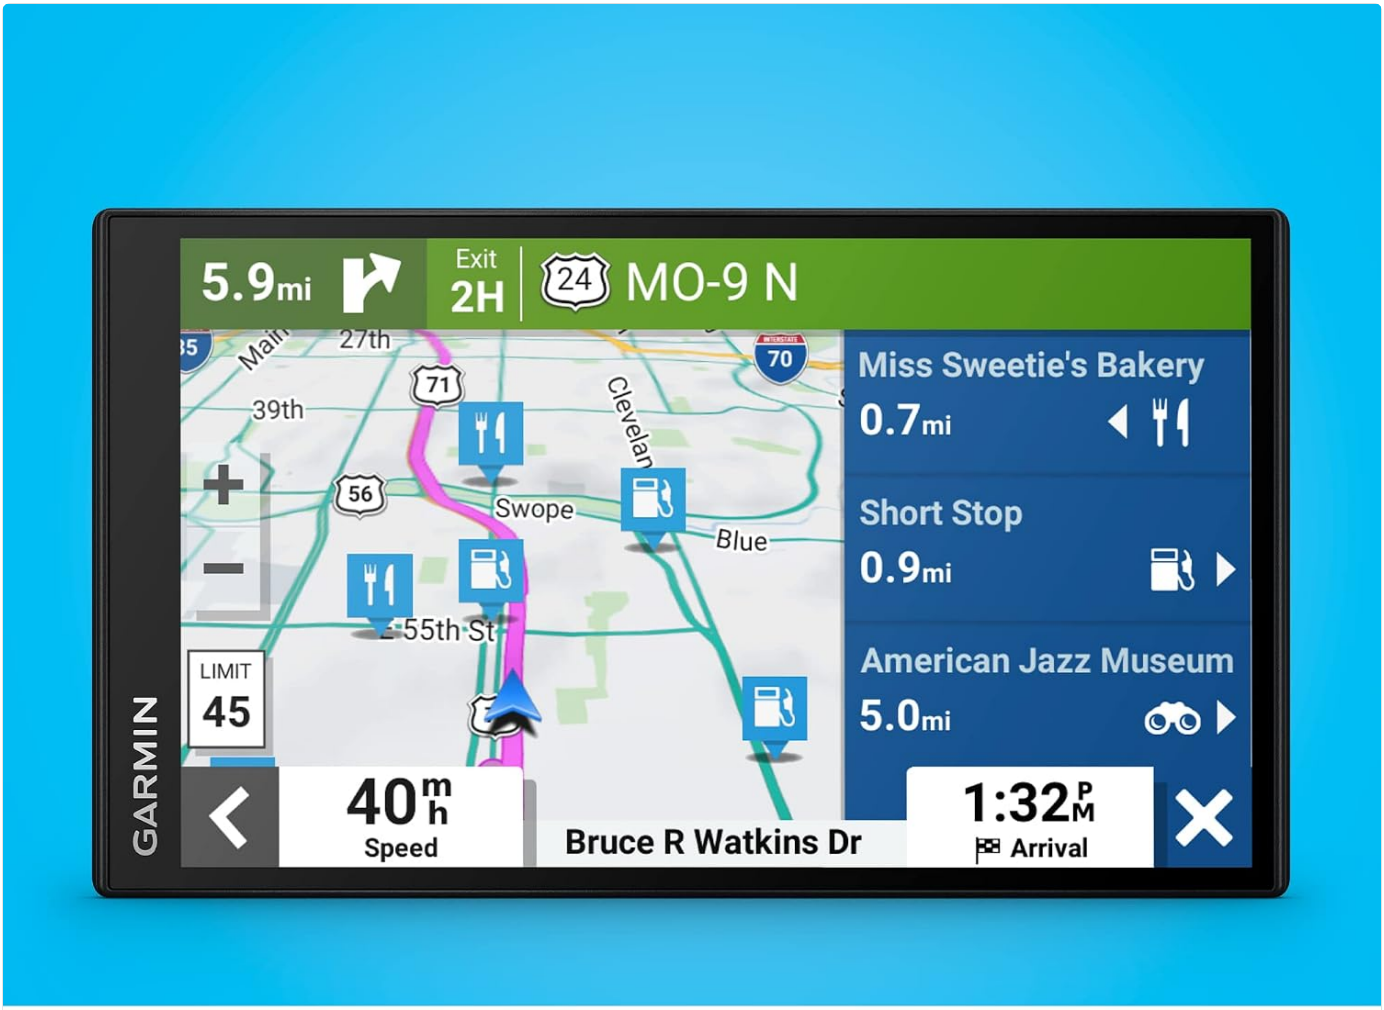


Image: The main menu of the Garmin DriveSmart 76, showing options like "Where To?" and "View Map".

Operating Instructions

Navigation Basics

From the main menu, select "Where To?" to enter a destination. You can search by address, points of interest (POIs), or categories. The device will calculate the best route and provide turn-by-turn directions.



Crisp, easy-to-read 7” navigator with high-resolution, edge-to-edge touch display.


Image: The Garmin DriveSmart 76 displaying a detailed navigation route with lane assist and upcoming turns.

Garmin Voice Assist

To activate voice assist, say "OK Garmin" followed by your command. You can ask for directions, search for locations, or control device functions hands-free.

Bluetooth and Hands-Free Calling

Pair your compatible smartphone with the DriveSmart 76 via Bluetooth to enable hands-free calling. Access your phone's contacts and make calls directly from the navigator's screen.

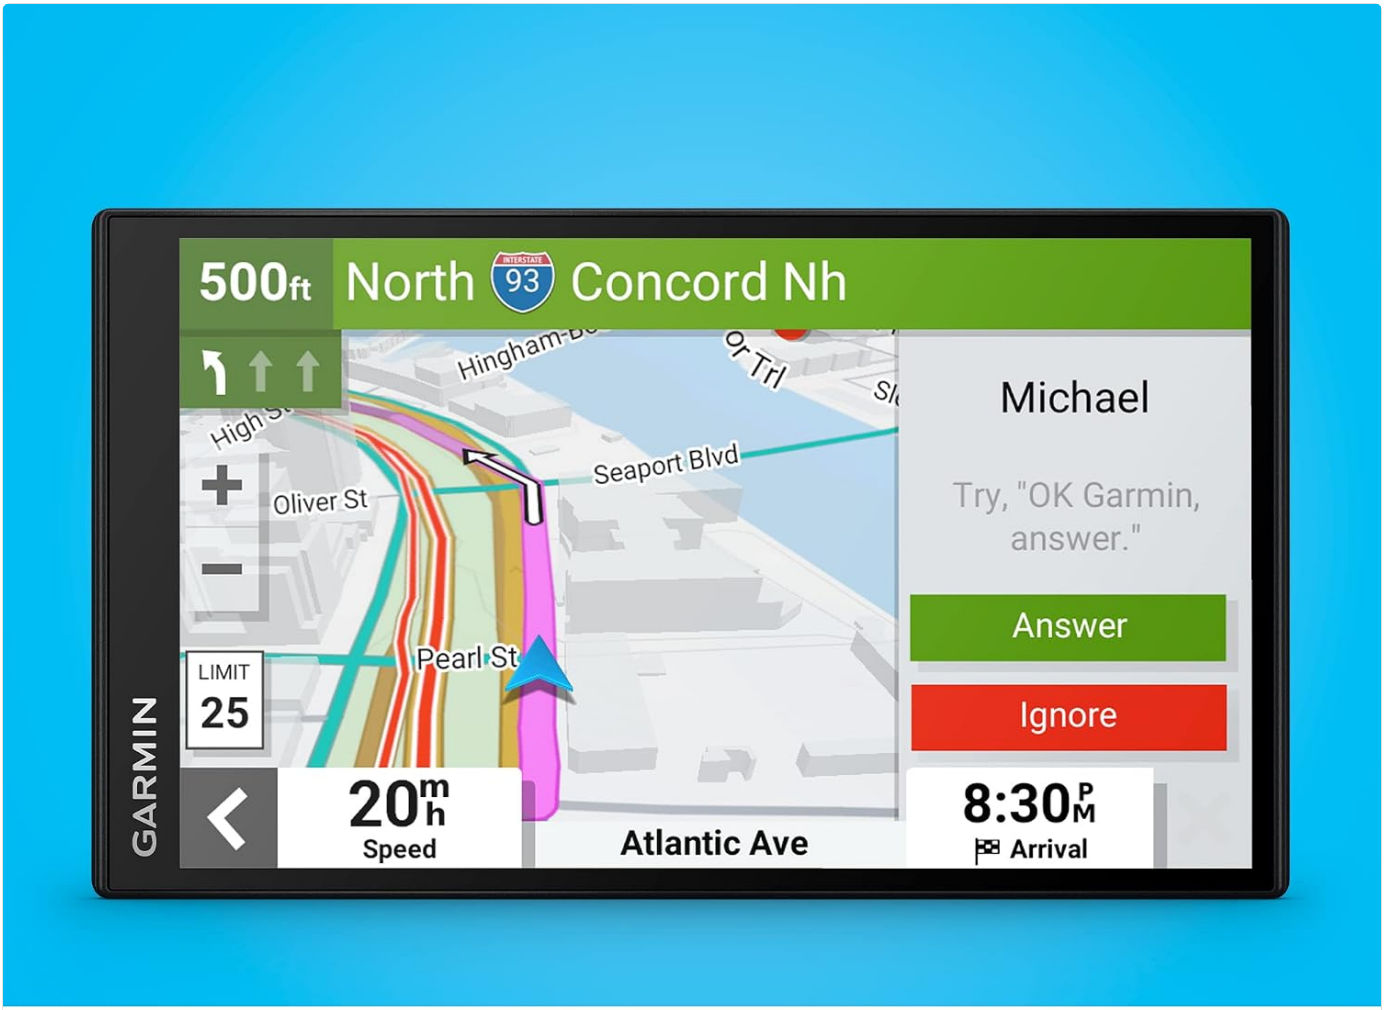


Hands-free calling when paired with your compatible smartphone enabled with BLUETOOTH® technology.

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Garmin is under license.

Image: The Garmin DriveSmart 76 displaying an incoming call notification with options to answer or ignore.

Live Services (Garmin Drive App)

Download the Garmin Drive app on your smartphone and pair it with your navigator to access live traffic updates, real-time fuel prices, parking availability, and weather forecasts.

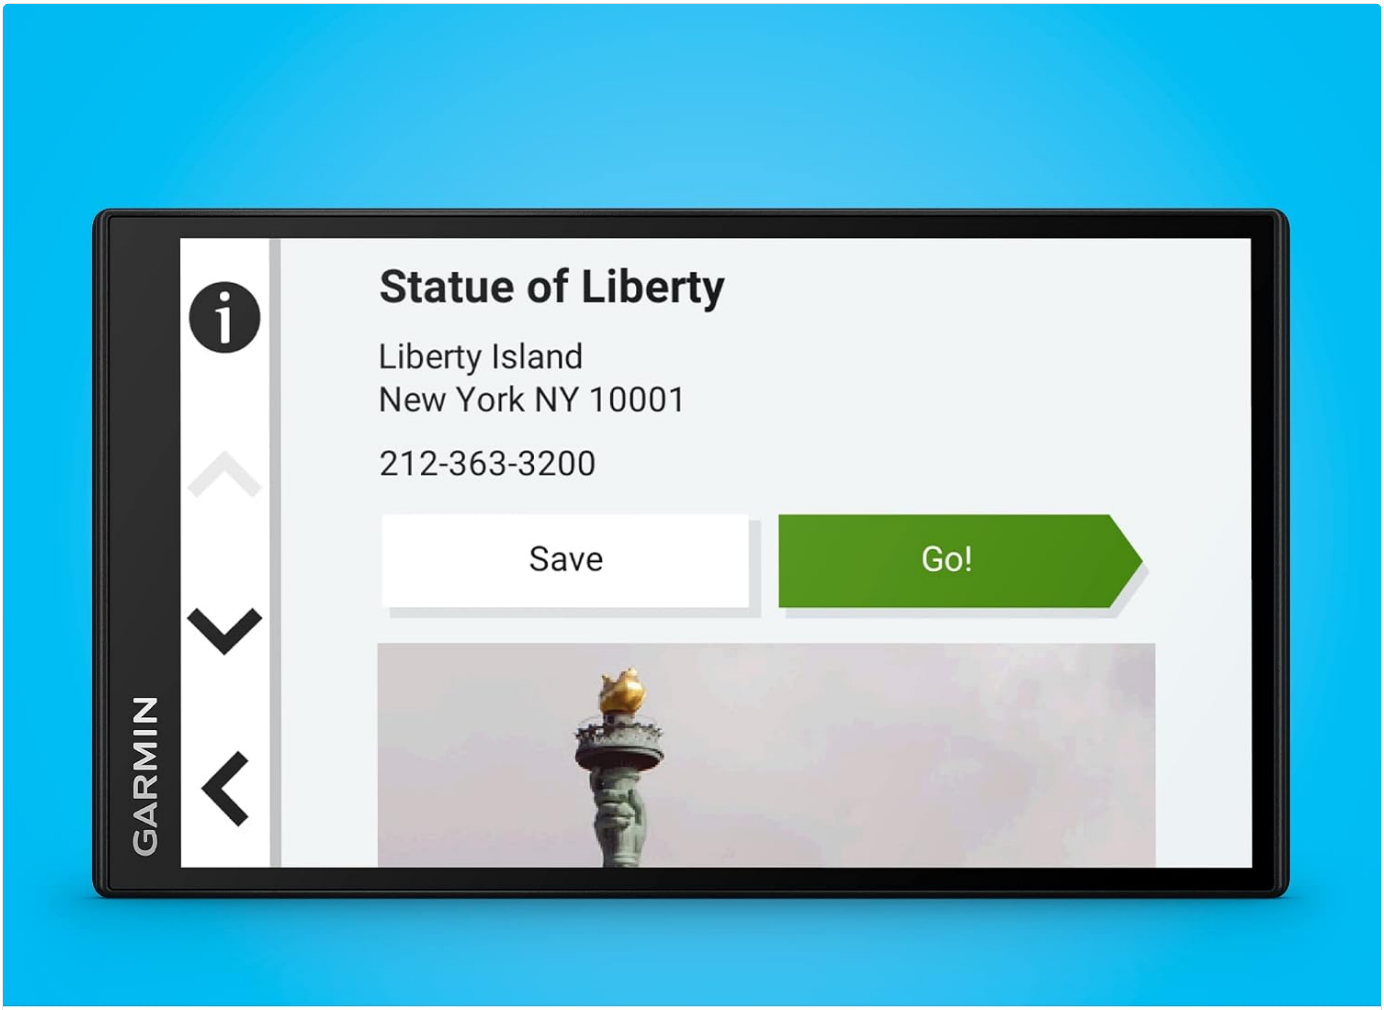

Make the most of road trips with Tripadvisor® traveler ratings, a directory of U.S. national parks and the HISTORY® database of notable sites.

2021 TripAdvisor LLC All rights reserved. The HISTORY and the “H” logo are registered trademarks of A&E Television Networks, LLC protected in the United States and other countries around the world.

Image: The Garmin DriveSmart 76 showing live traffic delays and estimated time savings on a route.

Software and Map Updates

Connect your device to a Wi-Fi network to receive automatic software and map updates. This ensures you always have the latest navigation data and features.



Access live traffic, fuel prices, weather, parking and smart notifications when you pair this navigator with your compatible smartphone using the Garmin Drive™ app.

Image: The Garmin DriveSmart 76 displaying the update screen, indicating map and software update status.

Maintenance

Cleaning the Device

Use a soft, lint-free cloth to clean the screen and exterior of the device. Avoid abrasive cleaners or solvents that could damage the display or casing.

Battery Information

The device contains a rechargeable lithium-ion battery. For optimal battery life, avoid exposing the device to extreme temperatures. The battery is designed to last approximately one hour on a full charge when not connected to vehicle power.

Troubleshooting

Problem	Solution
Device does not turn on.	Ensure the device is fully charged or connected to vehicle power. Press and hold the power button for at least 10 seconds to perform a soft reset.
GPS signal lost or inaccurate.	Move to an open area with a clear view of the sky. Ensure the device's antenna is not obstructed. Allow several minutes for the device to acquire satellite signals.
Touchscreen is unresponsive.	Restart the device. If the issue persists, ensure the screen is clean and free of debris.
Cannot connect to Wi-Fi.	Verify your Wi-Fi network is active and within range. Re-enter the Wi-Fi password. Restart both the navigator and your Wi-Fi router.

For more detailed troubleshooting, please refer to the official Garmin support website or the full user manual PDF.

Specifications

Feature	Detail
Product Dimensions	0.75 x 6.81 x 3.9 inches
Item Weight	8.5 ounces
Model Number	010-02470-00
Batteries	1 Lithium Ion battery (included)
Display Resolution	1024 x 600
Screen Size	6.95 Inches
Connectivity	Bluetooth, Wi-Fi, USB
Map Type	North America

Warranty and Support

Your Garmin DriveSmart 76 is covered by a limited warranty. For specific warranty terms and conditions, please refer to the documentation included with your product or visit the official Garmin website.
For technical support, product registration, or to download the full user manual, please visit the Garmin Support Center.

© 2024 Garmin Ltd. All rights reserved. Garmin and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question