Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEXiBOOK ROB25EN

LEXiBOOK Powerman Master Interactive Toy Robot ROB25EN Instruction Manual

Model: ROB25EN

Welcome to Your Powerman Master Robot

The LEXiBOOK Powerman Master is an interactive toy robot designed to provide engaging entertainment and educational experiences. This manual provides essential information for setting up, operating, and maintaining your robot to ensure optimal performance and enjoyment. Please read these instructions carefully before use.



Image: The Powerman Master robot and its remote control, displayed in its retail packaging.

Safety Guidelines

For safe operation and to prevent injury or damage, please observe the following:

- **Recommended Age:** Suitable for children aged 3 years and up.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Insert batteries with correct polarity. Remove exhausted batteries promptly.
- **Choking Hazard:** Contains small parts. Not for children under 3 years.
- **Supervision:** Adult supervision is recommended during play.

This product complies with essential safety requirements. Keep this manual for future reference.

What's Included

Your LEXiBOOK Powerman Master package contains the following items:

- 1 x Powerman Master Robot (Model: ROB25EN)
- 1 x Infrared Remote Control
- 1 x User Manual (this document)
- 1 x Explorer's Guide (to learn more about our planet and its biodiversity)



Image: The Powerman Master robot clearly visible within its product packaging.

Getting Started

Battery Installation (Robot)

The robot requires 3x LR6/AA batteries (not included).

1. Locate the battery compartment on the back of the robot.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3 new LR6/AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover and secure it with the screw.

Battery Installation (Remote Control)

The remote control requires 2x LR6/AA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 2 new LR6/AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover and secure it with the screw.

Powering On/Off

To turn the robot ON, locate the power switch on its back and slide it to the 'ON' position. To turn it OFF, slide the switch to the 'OFF' position. The remote control will automatically connect when both are powered on.



Image: The Powerman Master robot standing next to its remote control, ready for operation.

Robot Functions

Remote Control Operation

Use the directional buttons on the remote control to move the robot:

- **Forward:** Moves the robot straight ahead.
- **Backward:** Moves the robot straight back.
- **Turn Left/Right:** Rotates the robot in the specified direction.
- **Slide Forward/Backward:** Allows the robot to slide smoothly.

Animal Guessing Mode

Engage in an interactive animal guessing game:

1. Activate the animal guessing mode via the remote control.
2. Think of an animal.
3. Powerman Master will ask a series of questions. Respond with 'Yes', 'No', or 'I don't know' using the remote control buttons.
4. The robot will attempt to guess your animal.

Programmable Actions

Program a sequence of up to 40 actions for your robot:

1. Enter programming mode using the remote control.
2. Input desired movements, sounds, or other actions.
3. Add music to create custom dances and choreographies.
4. Exit programming mode to save and execute the sequence.

Playback and Recording (Repeat Function)

The robot can record and repeat your voice:

- Use the playback and recording function to make the robot repeat what you say in its unique robot voice.
- Includes a karaoke feature where the robot will repeat phrases in music.

Sing and Dance

Activate the robot's singing and dancing capabilities via the remote control for an entertaining performance.

Storytelling

The robot can tell pre-programmed stories or you can create your own for it to recite.

Foam Disc Shooting

The robot can shoot colorful foam discs. Ensure the discs are loaded correctly and activate the function via the remote control.

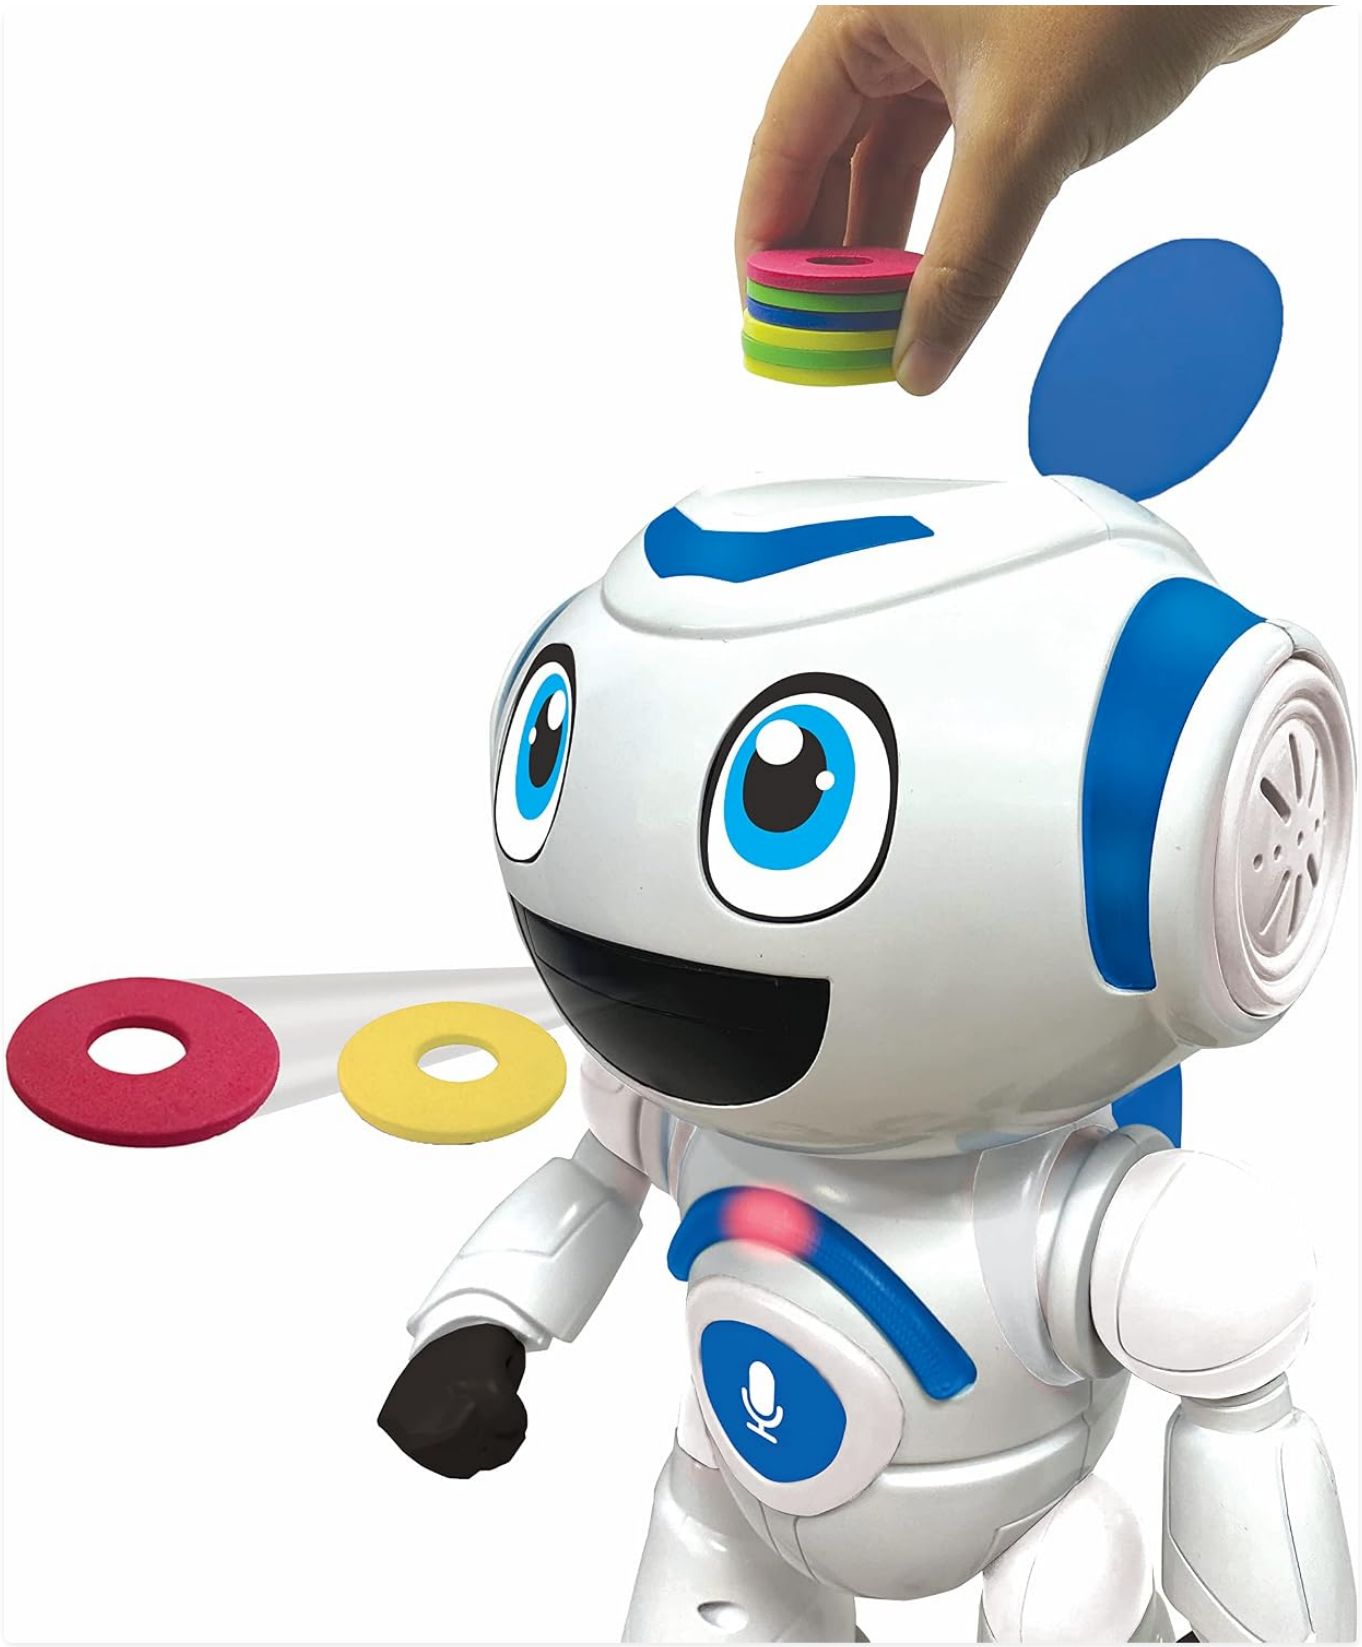


Image: The Powerman Master robot actively shooting colorful foam discs from its mouth.

Touch Sensor

Touch the robot's forehead to trigger funny sounds and reactions.

▶ **Watch video online**
Lexibook - Powerman Master, ROB25EN

Video: An official demonstration of the Lexibook Powerman Master, ROB25EN, showcasing its various interactive features and movements.

Care and Maintenance

- **Cleaning:** Wipe the robot and remote control with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the robot in a cool, dry place away from direct sunlight when not in use.
- **Battery Removal:** Remove batteries from both the robot and remote control if they will not be used for an extended period to prevent leakage.

Common Issues

- **Robot not responding:** Ensure both the robot and remote control have fresh batteries and are powered on. Check for any obstructions to movement.
- **Remote control not working:** Verify battery installation and power. Ensure there are no objects blocking the infrared signal between the remote and the robot.
- **Slow responses:** This may indicate low battery power in either the robot or the remote control. Replace batteries as needed.
- **Robot not moving smoothly:** Ensure the robot is on a flat, clear surface. Carpeted surfaces may affect movement.

Product Specifications

Feature	Specification
Product Dimensions	6.26 x 3.39 x 9.65 inches
Item Weight	1.24 pounds
Item Model Number	ROB25EN
Manufacturer Recommended Age	3 years and up
Robot Batteries	3x LR6/AA batteries (not included)
Remote Batteries	2x LR6/AA batteries (not included)
Manufacturer	LEXIBOOK
Release Date	September 2, 2021

Warranty and Customer Support

LEXiBOOK products are designed and manufactured to the highest quality standards. For any questions, technical support, or warranty claims, please refer to the contact information provided in the product packaging or visit the official LEXiBOOK website. Please retain your proof of purchase for warranty purposes.

Safety Information: The manufacturer recommends a 2-year warranty period for this product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09FDQSFWB

More documents and user manuals: **https://manuals.plus/**