Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GGC HG-R02A

GGC 3.1 Quart Stainless Steel Whistling Tea Kettle (Model HG-R02A) Instruction Manual

Brand: GGC | Model: HG-R02A

1. Introduction

Thank you for choosing the GGC 3.1 Quart Stainless Steel Whistling Tea Kettle. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new kettle. Please read it thoroughly before first use and retain it for future reference.

Key Features:

- **High-Grade Design:** Crafted from heavy stainless steel with a unique diamond appearance and a wood pattern handle for an elegant look.
- **Large Capacity:** 3.1 Quart (3 Liter) capacity, ideal for families or gatherings of 5-7 people, providing approximately 12 cups per boil.
- **Loud Whistling:** Emits a clear, audible whistle when water boils, ensuring you are alerted even in noisy environments.
- **Anti-Heat Handle with Simple-Touch Button:** Ergonomically designed silicone-coated handle with a wood pattern, allowing safe lifting and pouring without direct contact with hot metal. The integrated button easily opens and closes the spout.
- **Versatile Stovetop Compatibility:** Suitable for induction cookers, electric furnaces, gas, and natural gas stovetops.



Figure 1: GGC 3.1 Quart Stainless Steel Whistling Tea Kettle.

2. Setup

Initial Cleaning:

1. Before first use, wash the kettle thoroughly with warm soapy water.
2. Rinse completely and dry with a soft cloth.
3. Fill the kettle with water and boil it once, then discard the water. This helps to remove any manufacturing residues.

Filling the Kettle:

- Remove the lid by gently pulling it upwards.
- Fill the kettle with fresh water.
- **Important Water Level Guidelines:**

- The water level **must be below the water outlet** of the kettle to ensure the whistle works properly.
- The water level **cannot be less than half the volume** of the kettle to prevent boiling dry and potential damage.
- Do not overfill the kettle.

- Securely replace the lid, ensuring it is tightly closed without any gaps for air leakage.

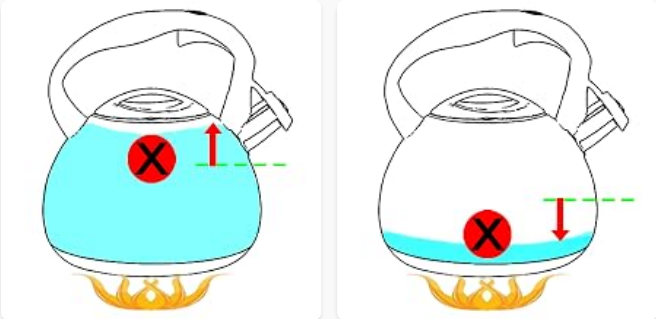

Figure 2: Correct water levels for optimal performance.

3. Operating Instructions

Boiling Water:

1. Place the filled kettle on your stovetop.
2. For gas stoves, use a low or medium flame. Ensure the flame does not extend beyond the kettle base to prevent burning the spout or discoloring the kettle body.
3. Heat the kettle until the water boils. The kettle will emit a loud whistle to indicate that the water is ready.
4. Once the whistle sounds, turn off the heat immediately to prevent the water from boiling away and to protect the kettle from overheating.



Figure 3: Proper flame size for gas stovetops.

Pouring:

- The ergonomic, silicone-coated handle is designed to remain cool to the touch, allowing you to lift and pour the kettle directly.
- Press the simple-touch button located on the handle to open the spout cover for pouring. Release the button to close the spout.

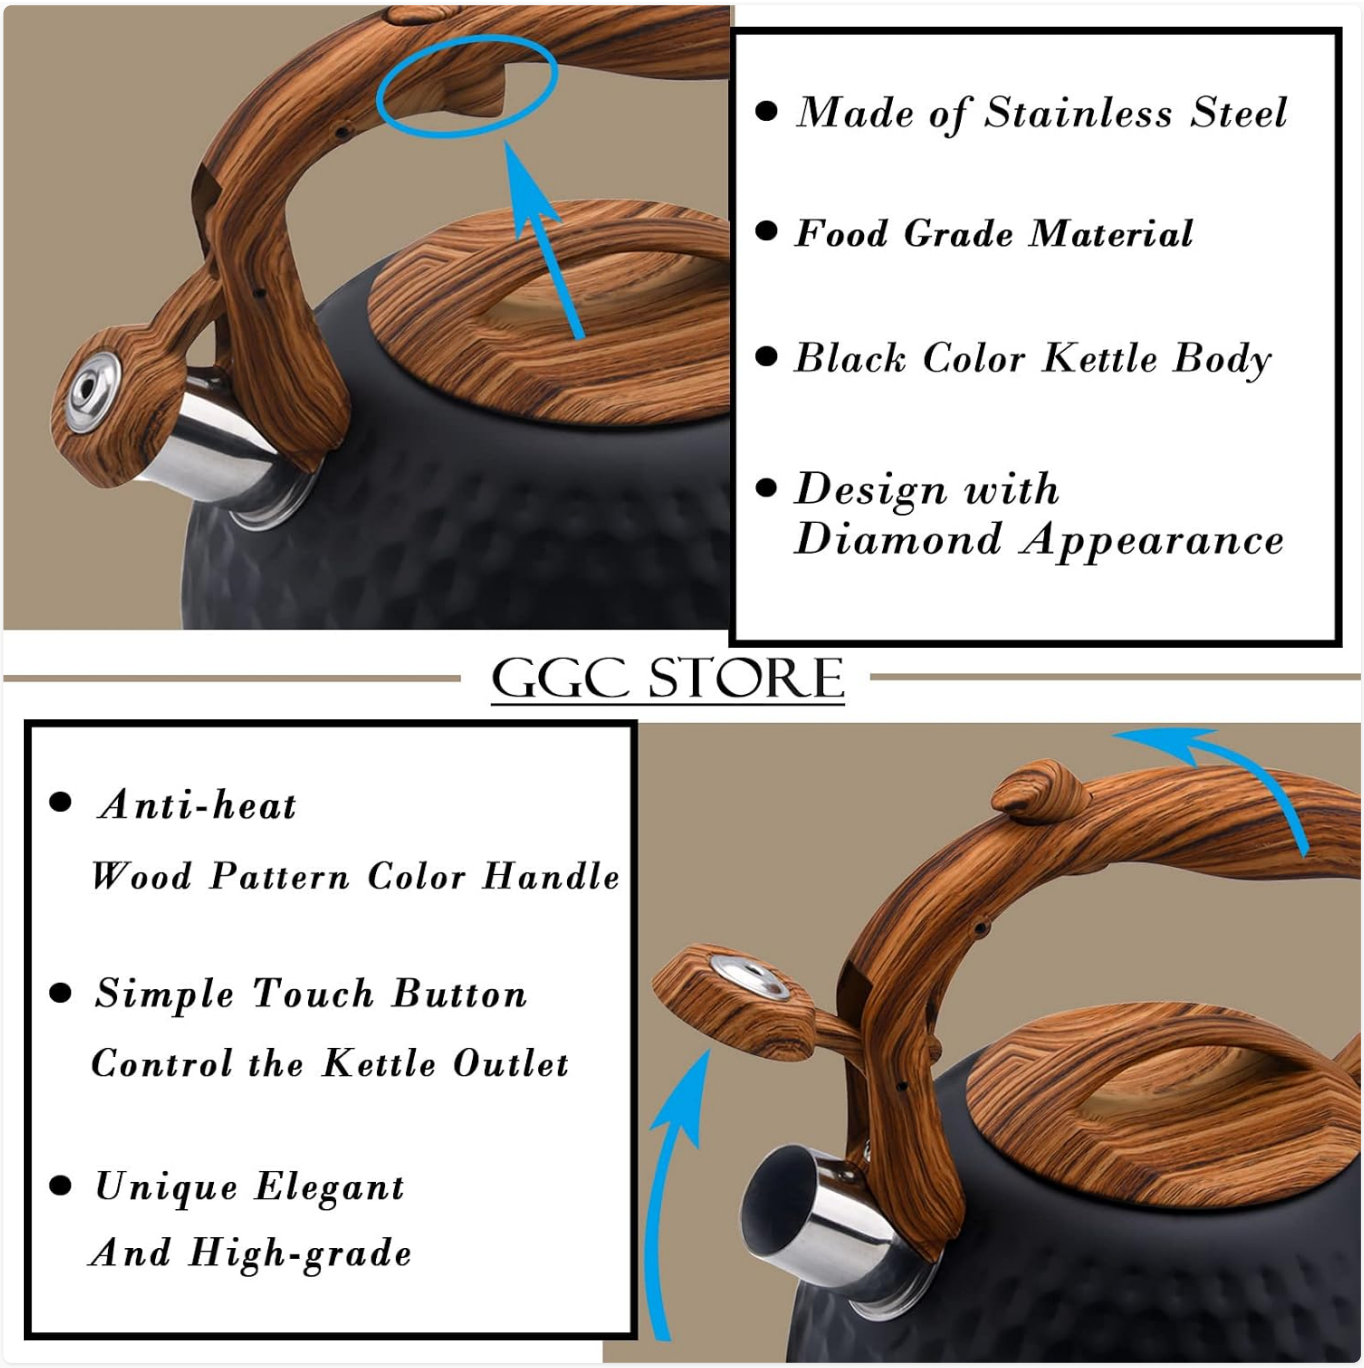

Figure 4: Anti-heat handle and button-controlled spout.



Figure 5: Pouring hot water from the kettle.

Official Product Video:

▶ **Watch video online**
GGC Black Tea Kettle For Stove Top

Official product video demonstrating the features and usage of the GGC Black Tea Kettle, including its design, handle, and whistling function.

4. Maintenance and Care

- **Cleaning:** Hand wash only. The kettle is **not dishwasher safe**. Use warm soapy water and a soft sponge. Avoid abrasive cleaners or scouring pads that could scratch the surface.
- **Drying:** After each use, pour out any excess water and dry the interior and exterior thoroughly to prevent water spots or mineral buildup.

- **Storage:** Store the kettle in a dry place. Do not leave water in the kettle for extended periods.

5. Troubleshooting

- **Whistle Not Working:**
  - Ensure the water level is below the water outlet.
  - Verify that the lid is closed tightly without any air gaps.
- **Handle Getting Hot:**
  - When using a gas stove, always use a low or medium flame. The flame should not extend beyond the base of the kettle. Excessive flame can heat the handle.
  - If the handle feels warm, use a pot holder for added safety.
- **Rust Around the Lid:**
  - This can occur due to steam condensation. Ensure the kettle is thoroughly dried after each use, especially around the lid and spout area, to minimize moisture retention.

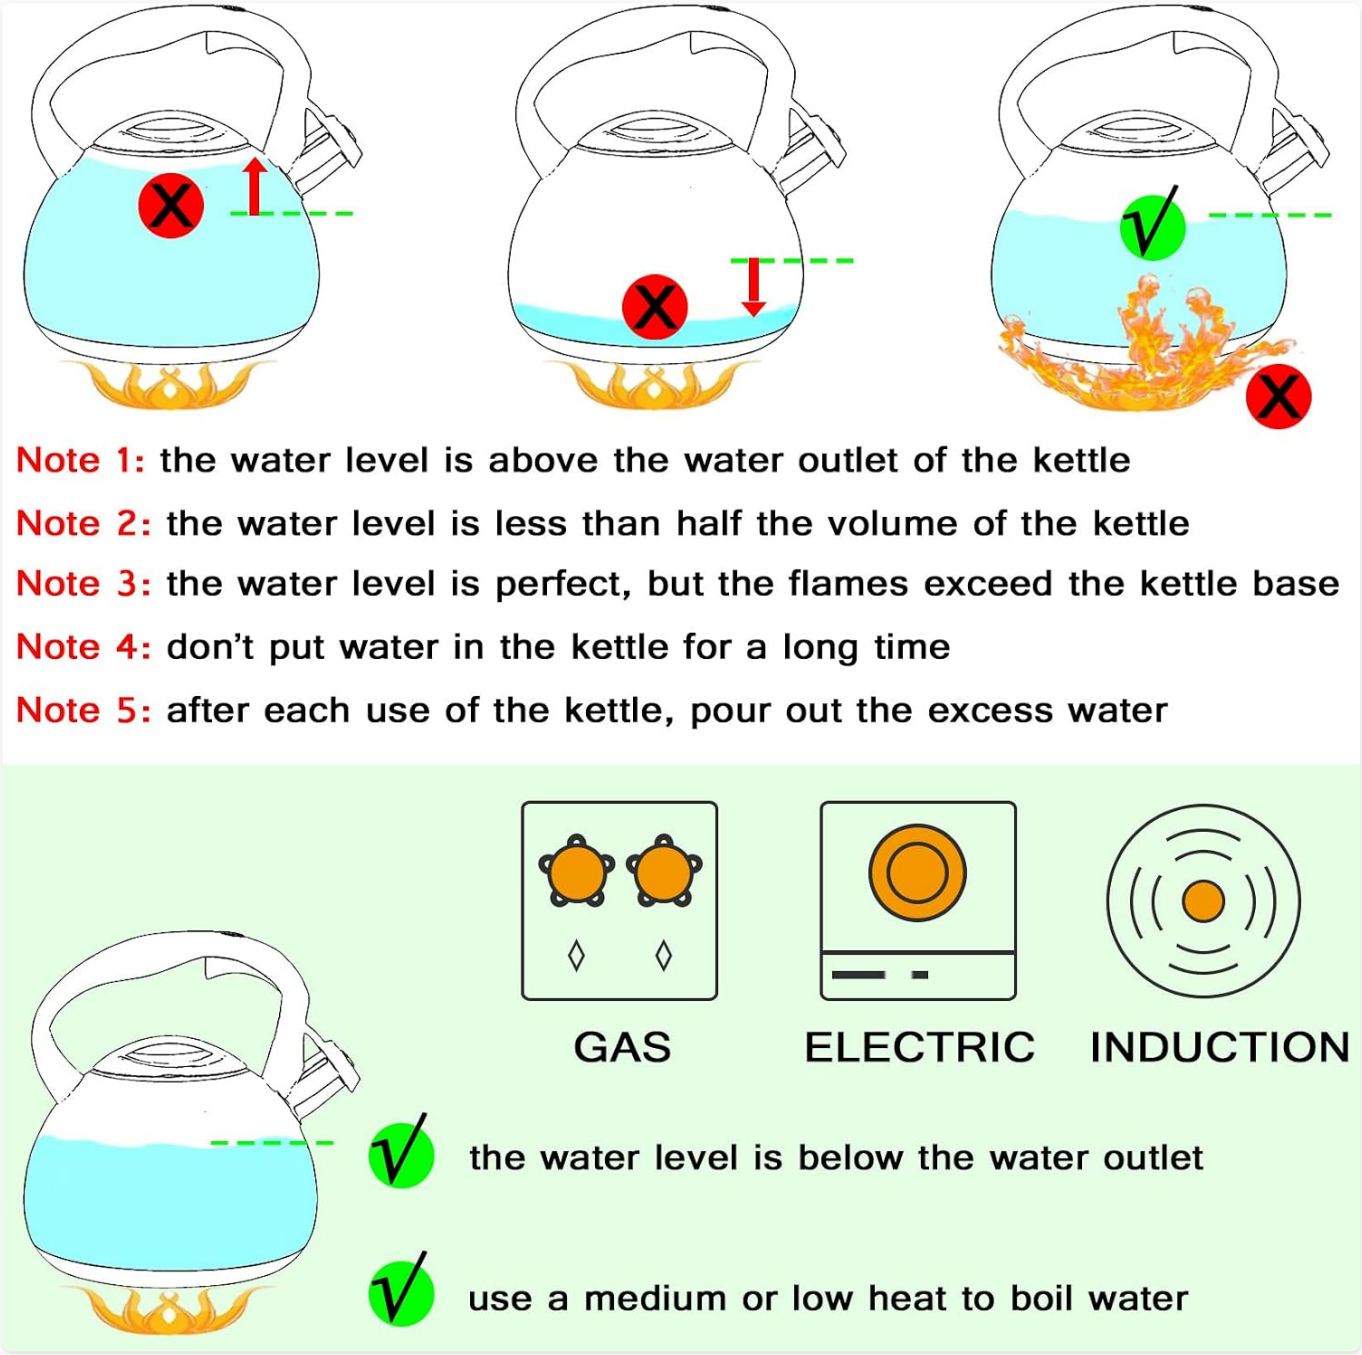

Figure 6: Visual guide for common kettle issues.

6. Specifications

Feature	Detail
Brand	GGC
Model Number	HG-R02A
Capacity	3 Quarts (3.1 Liters)
Material	Stainless Steel
Color	Premium Black
Handle Material	Silicone with Wood Pattern

Lid Material	Stainless Steel
Item Weight	0.8 Kilograms
Dimensions (D x W x H)	7.7"D x 7.7"W x 8.8"H
Whistling Function	Yes
Dishwasher Safe	No
Stovetop Compatibility	Induction, Electric, Gas, Natural Gas

7. Warranty and Support

For warranty information or product support, please refer to the packaging or contact GGC customer service directly. Keep your purchase receipt as proof of purchase.

© 2026 GGC. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09FP6F4RJ

More documents and user manuals: **https://manuals.plus/**