**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**ZOKOP XPB38-ZK3**

# ZOKOP Compact Single Tub Washing Machine User Manual

Model: XPB38-ZK3
Brand: ZOKOP

## 1. Introduction and Overview

The ZOKOP XPB38-ZK3 is a compact, semi-automatic single tub washing machine designed for efficient laundry care in smaller spaces. Featuring a built-in drain pump, this machine simplifies the process of washing and draining, making it suitable for various household environments. Its integrated design allows for both washing and dewatering functions, providing a convenient solution for your daily laundry needs.



Figure 1.1: Front view of the ZOKOP XPB38-ZK3 Compact Single Tub Washing Machine.

## 2. Safety Instructions

To ensure safe operation and prevent damage to the appliance or injury to users, please adhere to the following safety guidelines:

- Always connect the washing machine to a grounded power outlet with the correct voltage (110V/60Hz).
- Do not operate the machine if the power cord or plug is damaged. Contact qualified personnel for repair.
- Keep the machine away from direct sunlight, heat sources, and damp environments to prevent electrical hazards.
- Ensure the machine is placed on a stable, level surface to prevent vibration and tipping during operation.
- Do not allow children to operate or play with the washing machine. Supervise children closely when the appliance is in use.
- Never put hands into the washing or spinning tub while the machine is operating.

- Do not wash waterproof clothing or items that float easily, as this may cause imbalance and damage.
- Unplug the machine from the power outlet before cleaning, maintenance, or if it will not be used for an extended period.
- Ensure the drain hose is properly positioned to prevent water leakage.

## 3. Package Contents

Upon unpacking, please verify that all the following components are included:

- 1 x ZOKOP Compact Single Tub Washing Machine with Built-in Drain Pump
- 1 x Water Inlet Hose
- 1 x Drain Pipe (extended to 1.1M)
- 1 x Drain Filter

## 4. Setup

Follow these steps to set up your washing machine:

1. **Placement:** Choose a stable, level surface near a water source, a drain, and a grounded electrical outlet. Ensure there is enough space around the machine for ventilation and operation.
2. **Connect Water Inlet:** Attach one end of the water inlet hose to the water inlet port on the washing machine (typically located at the back or side). Connect the other end to a water faucet. Ensure connections are tight to prevent leaks.
3. **Position Drain Pipe:** Place the drain pipe into a sink, bathtub, or a designated drain. The built-in drain pump allows for more flexible drainage options. Ensure the drain pipe is not kinked or blocked.
4. **Power Connection:** Plug the power cord into a grounded 110V/60Hz electrical outlet.



Figure 4.1: Example placement of the washing machine in a suitable environment.

## 5. Operating Instructions

This semi-automatic washing machine features separate controls for washing and spinning. Note that washing and dehydration functions cannot be used simultaneously.

### 5.1. Washing Cycle

1. **Load Laundry:** Open the lid and place clothes loosely into the washing tub. Do not overload the machine; the maximum washing capacity is 10 pounds.
2. **Add Detergent:** Add the appropriate amount of laundry detergent directly into the tub with the clothes.
3. **Fill Water:** Turn on the water faucet to fill the tub with water to the desired level, covering the clothes.
4. **Set Wash Timer:** Turn the wash timer knob (usually on the top panel) to select the desired washing time (e.g., 0-15 minutes). The machine will start washing automatically.
5. **Drain Water:** Once the wash cycle is complete, turn the function selector knob to the 'Drain' position to activate

the built-in drain pump and empty the water from the tub.

### 5.2. Spin (Dewatering) Cycle

1. **Transfer Clothes:** After the wash cycle and draining, carefully transfer the washed clothes from the washing tub to the spin basket (if separate, or ensure the spin basket is in place). Distribute clothes evenly to prevent imbalance.
2. **Secure Lid:** Close the inner and outer lids securely.
3. **Set Spin Timer:** Turn the spin timer knob (usually on the top panel) to select the desired spinning time (e.g., 0-5 minutes). The machine will begin the dewatering process.
4. **Wait for Stop:** Allow the spin cycle to complete and the basket to come to a complete stop before opening the lid and removing clothes.




Figure 5.1: Illustration of washing and dehydration separation, indicating they cannot operate simultaneously.

## 6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your washing machine.

### 6.1. Cleaning the Tub and Spin Basket

- After each use, wipe down the inside of the washing tub and spin basket with a clean cloth to remove any detergent residue or lint.
- Periodically, clean the tubs with a mild, non-abrasive cleaner and rinse thoroughly.

### 6.2. Cleaning the Drain Filter

- Locate the drain filter (if accessible and removable, typically near the bottom of the wash tub).
- Remove any lint, debris, or foreign objects accumulated in the filter. Rinse it under running water.
- Reinsert the drain filter securely before next use.

### 6.3. Exterior Cleaning

- Wipe the exterior of the machine with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.

### 6.4. Storage

- If storing the machine for an extended period, ensure it is completely drained and dry.
- Store in a cool, dry place, away from direct sunlight and extreme temperatures.




Figure 6.1: The detachable lid and spin basket for easy cleaning and maintenance.

## 7. Troubleshooting

If you encounter issues with your washing machine, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---|---|---|
| Machine does not start | No power; Lid not closed; Timer not set. | Check power connection; Ensure lid is fully closed; Set the timer knob. |
| Water does not drain | Drain pipe kinked or blocked; Drain pump malfunction. | Straighten drain pipe; Clear any blockages; Contact support if pump is faulty. |
| Spin basket does not spin or spins slowly | Clothes unevenly distributed; Overloaded; Lid not closed. | Redistribute clothes evenly; Reduce load size; Ensure lid is fully closed. |

| Problem | Possible Cause | Solution |
| --- | --- | --- |
| Excessive vibration or noise | Machine not level; Clothes unevenly distributed; Foreign object in tub. | Adjust machine to be level; Redistribute clothes; Check for and remove foreign objects. |

If the problem persists after attempting these solutions, please contact customer support for further assistance.

## 8. Specifications

Detailed technical specifications for the ZOKOP XPB38-ZK3 Washing Machine:

**Model:** XPB38-ZK3

**Power Supply:** 110V/60Hz

**Rated Washing Capacity:** 10 Pounds (approx. 4.5 kg)

**Rated Spin Capacity:** 3 Pounds (approx. 1.36 kg)

**Rated Wash Input Power:** 250W

**Rated Spin Input Power:** 120W

**Total Power:** 370W

**Color:** Gray

**Dimensions (L x W x H):** 16.93 x 16.14 x 26.97 inches (43 x 41 x 68.5 cm)

**Weight:** 15.43 lbs (7 kg)

**Material:** Plastic

**Plug Type:** US Standard

**Motor Speed:** 1300 rpm/min

**Manufacturer:** N\W

**UPC:** 768263622413

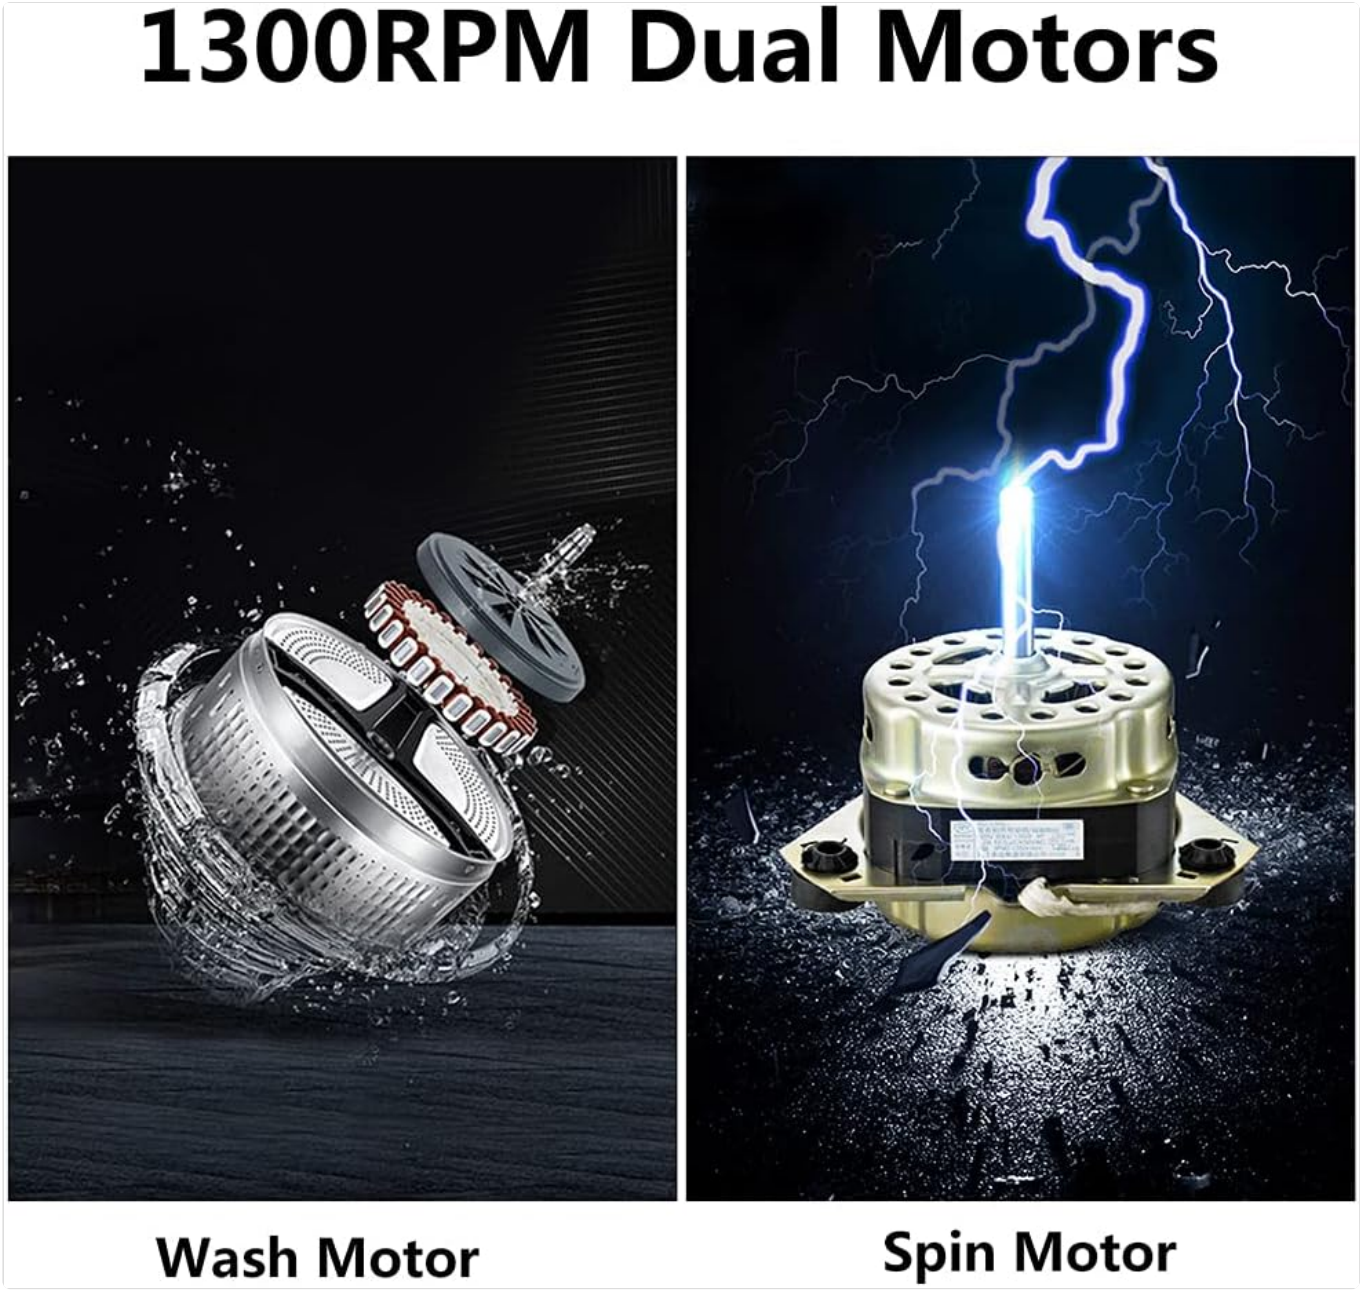



Figure 8.1: Product dimensions for the ZOKOP XPB38-ZK3.



Figure 8.2: Illustration of the internal wash and spin motors.

## 9. Warranty and Support

For information regarding product warranty, please refer to the warranty card included with your purchase or contact the retailer/manufacturer directly. Warranty terms and conditions may vary.

If you require technical support, have questions about operation, or need to report a defect, please contact the seller or manufacturer through their official channels. When contacting support, please have your model number (XPB38-ZK3) and purchase details ready.

© 2024 ZOKOP. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B09GFX1848**

More documents and user manuals: **https://manuals.plus/**