Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ADIMO Model 35

ADIMO Home Safe Box Model 35

1.2 Cubic Feet Digital Keypad and Dual Key System Instruction Manual

Introduction

Thank you for choosing the ADIMO Home Safe Box Model 35. This manual provides essential information for the proper setup, operation, and maintenance of your new security safe. Please read these instructions carefully before use to ensure optimal performance and security.



Image: Front view of the ADIMO Home Safe Box.

Safety Precautions

- Keep emergency keys stored securely and separately from the safe. Do not store them inside the safe.
- Ensure the safe is mounted properly to prevent unauthorized removal.
- Do not expose the safe to extreme temperatures or humidity.
- Replace batteries promptly when the low battery indicator appears to avoid lockout.

Package Contents

- ADIMO Home Safe Box
- Emergency Keys (2)
- Master Keys (2)
- External Battery Box
- Fireproof Waterproof Document Bag
- Expansion Screws (for mounting)

- Floor Mats
- Instruction Manual

Setup Guide

1. Unpacking and Initial Inspection

Carefully remove the safe from its packaging. Inspect for any signs of damage. Ensure all package contents are present.

2. Battery Installation

The safe requires 4 AA batteries (not included) for the digital keypad. The battery compartment is located on the inside of the safe door.

1. Open the safe using the emergency key (refer to 'Initial Opening' below).
2. Locate the battery compartment cover on the inside of the door.
3. Remove the cover and insert 4 AA batteries, observing polarity (+/-).
4. Replace the battery compartment cover.

▶ **Watch video online**
Video showing battery installation in the ADIMO safe.

Video: A user demonstrates how to install batteries into the safe's internal compartment.

3. Initial Opening (First Use)

For the first opening, use the emergency key:

1. Insert one of the emergency keys into the emergency keyhole, usually located behind a small cover on the keypad panel.
2. Turn the emergency key clockwise.
3. Simultaneously insert a master key into the main keyhole and turn it clockwise to open the safe door.

4. Setting Your Personal Code

With the safe door open and batteries installed:

1. Press the red reset button located on the inside of the safe door (usually near the hinge). You will hear a beep.
2. On the keypad, enter your desired 3-8 digit code.
3. Press the '#' or 'E' button to confirm. The safe will beep, indicating the code is set.
4. Test the new code with the door open before closing it.



Image: Detailed view of the digital keypad for code entry.

5. Mounting the Safe

The safe can be mounted to a wall or inside a cabinet for enhanced security. Two pre-drilled holes are located on the back of the safe.

1. Choose a suitable location for mounting.
2. Mark the drilling points through the pre-drilled holes on the safe's back.
3. Drill holes in the wall/cabinet using an appropriate drill bit.
4. Align the safe with the drilled holes and secure it using the provided expansion screws.



Image: Visual guide for wall or cabinet mounting.

Operation

1. Opening with Digital Code and Master Key

This is the recommended daily opening method for maximum security:

1. Enter your personal 3-8 digit code on the keypad.
2. Press '#' or 'E'.
3. Insert a master key into the main keyhole and turn it clockwise to open the door.

▶ **Watch video online**

Video demonstrating the operation of the ADIMO Digital Heavy Duty Home Safe.

Video: An official guide demonstrating the various operation methods for the ADIMO safe.

2. Opening with Digital Code Only

This method can be used for quick access if the master keyhole is in the horizontal status:

1. Ensure the master keyhole is in the horizontal position (key removed or turned to horizontal).
2. Enter your personal 3-8 digit code on the keypad.
3. Press '#' or 'E'. The safe will unlock.

3. Using the Emergency Key

The emergency key is for situations where the digital code is forgotten or batteries are dead.

1. Locate the emergency keyhole cover on the keypad panel and remove it.
2. Insert an emergency key and turn it clockwise.
3. Insert a master key into the main keyhole and turn it clockwise to open the door.

4. Alarm System Features

The safe is equipped with an intelligent alarm system:

- **Incorrect Password Alarm:** If the incorrect password is entered three consecutive times, the alarm will sound.
- **Collision Alarm:** If the safe experiences a severe collision or tampering attempt, the alarm will be triggered.

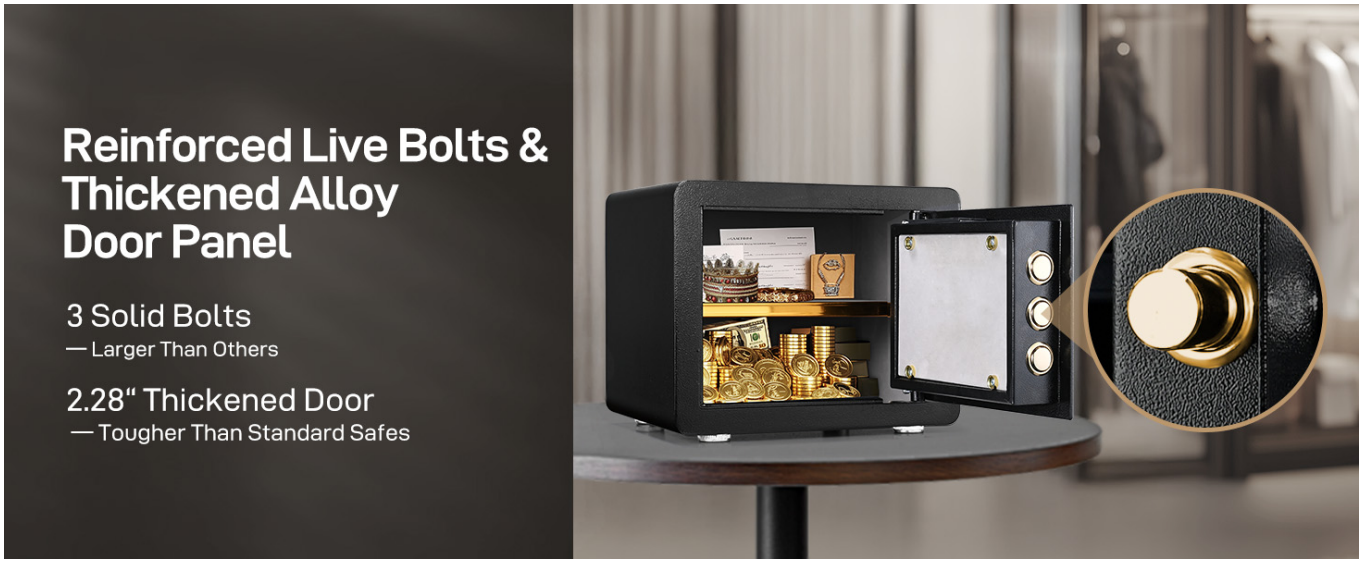

Image: Illustration of the safe's double alarm system.

5. Internal LED Light

The safe features an internal LED light for visibility in low-light conditions. The light activates automatically when the door is opened.

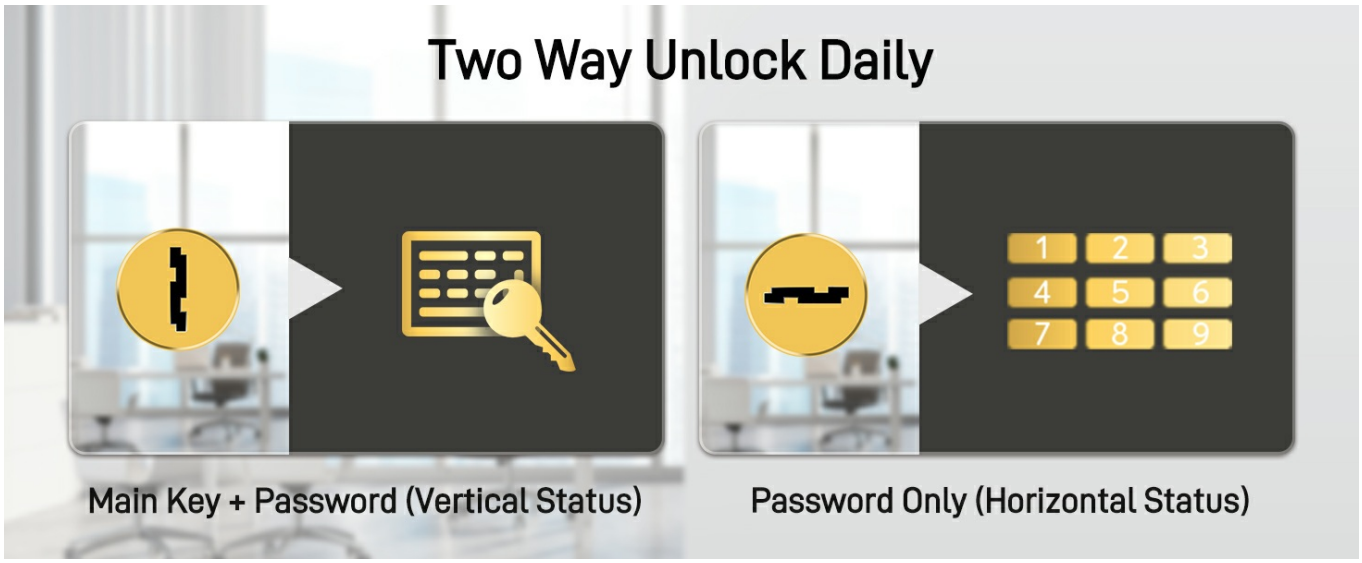

Image: View of the safe's interior with the LED light activated.

Features Overview

1. Construction

The ADIMO safe is constructed from heavy-duty alloy steel, providing enhanced resistance against drilling and damage. It features 3 thick bolts for added strength and anti-theft protection. The door panel is 2.28 inches thick, contributing to its robust design.



Image: Close-up of the safe's interior door, highlighting the alloy steel and locking bolts.

2. Removable Shelf

The interior includes a removable shelf, allowing for flexible organization of your valuables. This design helps classify items and keeps the interior tidy.



Image: Demonstrates the safe's interior with and without the removable shelf.

3. Fireproof and Waterproof Money Bag

An included fireproof and waterproof money bag provides additional protection for sensitive documents, cash, credit cards, and jewelry.



Image: The fireproof and waterproof money bag, shown with contents.

▶ **Watch video online**

1.2 Cuft Security Safe Box with Fireproof Money Bag

Video: A short video highlighting the 1.2 Cuft Security Safe Box and its fireproof money bag.

Maintenance

1. Battery Replacement

When the low battery indicator lights up, replace the batteries promptly to ensure continuous operation of the digital keypad. Use 4 new AA batteries.

2. External Battery Box

In case the internal batteries die and you cannot open the safe, use the external battery box. Insert 4 AA batteries into the external box, plug it into the external power port on the keypad, and then enter your code to open the safe.

3. General Care

Clean the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish. Ensure the safe is kept dry.

Troubleshooting

1. Forgotten Password

If you forget your digital code, you can always open the safe using the emergency key and a master key. Refer to the 'Using the Emergency Key' section for detailed steps. Once open, you can reset your personal code.

2. Dead Batteries / Keypad Not Responding

If the batteries inside the safe are dead, the keypad will not respond. Use the external battery box to temporarily power the keypad and open the safe. Replace the internal batteries immediately after opening.

3. Alarm Activation

If the alarm sounds due to incorrect password entry or collision, it will typically stop after a short period. To silence it immediately, open the safe using the correct code or keys.

Specifications

Brand	ADIMO
Model Number	Model 35
Product Dimensions (Exterior)	12.6"D x 16.54"W x 13.78"H
Interior Dimensions	W14.37" x D11.42" x H11.42"
Capacity	1.2 Cubic Feet
Material	Alloy Steel
Lock Type	Combination, Dual Keys
Special Features	Alarm System, Sensor Light, Waterproof, Fireproof (with bag)
Mounting Type	Wall Mount



Image: Visual representation of the safe's dimensions.

Warranty and Support

ADIMO provides a **1-year exclusive warranty** for this product. For any technical assistance or support, our professional technical team offers lifetime support.
For further inquiries or support, please refer to the contact information provided with your purchase or visit the official ADIMO website.



Image: Overview of ADIMO's customer support and warranty.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09N364V92

More documents and user manuals: **https://manuals.plus/**