Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DURACELL 1356899

Duracell 1000 Lumen Lantern Instruction Manual

Model: 1356899

1. Introduction

The Duracell 1000 Lumen Lantern is a portable, high-brightness lighting solution designed for various applications, including camping, outdoor activities, and emergency preparedness. This manual provides essential information for the safe and effective use of your lantern.



Figure 1: Two Duracell 1000 Lumen Lanterns in their retail packaging, displaying product details.

2. Safety Information

Please read and understand all safety instructions before using the lantern. Failure to follow these instructions may result in injury or damage to the product.

- **Battery Safety:** Do not mix old and new batteries, or batteries of different types. Always insert batteries with the correct

polarity (+/-). Remove batteries if the lantern will not be used for an extended period.

- **Eye Protection:** Do not look directly into the LED light source when the lantern is on, as it can cause temporary vision impairment.
- **Water Exposure:** This lantern is **not water resistant**. Avoid exposing it to rain, splashes, or submersion in water.
- **Children:** Keep the lantern out of reach of children.
- **Heat:** Do not expose the lantern to extreme temperatures or direct sunlight for prolonged periods.

3. Package Contents

Verify that all items are present in the package:

- 2 x Duracell 1000 Lumen Lanterns
- *Note: 3 AA batteries per lantern are required and are not included.*

4. Setup

4.1 Battery Installation

1. Locate the battery compartment cover at the base of the lantern.
2. Twist or slide the cover to open it, following the indicator marks if present.
3. Insert **three (3) AA batteries** into the compartment, ensuring correct polarity (+/-) as indicated inside.
4. Replace the battery compartment cover, ensuring it is securely closed.

5. Operating Instructions

5.1 Powering On and Light Modes

The lantern features a single power button to control its functions:

- **First Press:** Turns the lantern on to its brightest setting (1000 lumens).
- **Second Press:** Switches to a lower brightness setting.
- **Third Press:** Activates the red flashing emergency light mode.
- **Fourth Press:** Turns the lantern off.
- *Note: If the lantern remains in one mode for more than 5 seconds, the next press will turn it off directly.*



Figure 2: A single Duracell 1000 Lumen Lantern positioned on a rock near water, illustrating its outdoor portability.

5.2 USB Charging Function (Power Bank)

The lantern is equipped with a USB port that allows it to function as a power bank, providing a charge to small electronic devices such as smartphones.

- Locate the USB output port on the lantern.
- Connect your device's charging cable to the USB port on the lantern.
- The lantern will begin charging your device. Ensure the lantern has sufficient battery power for this function.



Figure 3: A Duracell 1000 Lumen Lantern illuminating a beach scene with two individuals, demonstrating its utility in low-light outdoor settings.

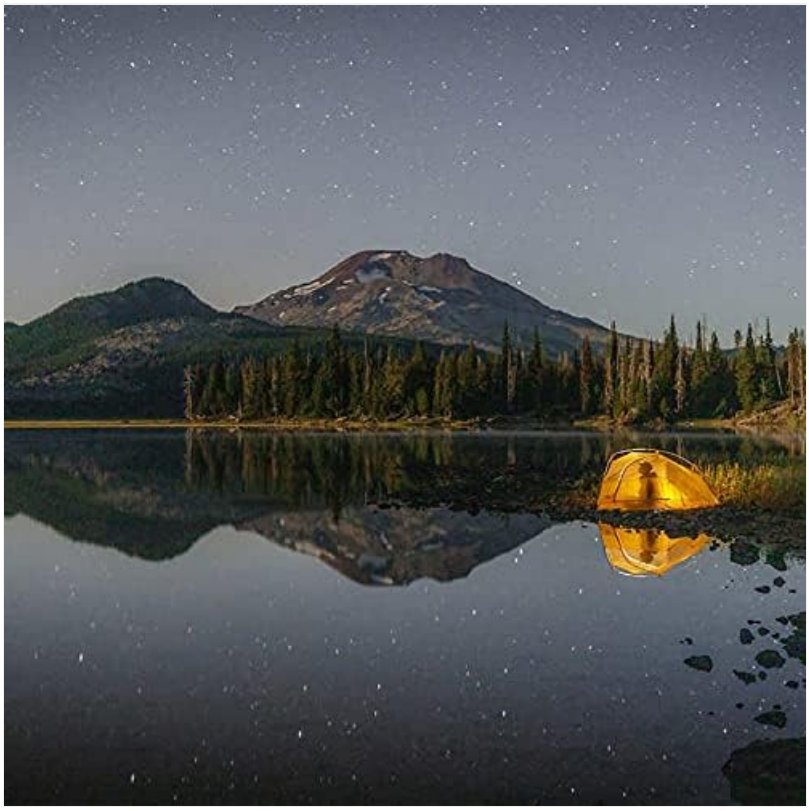

Figure 4: A camping tent brightly lit by a Duracell 1000 Lumen Lantern beside a lake under a starry sky, showcasing its effectiveness for overnight camping.

6. Maintenance

6.1 Cleaning

Wipe the exterior of the lantern with a soft, dry cloth. Do not use abrasive cleaners or immerse the lantern in water.

6.2 Storage

When storing the lantern for extended periods, remove the batteries to prevent leakage and corrosion. Store in a cool, dry place away from direct sunlight.

7. Troubleshooting

- **Lantern not turning on:**
  - Check if batteries are inserted correctly with the proper polarity.
  - Ensure batteries are fresh and not depleted. Replace if necessary.
- **Light is dim:**
  - Batteries may be low. Replace with fresh batteries.
- **Device not charging via USB:**
  - Ensure the lantern has sufficient battery power.
  - Check the USB cable for damage and ensure it is properly connected.

8. Specifications

Brand	DURACELL
Model Number	1356899
Brightness	1000 Lumen
Light Source Type	Light Emitting Diode (LED)
Power Source	Battery Powered
Battery Requirement	3 AA batteries (not included)
Mounting Type	Tabletop Mount
Water Resistance Level	Not Water Resistant
Item Weight	3.3 pounds (for the pack)
Package Dimensions	11.46 x 9.33 x 5.12 inches
UPC	850009207050

9. Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact Duracell customer service. Keep your purchase receipt as proof of purchase.

© 2023 DURACELL. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does the Duracell 1000 Lumen Lantern turn off after a minute or two?

The manual for the Duracell 1000 Lumen Lantern (Model: 1356899) does not explicitly mention a feature that would cause the lantern to automatically turn off after a minute or two. However, based on the...

Read full answer

Open the live page

https://manuals.plus/asin/B09RRKPBRD

More documents and user manuals: **https://manuals.plus/**