Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kejector FN-336

Kejector A4 Laminator FN-336 User Manual

Model: FN-336

1. Introduction

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your Kejector A4 Laminator FN-336. Please read this manual thoroughly before using the device and retain it for future reference.

Safety Information

- Always place the laminator on a stable, flat surface.
- Keep the laminator away from water and heat sources.
- Do not touch the heating elements during or immediately after use.
- Ensure proper ventilation around the machine.
- Unplug the device when not in use or before cleaning.
- Keep out of reach of children.

2. Package Contents

Upon unpacking, please verify that all items listed below are present:

- 1 x Kejector A4 Laminator FN-336
- 1 x Paper Cutter
- 1 x Corner Rounder
- 1 x Hole Punch
- 30 x Thermal Laminating Pouches (10 x A4, 10 x A5, 10 x A6)



Image illustrating the package contents of the Kejector A4 Laminator kit, including the laminator, a paper cutter, a corner rounder, a hole punch, and various sizes of thermal laminating pouches (A4, A5, A6).

3. Product Specifications

Feature	Specification
Model Number	FN-336
Dimensions (L x W x H)	38 x 14 x 8.8 cm
Weight	1.2 Kilograms
Max Laminating Width	230mm (A4)
Supported Sheet Sizes	A4, A5, A6, A7
Lamination Modes	Hot and Cold
Preheating Time	1-2 minutes
Laminating Speed	320mm/min
Laminating Time (A4)	Approx. 56 seconds
Noise Level	<55dB
Number of Rollers	2



Image summarizing key features of the Kejector 5-in-1 Laminator Kit, including a 2-minute warm-up time, 320mm/min laminating speed, quiet operation (<55dB), a 2-roller system, a fixed paper cutter, and A4 input capability.

4. Setup Instructions

1. **Unpack:** Carefully remove the laminator and all accessories from the packaging.
2. **Placement:** Place the laminator on a flat, stable, and heat-resistant surface. Ensure there is enough space behind the machine for laminated documents to exit freely.
3. **Power Connection:** Plug the power cord into a suitable electrical outlet.
4. **Power On:** Turn on the laminator using the power switch.
5. **Select Mode:** Choose either 'HOT' or 'COLD' lamination mode using the switch on the side of the machine.
6. **Preheat:** Allow the machine to preheat. The indicator light will turn green (or similar) when the laminator is ready for use (approximately 1-2 minutes for hot lamination).



Image of the Kejector A4 Laminator FN-336, black, with a document being fed into the input slot. Various laminating pouches are visible next to the machine, indicating readiness for use.

5. Operating Instructions

5.1 Hot Lamination

1. Ensure the laminator is set to 'HOT' mode and the ready indicator light is green.
2. Place your document inside a thermal laminating pouch, ensuring it is centered and there is an even border around the document.
3. Insert the sealed edge of the laminating pouch into the laminator's input slot. The machine will automatically feed the pouch through.
4. Wait for the laminated document to exit completely from the rear of the machine.
5. Allow the laminated document to cool on a flat surface before handling to ensure a firm seal.

5.2 Cold Lamination

Cold lamination is suitable for heat-sensitive documents or materials. Note that cold laminating pouches are not included with this kit and must be purchased separately.

1. Ensure the laminator is set to 'COLD' mode. No preheating is required for this mode.

2. Place your document inside a self-adhesive cold laminating pouch.
3. Insert the sealed edge of the cold laminating pouch into the laminator's input slot.
4. Wait for the laminated document to exit completely.

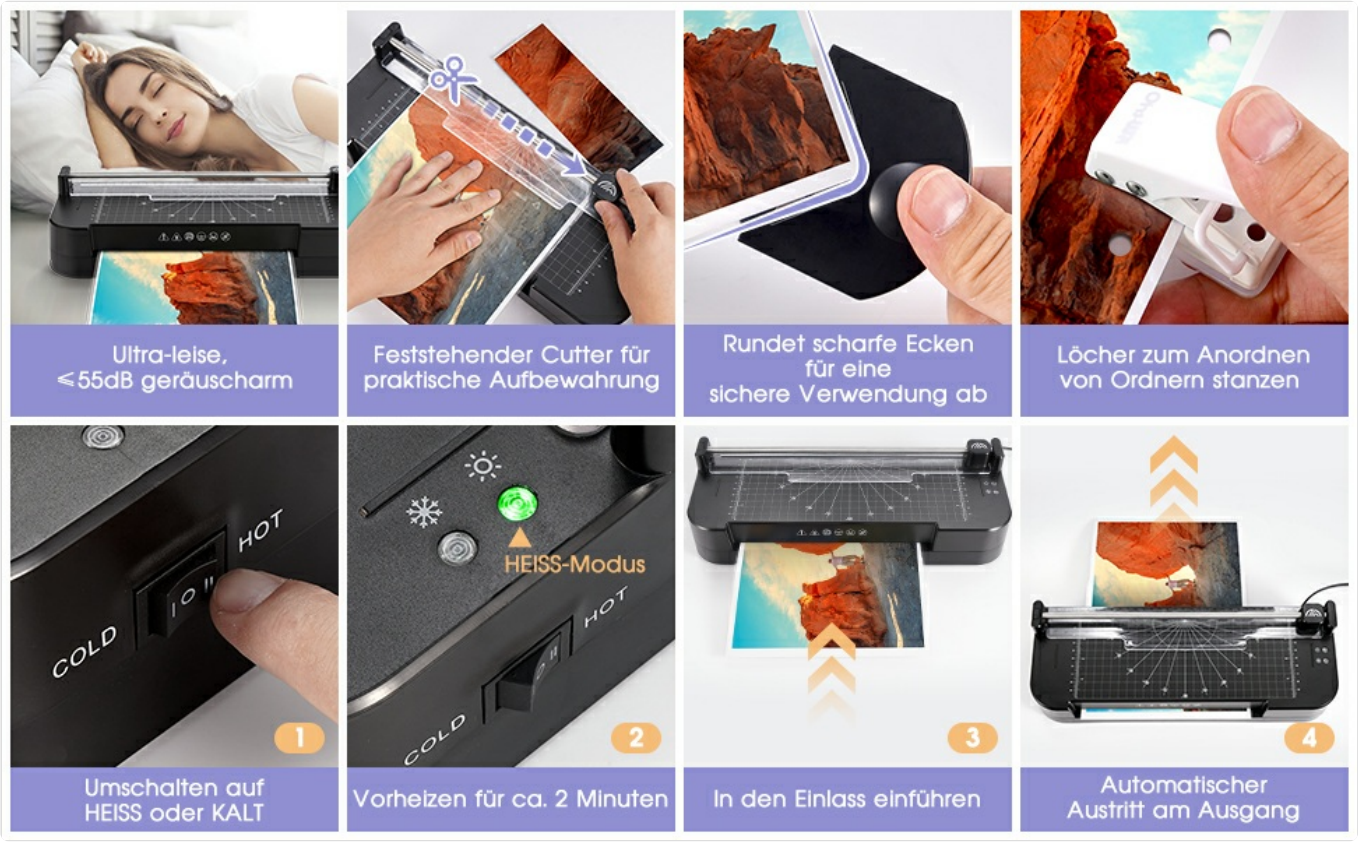

Image detailing the operational steps of the laminator: 1. Switching to HOT or COLD mode. 2. Preheating for approximately 2 minutes. 3. Inserting the document into the inlet. 4. Automatic exit of the laminated document. The image also shows the included paper cutter, corner rounder, and hole punch accessories.

5.3 Using the ABS Release Lever

In case of a paper jam or misfeed, the ABS (Anti-Blocking System) release lever can be used to safely remove the document.

1. Immediately switch off the laminator.
2. Press and hold the ABS release lever located on the side/rear of the machine.
3. Gently pull the jammed pouch out of the input slot. Do not force it.
4. Release the ABS lever once the pouch is removed.



Image demonstrating the use of the ABS release lever. It shows how to switch off the machine, long-press the ABS button, and pull out a jammed document, preventing damage.

5.4 Supported Document Sizes

The Kejector A4 Laminator supports various document sizes up to 230mm in width, including A4, A5, A6, and A7.



Image showing the Kejector A4 Laminator processing different paper sizes: A4 (210x297mm), A5 (148x210mm), and A6 (105x148mm), highlighting its versatility for various document dimensions up to 230mm width.

5.5 Benefits of Lamination

Laminating documents provides protection against various elements, preserving their quality and longevity.

- **Anti-Scratch:** Protects against surface damage.
- **Waterproof:** Shields documents from moisture and spills.
- **Dirt-Repellent:** Prevents smudges and stains.
- **Imperishable:** Extends the lifespan of important papers and photos.
- **Wrinkle-Free:** Keeps documents smooth and flat.



Image comparing laminated and unlaminated documents, illustrating the benefits of lamination such as anti-scratch, waterproof, dirt-repellent, imperishable, and wrinkle-free protection for documents and photos.

6. Maintenance

- **Cleaning:** Ensure the laminator is unplugged and completely cool before cleaning. Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Roller Cleaning:** Occasionally, run a cleaning sheet (a piece of paper folded in half) through the laminator to remove any adhesive residue from the rollers.
- **Storage:** Store the laminator in a dry, dust-free environment when not in use.

7. Troubleshooting

Problem	Possible Cause	Solution
Laminator not turning on	No power, faulty power cord	Check power connection, try a different outlet.
Document jam	Misaligned pouch, incorrect pouch size, foreign object	Use the ABS release lever to remove the pouch (refer to Section 5.3). Ensure pouches are correctly aligned.
Poor lamination quality (bubbles, wrinkles)	Incorrect temperature (for hot lamination), old pouches, uneven insertion	Ensure laminator is fully preheated. Use fresh, good quality pouches. Insert pouch straight and evenly.
Laminator is slow	Not fully preheated	Allow sufficient preheating time until the ready indicator light is on.

8. Warranty Information

Kejector products are designed for reliability and performance. Specific warranty terms and conditions are typically provided with your purchase documentation. Please refer to the warranty card or contact your retailer for detailed information regarding your product's warranty period and coverage.

9. Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact Kejector customer support. Contact details can usually be found on the product packaging, warranty card, or the official Kejector website.

© 2025 Kejector. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09V16YHX2

More documents and user manuals: **https://manuals.plus/**