Manuals+

Q & A | Deep Search | Upload

AmazonDevices Kindle Paperwhite (2018 Release)

Amazon Kindle Paperwhite (2018 Release) User Manual

Model: Kindle Paperwhite (2018 Release)

Introduction

This manual provides comprehensive instructions for the Amazon Kindle Paperwhite (2018 Release). It covers device setup, operational procedures, maintenance guidelines, and troubleshooting tips to ensure optimal use of your e-reader. The Kindle Paperwhite (2018 Release) features a waterproof design and enhanced storage for an improved reading experience.

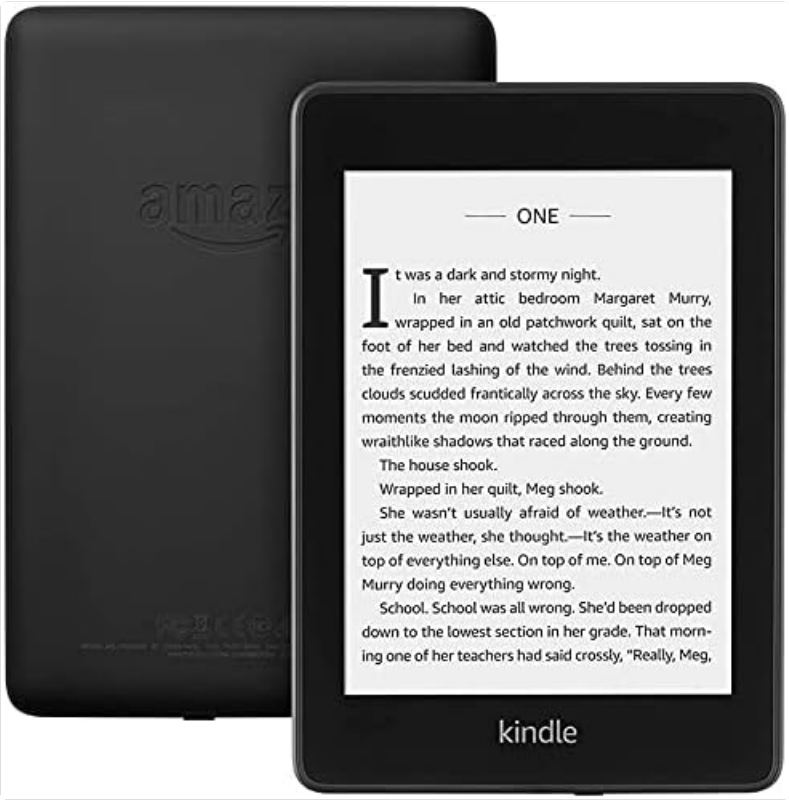

Image: Front and back view of the Kindle Paperwhite (2018 Release) e-reader, showcasing its sleek design and the Amazon logo on the back.

Setup

1. Charging Your Device

Before initial use, fully charge your Kindle Paperwhite. Connect the included USB cable to the charging port on your device and plug the other end into a USB wall adapter or a computer's USB port. The charging indicator light will illuminate.

2. Powering On/Off

To power on, press and hold the power button located on the bottom edge of the device for a few seconds until the screen activates. To power off, press and hold the power button until a power dialog appears, then select 'Power Off'. A short press will put the device to sleep.

3. Initial Setup

1. **Language Selection:** Follow the on-screen prompts to select your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network from the list and enter the password. A stable internet connection is required for downloading content and software updates.
3. **Amazon Account Registration:** Register your Kindle to an Amazon account. You can use an existing account or create a new one. This links your device to your content library.

Operating Your Kindle Paperwhite

1. Navigating the Interface

- **Home Screen:** Displays your library, recommended books, and quick access to the Kindle Store.
- **Touchscreen Gestures:** Tap the right side of the screen to turn the page forward, the left side to go back. Tap the top of the screen to access reading options and settings.
- **Search:** Use the search bar to find books in your library or in the Kindle Store.

2. Downloading and Purchasing Content

Access the Kindle Store directly from your device to browse and purchase e-books. Purchased content will automatically download to your library when connected to Wi-Fi. You can also send documents to your Kindle via email.

3. Reading Features

- **Adjusting Font Size and Type:** While reading, tap the top of the screen, then select the 'Aa' icon to change font size, font type, line spacing, and margins.
- **Adjusting Backlight:** The Kindle Paperwhite features an adjustable front light. Tap the top of the screen and use the brightness slider to set your preferred illumination level.
- **Dictionary and Wikipedia:** Tap and hold a word to view its definition or search Wikipedia.

4. Waterproof Design

The Kindle Paperwhite (2018 Release) is designed to withstand accidental immersion in water. It is rated IPX8, meaning it can be submerged in up to two meters of fresh water for up to 60 minutes. If your device gets wet, dry it thoroughly before charging.

Image: A hand holding a Kindle Paperwhite (2018 Release) partially submerged in water, demonstrating its waterproof capability. The screen displays text clearly.

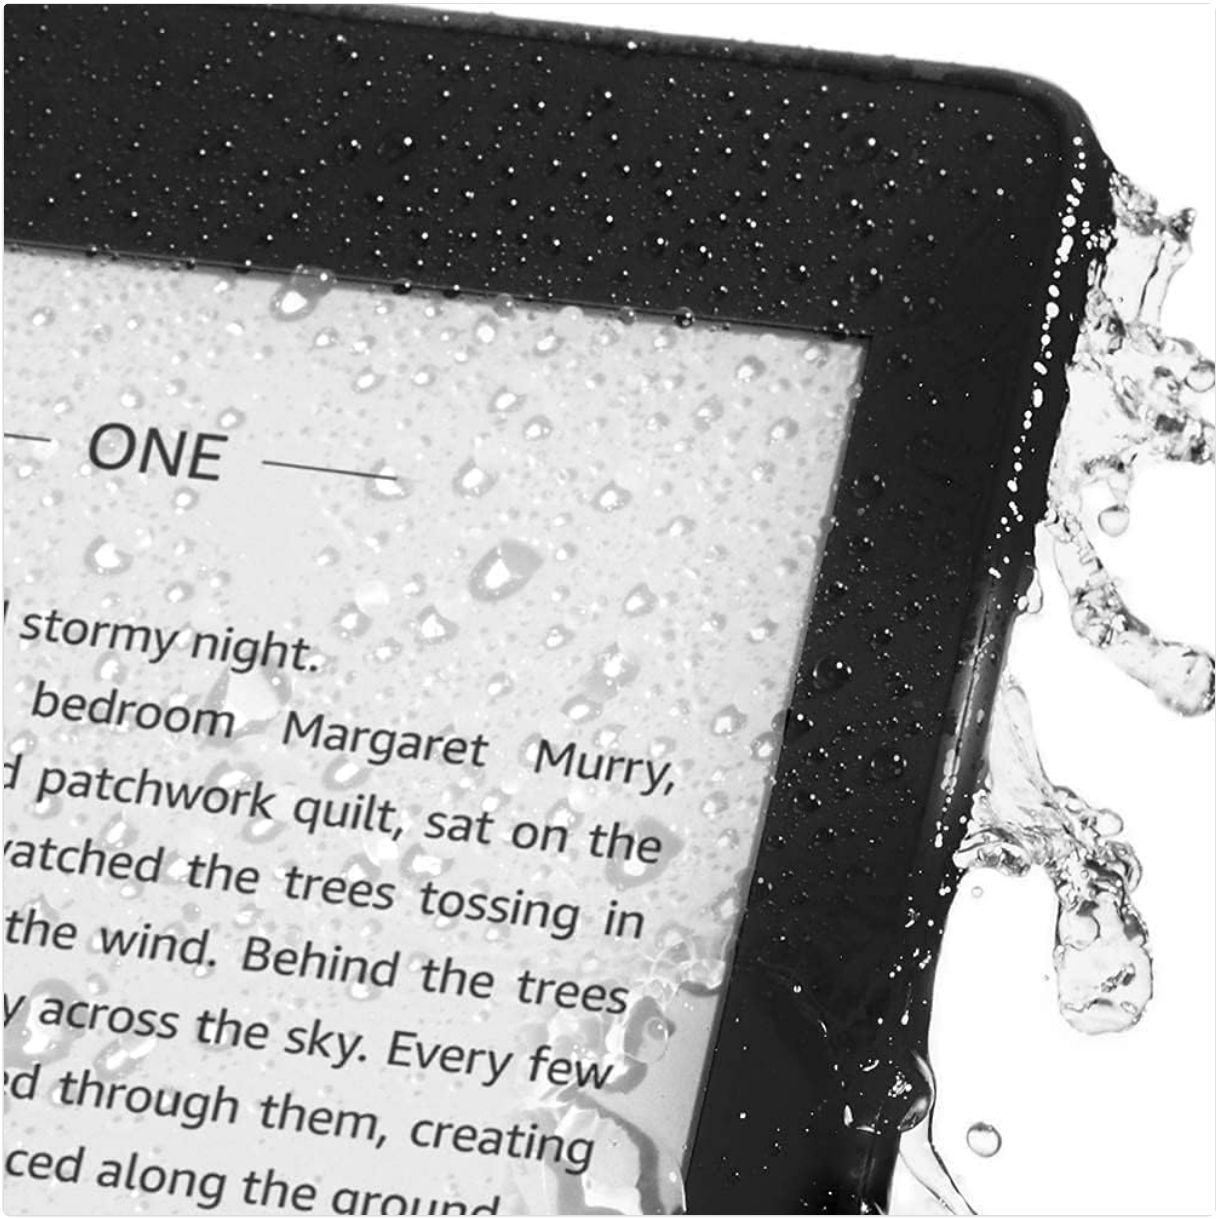

Image: A close-up view of the Kindle Paperwhite (2018 Release) screen covered in water droplets, emphasizing its waterproof design.

5. Audible Integration

Your Kindle Paperwhite (2018 Release) supports Audible audiobooks. Connect Bluetooth headphones or speakers to your device to listen to audiobooks. You can switch seamlessly between reading and listening.

Image: A person listening to an audiobook on their Kindle Paperwhite (2018 Release) with headphones while traveling, demonstrating the Audible feature.

Maintenance

1. Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your Kindle. If necessary, slightly dampen the cloth with water. Avoid using abrasive cleaners or solvents.

2. Battery Care

- For optimal battery life, avoid exposing your device to extreme temperatures.
- Charge your device regularly, but it is not necessary to fully discharge it before recharging.
- Using Wi-Fi and the front light at higher settings will consume more battery power.

3. Software Updates

Your Kindle Paperwhite will automatically download and install software updates when connected to Wi-Fi. Ensure your device is charged during updates. You can manually check for updates in the settings menu.

Troubleshooting

1. Device Not Responding

If your Kindle becomes unresponsive, press and hold the power button for 40 seconds until the device restarts. If it does not restart, ensure it is charged and try again.

2. Wi-Fi Connection Issues

- Ensure your Wi-Fi router is on and working correctly.
- Verify you have entered the correct Wi-Fi password.
- Try restarting your Kindle and your Wi-Fi router.

3. Battery Draining Quickly

- Reduce the front light brightness.
- Turn off Wi-Fi when not needed (use Airplane Mode).
- Ensure no large downloads are pending.

4. Screen Issues

If you notice persistent ghosting or display anomalies, try a full refresh by navigating to Settings > Device Options > Display > Page Refresh (if available) or perform a device restart.

Specifications

Model Name	Kindle Paperwhite (2018 Release)
Brand	AmazonDevices
Screen Size	6 Inches
Screen Resolution	1024 x 768
Display Technology	Electronic Ink
Memory Storage Capacity	8 GB
Connectivity Technology	Bluetooth, Wi-Fi
Special Features	Waterproof (IPX8), Audible Support
Supported File Formats	Txt, Epub, Mobi, Prc, AZW3, PDF, HTML, DOC, DOCX, JPEG, GIF, PNG, BMP (converted), AAX (Audible audio format)
Color	Black
Item Weight	13.5 ounces

Warranty and Support

1. Product Warranty

Your Kindle Paperwhite (2018 Release) is covered by a limited warranty provided by Amazon. Details of the warranty, including duration and coverage, can typically be found in the packaging or on the official Amazon support website. Please retain your proof of purchase.

2. Customer Support

For further assistance, technical support, or warranty claims, please visit the official Amazon Device Support page or contact Amazon Customer Service directly. You can usually find contact information and support resources on the Amazon website under the 'Help' or 'Customer Service' sections.