KLARSTEIN Arianna 60

Klarstein Arianna 60cm Inclined Cooker Hood User Manual

Model: Arianna 60 | Brand: KLARSTEIN

1. Safety Instructions

Please read these instructions carefully before installation and use. Keep this manual for future reference.

- Ensure the electrical installation is compliant with local regulations.
- Do not operate the appliance if it is damaged.
- Always disconnect the appliance from the power supply before cleaning or maintenance.
- Adequate ventilation is required when the range hood is used at the same time as appliances burning gas or other fuels.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- Regular cleaning of the filters is essential to prevent fire hazards.
- Do not flambé under the range hood.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. Product Overview

The Klarstein Arianna 60cm Inclined Cooker Hood is designed to efficiently remove grease, smoke, and odors from your kitchen, ensuring a fresh cooking environment. It features a modern design with advanced functionalities.

Key Features:

- Powerful airflow capacity of 563 m^3/h.
- Energy efficiency class A.
- Washable aluminum grease filters.

- RGB LED lighting for ambient illumination.
- Quiet operation with 3 speed settings.
- Touch controls for easy operation.
- Can be used in exhaust or recirculation mode (carbon filters required for recirculation, sold separately).

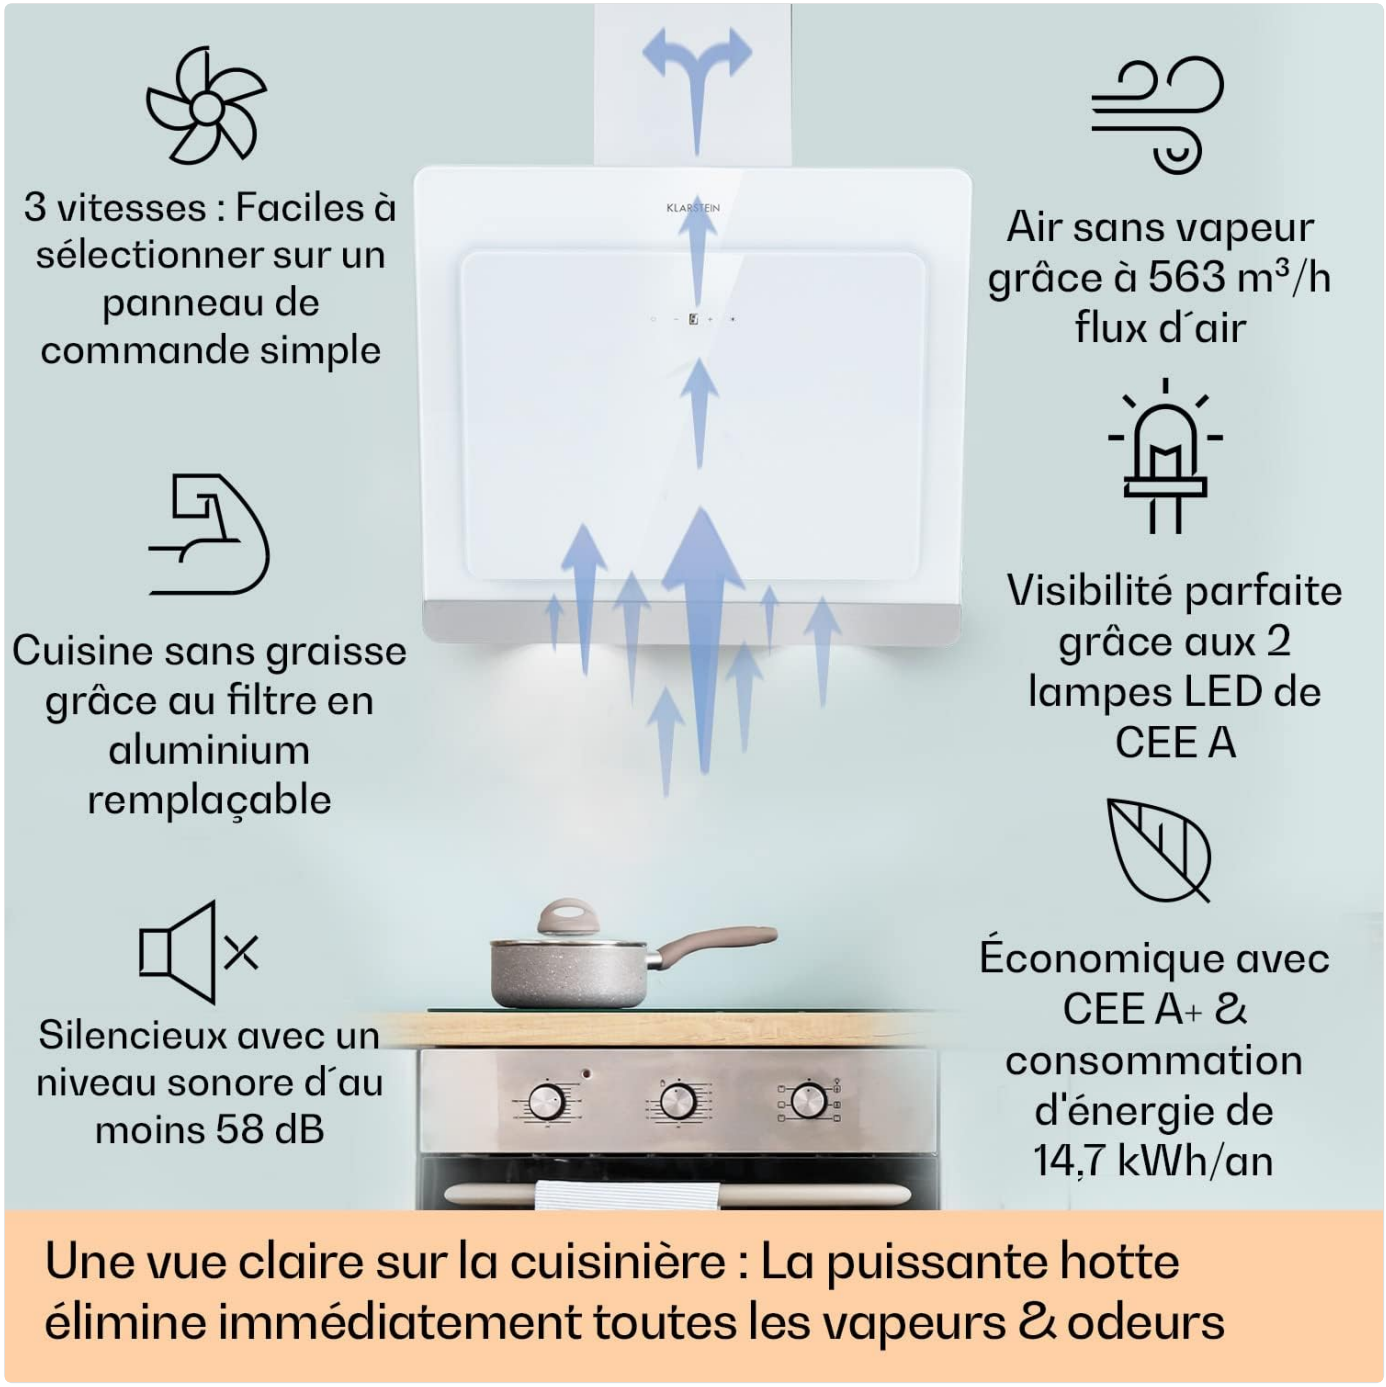

Image 1: Overview of Klarstein Arianna 60cm Cooker Hood features, highlighting 3 speeds, powerful airflow, grease filtration, silent operation, LED lights, and energy efficiency.

3. What's in the Box

Upon unpacking, ensure all components are present and undamaged:

- 1 x Cooker Hood
- 2 x Chimney Flaps

- 1 x Exhaust Pipe
- Mounting Material (screws, wall plugs, brackets)
- User Manual in Multiple Languages

Image 2: Illustration of the components included in the delivery package for the Klarstein Arianna 60cm Cooker Hood.

4. Installation

The Klarstein Arianna 60cm cooker hood is designed for wall mounting. Follow these general steps for installation. Refer to the detailed instructions in the included user manual for precise measurements and safety guidelines.

4.1. Preparation

- Ensure the wall is strong enough to support the weight of the cooker hood.
- Mark the desired installation height on the wall, ensuring it is appropriate for your cooking surface.
- Use a spirit level to ensure all markings are perfectly horizontal.

4.2. Mounting the Hood

1. Attach the hanging plate to the wall using the provided screws and wall plugs. Ensure it is securely fastened.
2. Carefully lift the cooker hood and hang it onto the installed hanging plate.
3. Open the front glass panel to access the internal mounting points.
4. Secure the hood to the wall from the inside using additional screws through the designated holes.

4.3. Chimney and Duct Installation

1. Attach the support bracket for the chimney to the wall above the hood.

2. Connect the exhaust pipe to the air outlet on the top of the hood.
3. Install the chimney assembly, ensuring it covers the exhaust pipe and aligns with the support bracket.
4. Secure the chimney to the support bracket and the top cover plate with screws.

Image 3: Detailed dimensions of the Klarstein Arianna 60cm Cooker Hood and illustration of the multi-layer aluminum filter and optional active carbon filters for recirculation mode.

Installation Video Guide (Similar Product)

Your browser does not support the video tag.

Video 1: This video demonstrates the installation process for a similar inclined cooker hood, including mounting to the wall and chimney assembly. While not the exact model, the steps are generally applicable and provided by a seller.

5. Operating Instructions

The cooker hood features intuitive touch controls for easy operation.

5.1. Control Panel

The touch control panel is located on the front glass. It includes buttons for power, fan speed adjustment, and lighting.

Image 4: Close-up of the touch control panel on the Klarstein Arianna 60cm Cooker Hood, showing power, speed, and light buttons.

5.2. Fan Speed Adjustment

- Press the power button to turn the hood on/off.
- Use the '+' and '-' buttons to cycle through the 3 available fan speeds.
- The hood operates quietly even at higher speeds, with a maximum noise level of 63 dB.

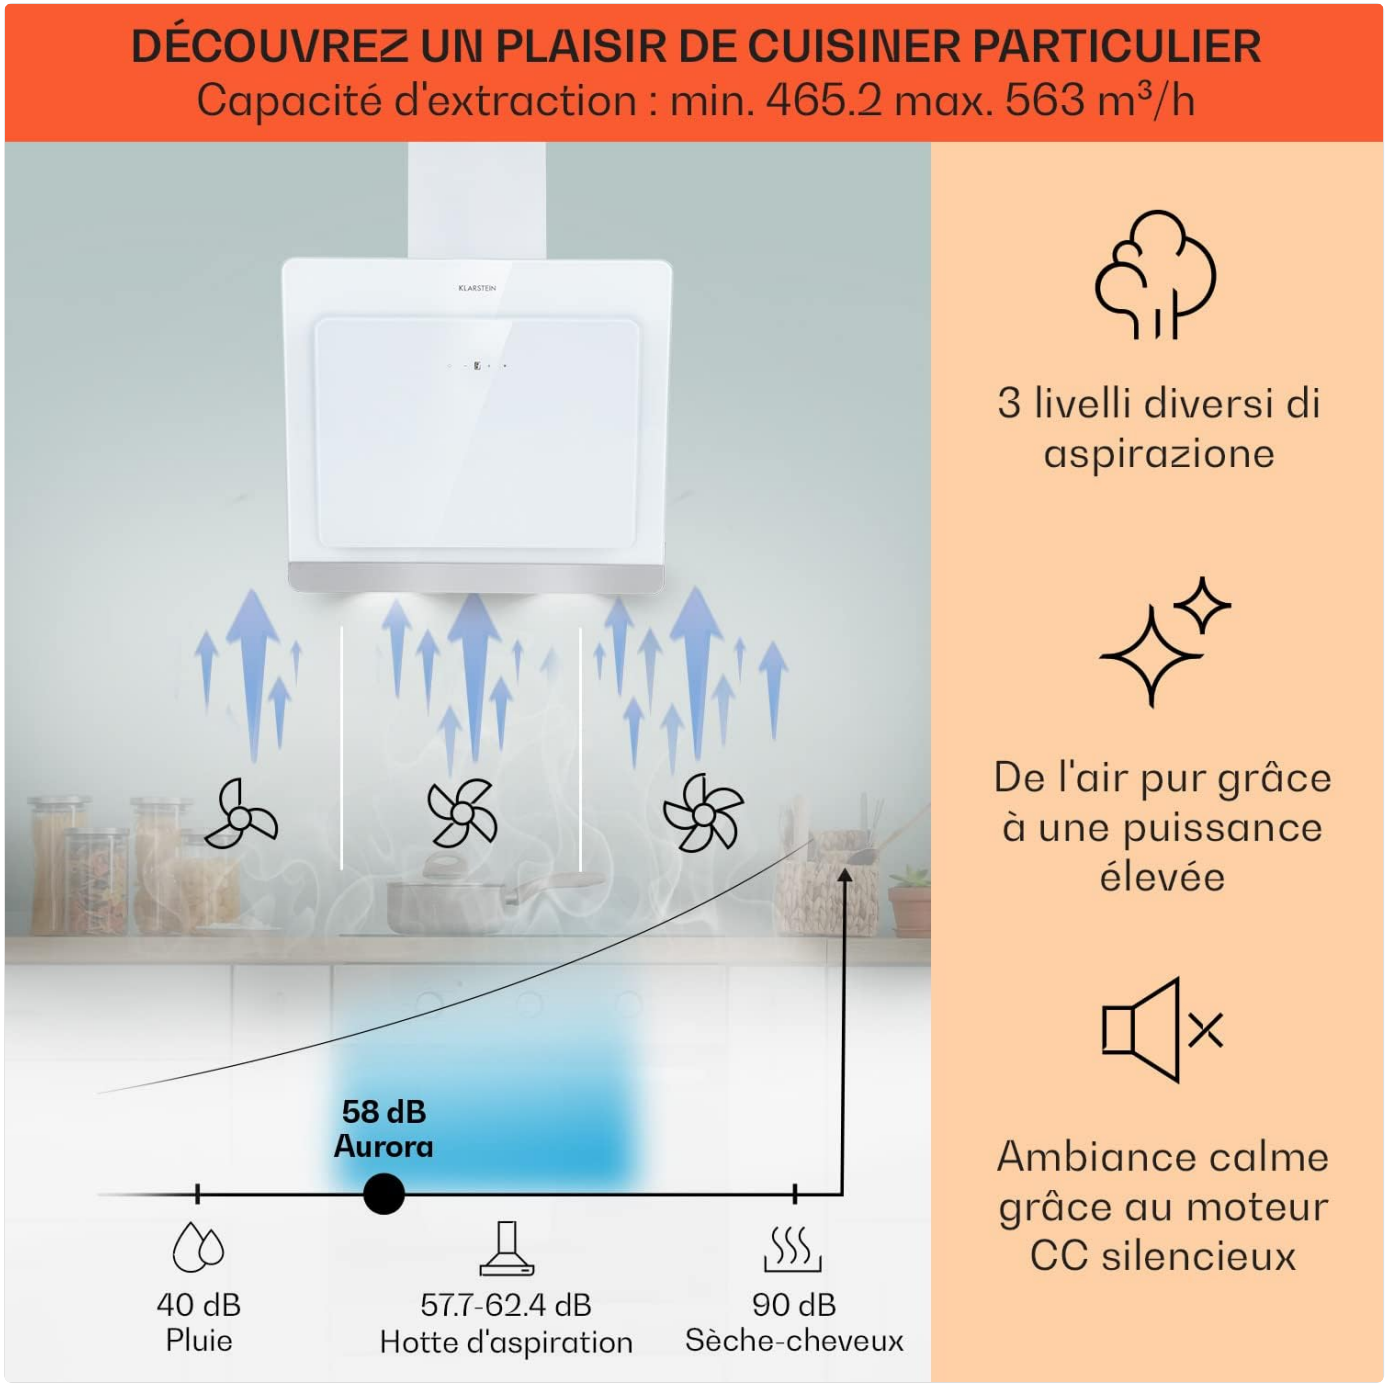

Image 5: Illustration of airflow and noise levels for the Klarstein Arianna 60cm Cooker Hood, demonstrating efficient extraction and quiet operation.

5.3. LED Lighting

- Press the light button to turn the integrated RGB LED lights on/off.
- The LED lights provide efficient illumination for your cooking area and can add ambient color to your kitchen.

Image 6: View of the Klarstein Arianna 60cm Cooker Hood's LED lighting and access to the aluminum filter.

Operation Video Guide (Similar Product)

Your browser does not support the video tag.

Video 2: This video demonstrates the unboxing, filter installation, and touch control operation of a similar inclined cooker hood, including fan speed and lighting functions, provided by a seller.

6. Maintenance

Regular maintenance ensures optimal performance and longevity of your cooker hood.

6.1. Cleaning Aluminum Grease Filters

- The aluminum grease filters should be cleaned regularly (approximately every 2-4 weeks, depending on usage).

- To remove, open the front glass panel and unlatch the filters.
- The filters are dishwasher safe or can be washed by hand with hot water and a mild detergent.
- Ensure filters are completely dry before re-installing.

Image 7: Demonstration of removing and cleaning the aluminum grease filters, highlighting their dishwasher-safe feature.

6.2. Replacing Active Carbon Filters (Recirculation Mode)

If your hood is operating in recirculation mode, active carbon filters are used to remove odors. These filters are not washable and must be replaced periodically (typically every 3-6 months, depending on usage).

- Remove the aluminum grease filters to access the carbon filters.
- Twist the old carbon filters counter-clockwise to remove them.
- Install new carbon filters by twisting them clockwise until secure.
- Re-install the aluminum grease filters.

Image 8: Comparison of exhaust mode (air expelled outside) and recirculation mode (air filtered through carbon filters and returned to the kitchen) for the Klarstein Arianna 60cm Cooker Hood.

7. Troubleshooting

If you encounter issues with your cooker hood, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hood not turning on	No power supply	Check power plug, circuit breaker, and electrical connections.
Low suction power	Clogged grease filters	Clean or replace grease filters.

Problem	Possible Cause	Solution
Low suction power	Clogged carbon filters (recirculation mode)	Replace active carbon filters.
Excessive noise	Loose components or improper installation	Check all screws and connections. Ensure the exhaust duct is properly installed and not obstructed.
Lights not working	Faulty LED module	Contact customer support for assistance.

8. Specifications

Feature	Detail
Brand	KLARSTEIN
Model	Arianna 60
Dimensions (D x W x H)	32P x 60l x 51,5H cm
Color	White
Airflow Capacity	563 m³/h
Energy Efficiency Class	A
Material	Aluminium
Noise Level	63 dB
Mounting Type	Wall Mount
Controls Type	Touch
Number of Speeds	3
Light Source Type	LED (RGB)
Wattage	120 Watts
Filter Type	Aluminium (grease), Active Carbon (optional for recirculation)
Ventilation Type	Exhaust (convertible to Recirculation)
Weight	16.5 Kilograms

9. Warranty and Support

For warranty information, technical support, or spare parts, please refer to the warranty card included with your product or visit the official KLARSTEIN website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact KLARSTEIN customer service directly.

© 2024 KLARSTEIN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question