Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun BG3340

Braun BG3340 Cordless Hair Clipper User Manual

Model: BG3340

Introduction

Thank you for choosing the Braun BG3340 Cordless Hair Clipper. This manual provides comprehensive instructions for the safe and effective use, maintenance, and care of your device. Please read all instructions carefully before first use and keep this manual for future reference.

Safety Information

Your safety is paramount. Please adhere to the following guidelines:

- Use the device strictly according to the instructions provided in this manual to prevent injuries.
- Regularly clean the device to prevent bacterial growth and maintain hygiene.
- Keep the device away from water when charging.
- Do not use the device if it is damaged or malfunctioning.
- Keep out of reach of children.

What's in the Box

Upon unboxing, ensure all components are present:

- Braun BG3340 Cordless Hair Clipper
- Sensitive Body Comb
- Body Comb 1 (1mm)
- Body Comb 3 (3mm)
- Charging Cable/Adapter
- User Manual



Image: The Braun BG3340 device, its packaging, and the three included comb attachments.

Product Overview

The Braun BG3340 is designed for gentle and effective body grooming. It features SkinShield technology for skin protection and comes with various comb attachments for different hair lengths.

Key Components

- **Main Unit:** Ergonomic design with power button and charging indicator.
- **SkinShield Blade:** Designed to minimize nicks and cuts, providing ultimate comfort.
- **Sensitive Comb:** For delicate areas, ensuring a smooth and safe trim.
- **Body Combs (1mm, 3mm):** For precise trimming to desired lengths.



Image: A detailed view of the Braun BG3340 device and its three distinct comb attachments.



Image: A close-up of the SkinShield blade, highlighting its design for skin protection.



Image: A detailed view of the Sensitive comb attachment, designed for gentle grooming.

Setup

Before first use, ensure your device is ready:

1. **Charging:** Connect the charging cable to the device and plug it into a power outlet. The charging indicator light will show the charging status. A full charge provides up to 80 minutes of cordless trimming.
2. **Attaching Combs:** Select the desired comb attachment (Sensitive, 1mm, or 3mm) and snap it onto the trimmer head until it clicks into place. Ensure it is securely fastened.

Operating Instructions

Follow these steps for effective grooming:

1. **Preparation:** Ensure your skin is clean and dry before trimming.
2. **Power On:** Press the power button to turn on the device.

3. **Trimming:** Gently glide the trimmer against the direction of hair growth. For sensitive areas, use the Sensitive comb. For specific lengths, use the 1mm or 3mm comb.
4. **Body Areas:** The device is suitable for various body areas, including underarms, chest, and other sensitive areas.
5. **Power Off:** Press the power button again to turn off the device after use.

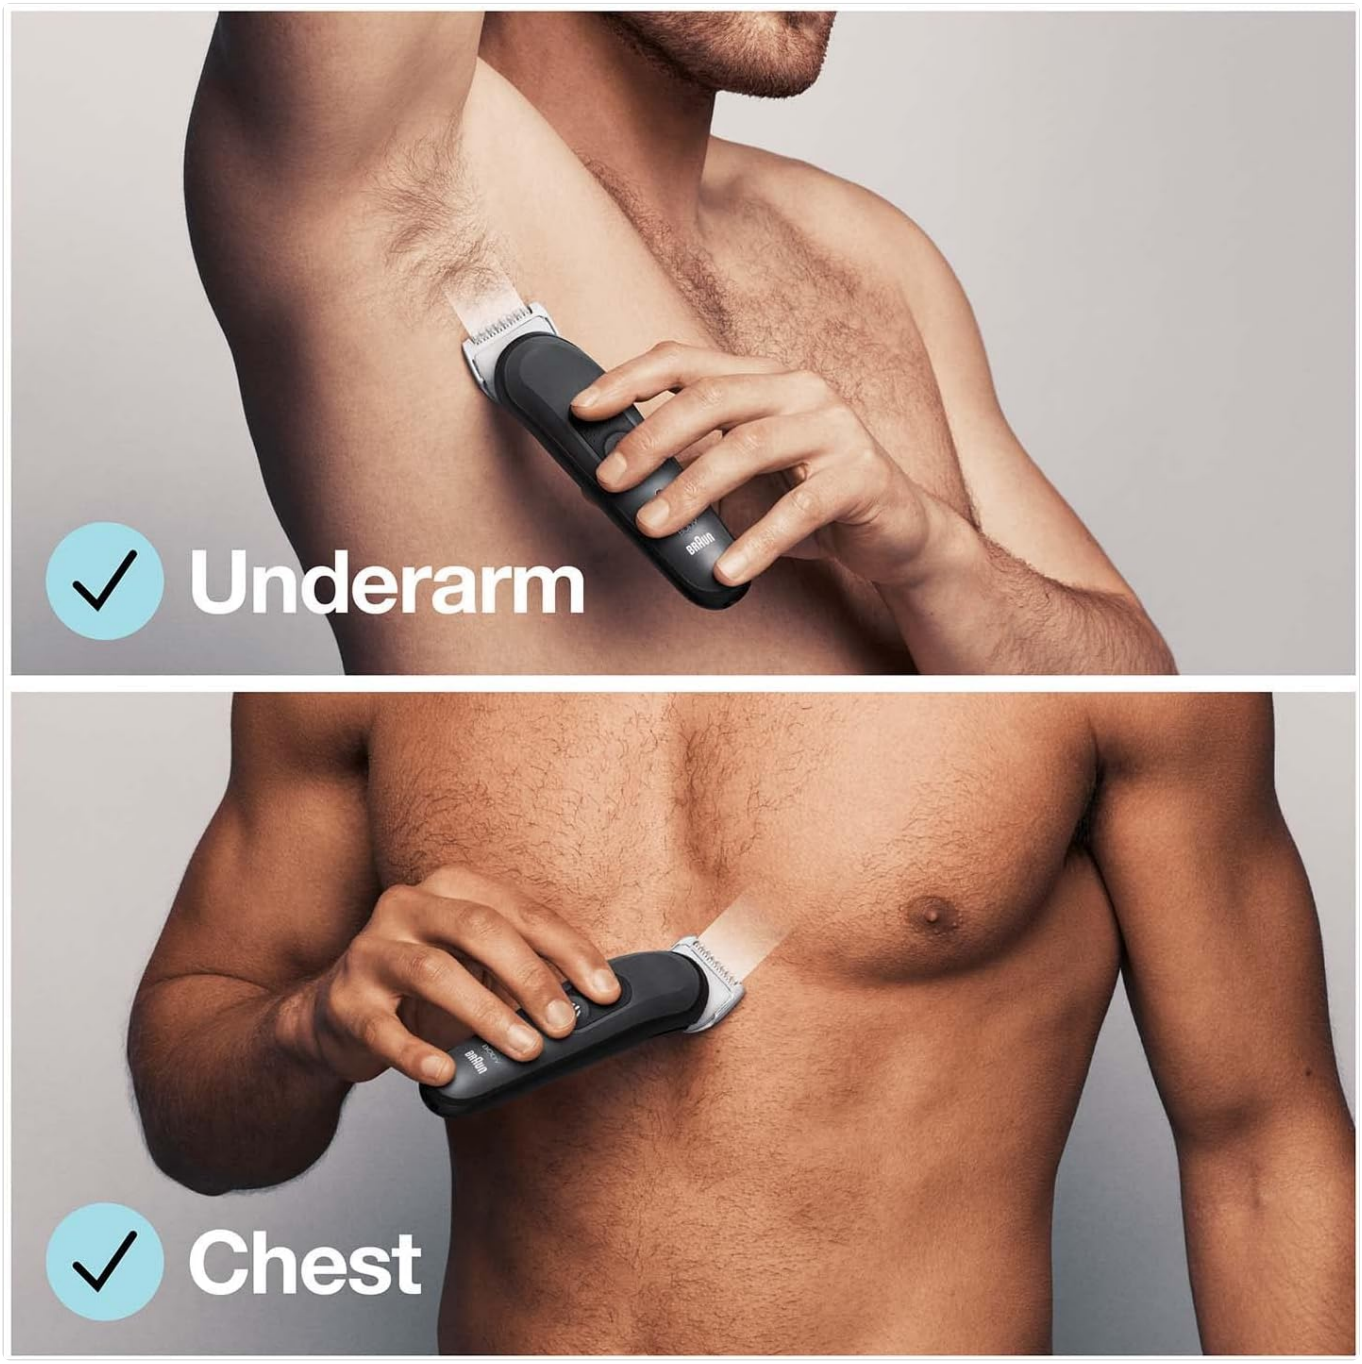


Image: Demonstrates the use of the Braun BG3340 for trimming hair in the underarm and chest areas.

Maintenance

Proper maintenance ensures longevity and hygiene of your device:

- **Cleaning:** The Braun BG3340 is washable. After each use, remove the comb attachment and rinse the trimmer head and combs under running water. Ensure no hair remains.
- **Drying:** Allow the device and attachments to air dry completely before storing or reattaching.
- **Storage:** Store the device in a cool, dry place, away from direct sunlight and moisture.

Troubleshooting

If you encounter issues, try these common solutions:

- **Device not turning on:** Ensure the device is fully charged. If the battery is low, connect it to the charger.
- **Poor trimming performance:** Clean the blade and comb attachments thoroughly. Ensure no hair is stuck. The blade might need replacement if it's dull (contact support).
- **Irritation after use:** Ensure you are using the correct comb for the area and gliding the trimmer gently. Clean the device regularly to prevent bacterial growth.

Specifications

Model Name	BG3340
Manufacturer	Braun
Product Dimensions	13.7 x 5.7 x 28.2 cm; 241.6 g
Power Source	Battery Powered
Special Features	Waterproof, Cordless, SkinShield Technology
Blade Material	Stainless Steel
Recommended Uses	Legs, Full Body
Battery Life	Up to 80 minutes (cordless)



Image: Overview of key features including washability, 80-minute cordless operation, and 2-year warranty.

Warranty and Support

The Braun BG3340 Cordless Hair Clipper comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For product support, troubleshooting beyond this manual, or warranty inquiries, please refer to the contact information provided on the Braun official website or your local Braun service center.

© 2025 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the

question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09W2D3R8B

More documents and user manuals: **https://manuals.plus/**