Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LeadsaiL K933

LeadsaiL K933 Wireless Ergonomic Keyboard and Mouse Combo User Manual

Model: K933

1. Introduction

Thank you for choosing the LeadsaiL K933 Wireless Ergonomic Keyboard and Mouse Combo. This product is designed to provide a comfortable and efficient input experience for various operating systems. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new device.

Key Features:

- Full-size keyboard with QWERTZ German layout and numeric keypad.
- 12 multimedia function keys and 5 hotkeys for quick access.
- Silent click mouse for a quiet working environment.
- 2.4 GHz wireless connection with a 10-meter range.
- Energy-saving features with automatic sleep mode.
- Built-in phone and tablet holder on the keyboard.

2. Package Contents

- LeadsaiL K933 Wireless Keyboard
- LeadsaiL Wireless Mouse
- USB 2-in-1 Receiver (stored inside the mouse)
- User Manual

Note: AAA batteries (2 for keyboard) and AA battery (1 for mouse) are not included and must be purchased separately.

3. Setup Instructions

3.1 Installing Batteries

1. **For the Mouse:** Open the battery compartment cover on the underside of the mouse. Insert one (1) AA battery, ensuring correct polarity (+/-). Close the cover.
2. **For the Keyboard:** Open the battery compartment cover on the underside of the keyboard. Insert two (2) AAA batteries, ensuring correct polarity (+/-). Close the cover.



Image: Illustration showing the battery compartments for the keyboard (2 AAA) and mouse (1 AA), with the USB receiver stored inside the mouse.

3.2 Connecting the USB Receiver

1. Locate the USB 2-in-1 receiver, which is stored in the battery compartment of the mouse. Gently pull it out.
2. Plug the USB receiver into an available USB port on your computer (PC, laptop, Mac, etc.).
3. Turn on the keyboard and mouse using their respective ON/OFF switches. The switches are located on the underside of both devices.
4. Your computer should automatically detect and install the necessary drivers. No additional software is required.



Image: A close-up view of the USB receiver being plugged into a laptop's USB port, with the pink LeadsaiL keyboard and mouse visible.

3.3 Compatibility

The LeadsaiL K933 combo is compatible with a wide range of operating systems and devices:

- **Operating Systems:** Windows XP/Vista/7/8/10, MacOS, Linux, Chrome OS.
- **Compatible Devices:** ASUS, Dell, HP, HUAWEI, Lenovo laptops and desktop PCs.



Image: A computer monitor displaying the LeadsaiL logo and icons representing Windows, MacOS, and Linux, indicating wide compatibility.

4. Operating Instructions

4.1 Keyboard Usage

The keyboard features a full-size QWERTZ German layout, including a numeric keypad for efficient data entry. It also integrates 12 function keys and 5 direct hotkeys for enhanced productivity.



Image: The LeadsaiL K933 keyboard and mouse, showing the keyboard's dimensions and the integrated slot designed to hold a smartphone or tablet.

4.2 Function Keys and Hotkeys

To use the function keys (F1-F12) and hotkeys, press and hold the**Fn** key located on the bottom left of the keyboard, then press the desired function key.

Keyboard Function Key Combinations

Combination	Function
Fn + F1	Media Player
Fn + F2	Volume Down
Fn + F3	Volume Up
Fn + F4	Mute
Fn + F5	Previous Track
Fn + F6	Next Track
Fn + F7	Play/Pause

Combination	Function
Fn + F8	Stop
Fn + F9	Home Page
Fn + F10	Email
Fn + F11	My Computer
Fn + F12	Favorites
Fn + Calculator Icon	Calculator
Fn + Search Icon	Search
Fn + Refresh Icon	Refresh
Fn + Back Arrow	Back
Fn + Screen Lock Icon	Screen Lock

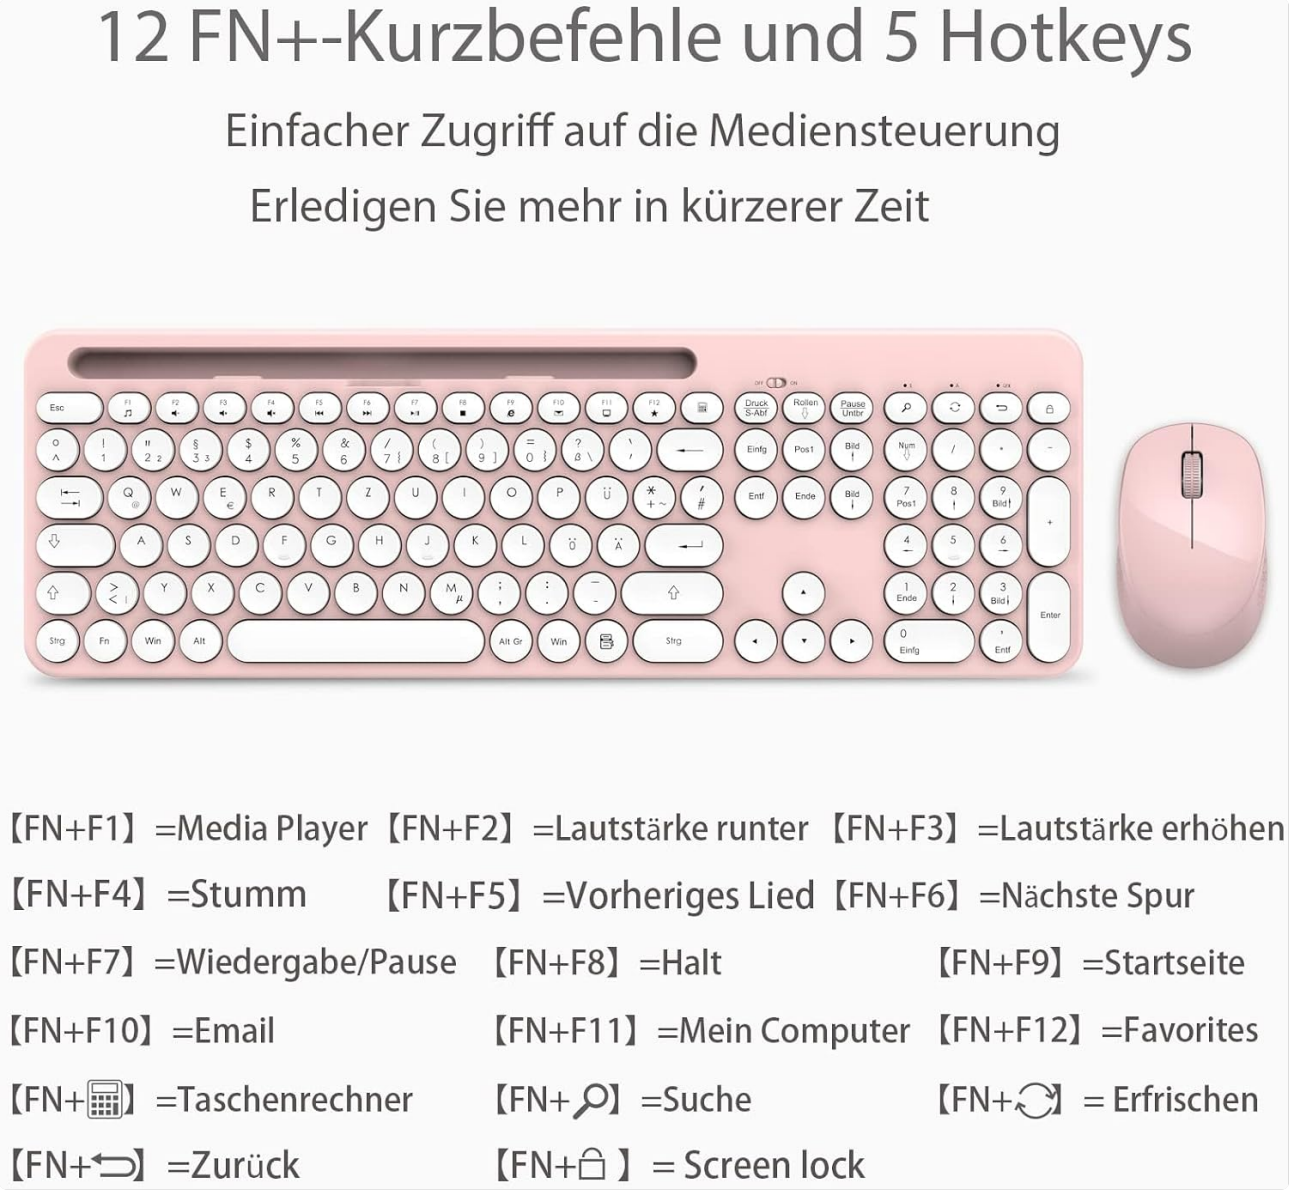


Image: A detailed view of the LeadsaiL K933 keyboard highlighting the 12 FN+ function keys and 5 hotkeys, with their corresponding actions listed in German.

4.3 Mouse Usage

The LeadsaiL mouse features silent click buttons, reducing click noise by 90%. This allows for a more focused work environment without disturbing others.



Image: A person using the LeadsaiL K933 silent click mouse with a computer, illustrating its quiet operation.

5. Maintenance

5.1 Power Saving Features

To conserve battery life, both the keyboard and mouse will automatically enter sleep mode after a period of inactivity:

- **Keyboard:** Enters deep sleep after 15 minutes of inactivity.
- **Mouse:** Enters automatic sleep after 5 seconds of inactivity.

To wake the devices, simply double-click any key on the keyboard or move/click the mouse.

5.2 Battery Life and Indicators

- **Expected Battery Life:** Up to 18 months for the keyboard and 12 months for the mouse. Actual battery life may vary based on usage and environmental conditions.
- **Low Battery Indicator:** When the keyboard's battery is low, the battery indicator light on the keyboard will start to flash. Replace the batteries promptly when this occurs.

5.3 Cleaning and Storage

- Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. Avoid using harsh chemicals or abrasive materials.
- When not in use for extended periods, turn off both devices using their ON/OFF switches to further conserve battery life.
- Store the USB receiver inside the mouse's battery compartment to prevent loss.

6. Troubleshooting

6.1 Connection Issues

- **No response from keyboard/mouse:**
  a. Ensure the USB receiver is securely plugged into a working USB port on your computer.
  b. Check if the keyboard and mouse are turned ON using their respective switches.
  c. Replace the batteries in both the keyboard and mouse if they are low or depleted.
  d. Try plugging the USB receiver into a different USB port.
- **Lag or intermittent connection:**
  a. Ensure the keyboard and mouse are within the 10-meter wireless range of the USB receiver.
  b. Minimize obstacles between the devices and the receiver, such as large metal objects.
  c. Avoid using the devices near other strong wireless interference sources (e.g., Wi-Fi routers, other wireless devices).

6.2 Keyboard Layout Issues

- **Incorrect characters appearing (e.g., Y instead of Z):**
  a. This keyboard features a **QWERTZ German layout**. If you are accustomed to a QWERTY (US/UK) or AZERTY (French) layout, some key positions will differ.
  b. Ensure your computer's operating system keyboard settings are configured for a QWERTZ German layout to match the physical keyboard. Refer to your operating system's documentation for instructions on changing keyboard input language.

7. Specifications

Feature	Detail
Brand	LeadsaiL
Model Number	K933
Connectivity Technology	2.4 GHz Wireless (USB Receiver)
Keyboard Layout	QWERTZ German

Feature	Detail
Number of Keys	110
Keyboard Description	Membrane, Full-size with Numeric Keypad
Mouse Detection Technology	Optical
Special Features	Ergonomic, Portable, Silent Click Mouse, Auto-Sleep, Low Battery Indicator, Integrated Phone/Tablet Holder
Compatible Operating Systems	Windows, MacOS, Linux, Chrome OS
Compatible Devices	ASUS, Dell, HP, HUAWEI, Lenovo (Laptops, PCs)
Keyboard Batteries	2 x AAA (not included)
Mouse Batteries	1 x AA (not included)
Wireless Range	Up to 10 meters (33 feet)
Item Weight	950 Grams (approx. for combo)
Country of Origin	China

8. Warranty and Support

LeadsaiL products are designed for reliability and performance. For specific warranty details, please refer to the warranty information provided with your product packaging or visit the official LeadsaiL website.
If you encounter any issues or have questions regarding your LeadsaiL K933 Wireless Ergonomic Keyboard and Mouse Combo, please contact LeadsaiL customer support through the retailer where you purchased the product or via the contact information available on the official LeadsaiL website.
Return Policy: This product is typically eligible for returns within 31 days of purchase, subject to the retailer's return policy.

© 2023 LeadsaiL. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09YN9TD59

More documents and user manuals: **https://manuals.plus/**