Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

XTREME DIGITAL LIFESTYLE ACCESSORIES MLB7-1097-RGB

Instruction Manual for XTREME DIGITAL LIFESTYLE ACCESSORIES Monster Sound-Reactive Multicolor LED Equalizer Light Bar

Brand: XTREME DIGITAL LIFESTYLE ACCESSORIES | Model: MLB7-1097-RGB

1. Introduction

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your XTREME DIGITAL LIFESTYLE ACCESSORIES Monster Sound-Reactive Multicolor LED Equalizer Light Bar. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Figure 1: The Monster Sound-Reactive Multicolor LED Equalizer Light Bar and its retail packaging.

2. Product Features

- **Customizable Color Lights:** Modify the light bar using built-in buttons or a downloadable app. Features 18 color modes, 8 'Equalizer' patterns, 4 brightness levels, and 5 speed settings.
- **Versatile Mounting:** The light bar can be positioned vertically using the included base or horizontally to suit your setup.
- **Sound-Reactive Displays:** Activate Music Mode to enable dynamic light displays that react to the rhythm and sound of music.
- **Rechargeable Battery:** Connect the included USB charging cable for up to 3-4 hours of continuous light on a full charge.

3. Package Contents

Ensure all items are present in the package:

- 1 x Monster Sound-Reactive Multicolor LED Equalizer Light Bar
- 1 x Vertical Mounting Base
- 1 x USB Charging Cable

4. Setup

4.1 Charging the Device

Before initial use, fully charge the light bar. Connect the included USB charging cable to the light bar's charging port and a compatible USB power source (e.g., computer USB port, USB wall adapter). The charging indicator will show the charging status.



Figure 2: Connecting the USB charging cable to the light bar.

4.2 Mounting Options

The light bar offers two versatile mounting options:

1. **Vertical Mounting:** Attach the light bar to the provided vertical base. Ensure it is securely seated. This is ideal for desktop setups or shelves.
2. **Horizontal Placement:** The light bar can be placed directly on a flat surface in a horizontal position without the base. This is suitable for placement under monitors or along entertainment centers.



Figure 3: Vertical and horizontal mounting options for the light bar.

4.3 App Connection (Optional)

For advanced customization, download the companion app from your device's app store. Enable Bluetooth on your smartphone or tablet and follow the in-app instructions to pair with the light bar. The app allows for more precise control over color modes, patterns, brightness, and speed settings.

5. Operating Instructions

5.1 Power On/Off

Press and hold the Power button located on the light bar for 3 seconds to turn the device on or off.

5.2 Mode Selection

Short press the Mode button to cycle through the 18 available color modes and 8 'Equalizer' patterns. Each press will advance to the next mode.

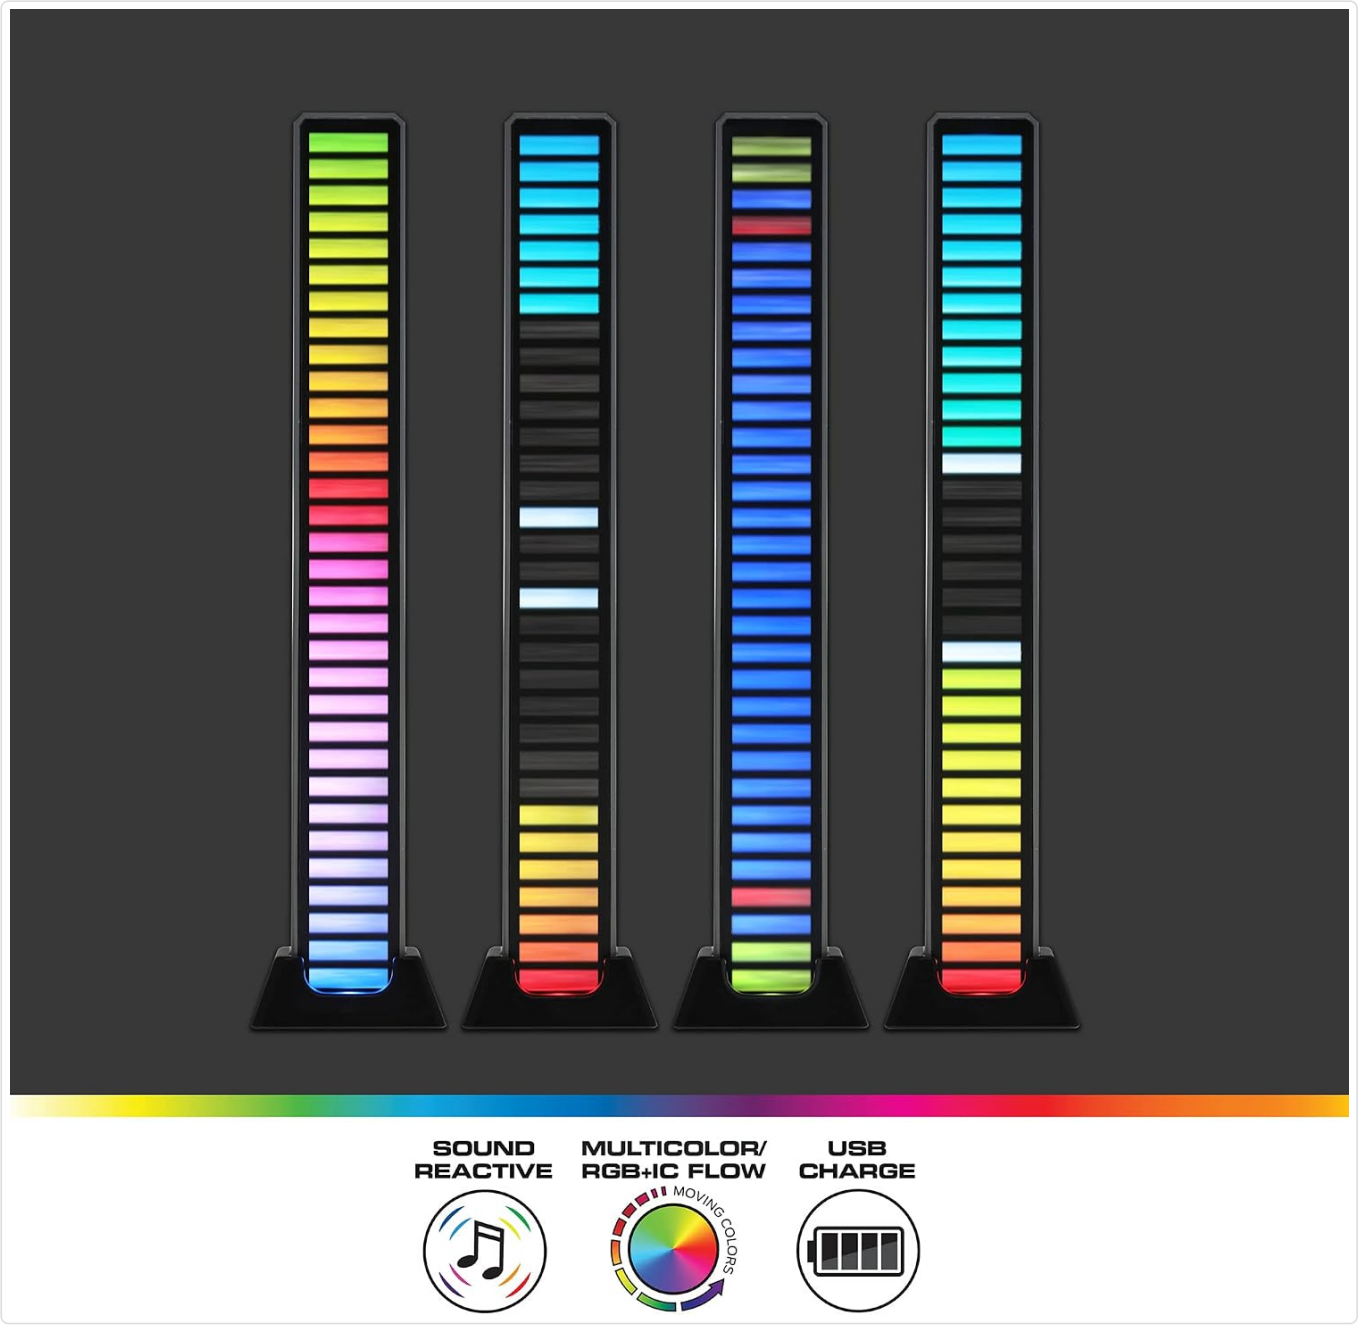


Figure 4: Examples of various multicolor patterns and equalizer displays.

5.3 Brightness Adjustment

Press the Brightness button to cycle through 4 different brightness levels. Select the level that best suits your environment.

5.4 Speed Adjustment

Press the Speed button to adjust the speed of the dynamic light patterns. There are 5 speed settings available.

5.5 Sound-Reactive Music Mode

To activate the sound-reactive feature, ensure the light bar is in Music Mode (refer to Mode Selection). The built-in microphone will detect ambient sounds and music, causing the lights to react dynamically. For optimal performance, place the light bar near the audio source.

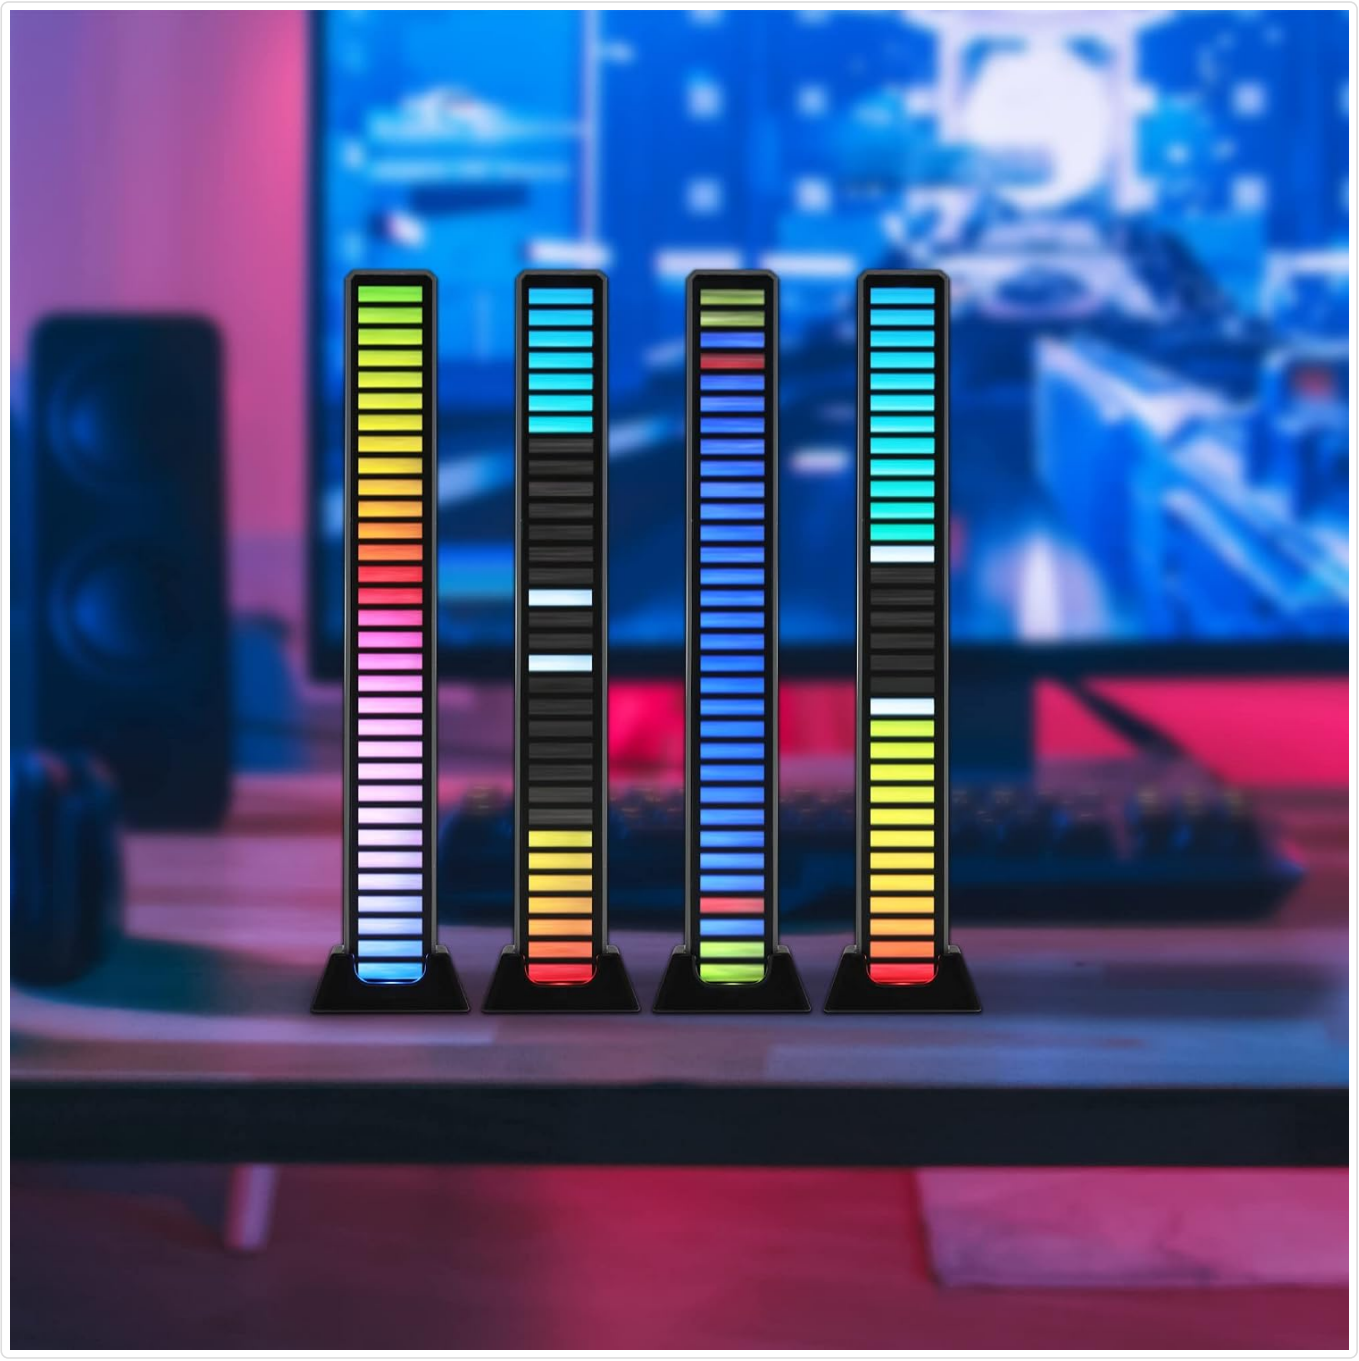


Figure 5: The light bar dynamically reacting to sound and music.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the surface of the light bar. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the light bar in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Recharge the battery regularly, even if not in active use.

7. Troubleshooting

Problem	Possible Cause	Solution
Light bar does not turn on.	Battery is depleted.	Charge the light bar using the provided USB cable.
Lights are dim.	Brightness setting is low. Battery is low.	Increase brightness using the Brightness button. Recharge the device.
Sound-reactive mode not working.	Not in Music Mode. Microphone obstructed or too far from sound source.	Ensure Music Mode is selected. Place the light bar closer to the audio source and ensure the microphone is clear.
Cannot connect to app.	Bluetooth is off. App not installed correctly.	Ensure Bluetooth is enabled on your device. Reinstall the app and try pairing again.

8. Specifications

Model Number: MLB7-1097-RGB

Power Source: Battery Powered (Rechargeable via USB)

Voltage: 5 Volts

Light Source Type: LED

Number of Light Sources: 300

Color: Multicolor

Material: Plastic

Item Weight: 0.25 Pounds (approx. 4 ounces)

Dimensions: 8.27 x 2.76 x 0.94 inches (Package)

Control Method: Push Button, App Control

Usage: Indoor

Special Feature: Sound-Reactive, Rechargeable

9. Warranty and Support

This product comes with a limited manufacturer's warranty. For detailed warranty information, product support, or technical assistance, please contact XTREME DIGITAL LIFESTYLE ACCESSORIES customer service through the retailer's platform or the official brand website. Please retain your proof of purchase for warranty claims.

© 2025 XTREME DIGITAL LIFESTYLE ACCESSORIES. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B1VSM1VV

More documents and user manuals: **https://manuals.plus/**